 
 



| Ref No | Part No | Description |
|--------|-----------------|-----------------------------|
| 01 | 5VK-E1101-00-00 | Cylinder Head Assy |
| 02 | 4G0-11133-11-00 | • . Guide, Valve 1 |
| 03 | 93440-10X00-00 | • . Circlip |
| 04 | 95617-08618-00 | Bolt, Stud |
| 05 | 5VK-11181-00-00 | Gasket, Cylinder Head 1 |
| 06 | 90105-09002-00 | Bolt, Flange |
| 07 | 90105-09004-00 | Bolt, Flange |
| 08 | 90105-09003-00 | Bolt, Flange |
| 09 | 91317-06030-00 | Bolt |
| 10 | 90201-096J9-00 | Washer, Plate |
| 11 | 94701-00X09-00 | Plug, Spark (ngk Cr7e) |
| 12 | 93612-16X00-00 | Pin, Dowel |
| 13 | 5VK-E1185-00-00 | Cover, Cylinder Head Side 1 |
| 14 | 93210-96X00-00 | O-ring |
| 15 | 90105-06X06-00 | Bolt, Flange |
| 16 | 90465-10044-00 | Clamp |
| 17 | 5VK-E1186-00-00 | Cover, Cylinder Head Side 2 |
| 18 | 93210-78X00-00 | O-ring |
| 19 | 91317-06018-00 | Bolt |

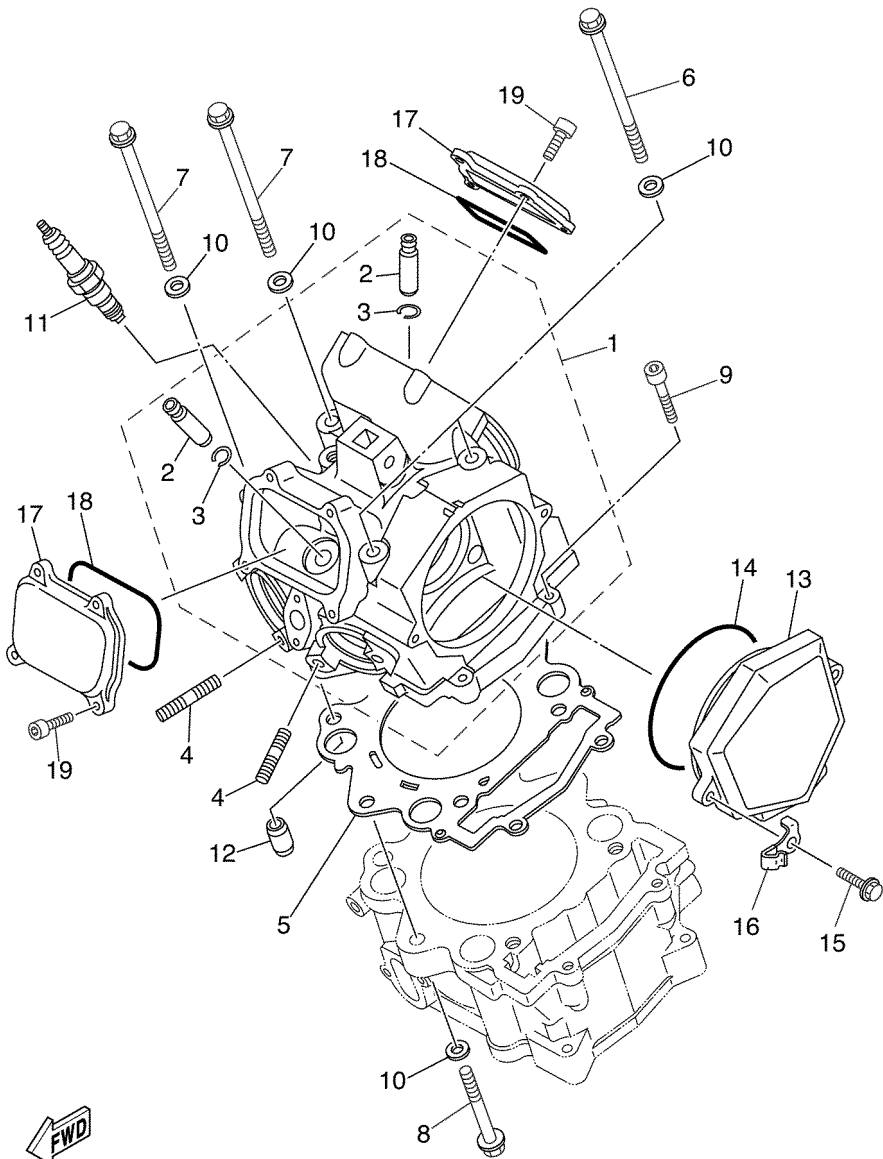

| Ref No | Part No | Description |
|--------|-----------------|------------------|
| 01 | 5VK-11311-00-00 | Cylinder 1 |
| 02 | 5VK-11351-00-00 | Gasket, Cylinder |
| 03 | 90105-10078-00 | Bolt, Flange |
| 04 | 90105-10077-00 | Bolt, Flange |
| 05 | 90201-101A4-00 | Washer, Plate |
| 06 | 91317-06040-00 | Bolt |
| 07 | 90465-10045-00 | Clamp |

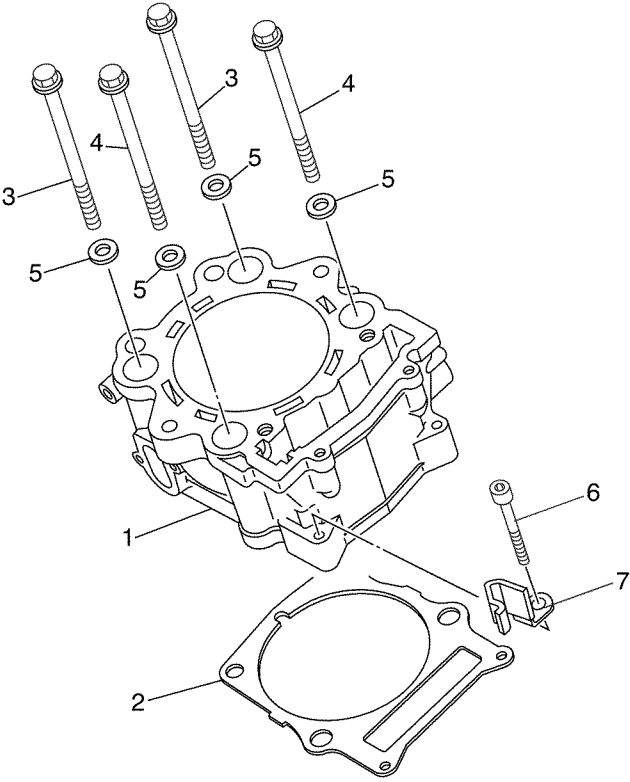

 5VK8300-F020

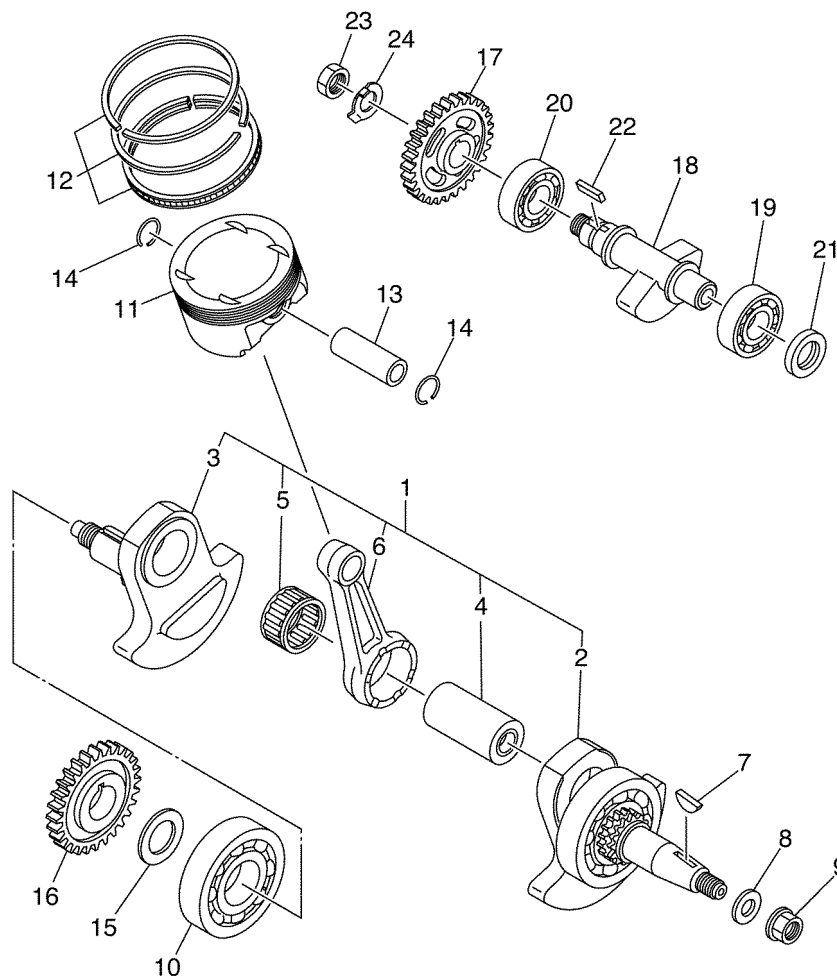


5VK1300-C030

| Ref No | Part No | Description |
|--------|-----------------|-----------------------|
| 01 | 5VK-11400-00-00 | Crankshaft Assy |
| 02 | 5VK-11401-09-00 | • Crank Sub Assy 1 |
| 03 | 5VK-11422-00-00 | • Crank 2 |
| 04 | 5VK-11681-00-00 | • Pin, Crank 1 |
| 05 | 93310-84010-00 | • Bearing |
| 06 | 5VK-11651-00-00 | • Rod, Connecting |
| 07 | 90280-05001-00 | Key, Woodruff |
| 08 | 90201-16013-00 | Washer, Plate |
| 09 | 90179-16448-00 | Nut |
| 10 | 93306-308Y0-00 | Bearing |
| 11 | 5VK-11631-00-00 | Piston (std) |
| 12 | 5VK-11603-00-00 | Piston Ring Set (std) |
| 13 | 5VK-11633-00-00 | Pin, Piston |
| 14 | 93450-24824-00 | Circlip |
| 15 | 90201-30X00-00 | Washer, Plate |
| 16 | 5VK-E1536-00-00 | Gear, Drive |
| 17 | 5VK-E1531-00-00 | Gear, Balance Weight |
| 18 | 5VK-11454-00-00 | Weight 1 |
| 19 | 93306-305YA-00 | Bearing |
| 20 | 93306-305X4-00 | Bearing |
| 21 | 93101-25106-00 | Oil Seal |
| 22 | 90282-05058-00 | Key, Straight |
| 23 | 90170-18003-00 | Nut |
| 24 | 90215-18X00-00 | Washer, Lock |


VALVE

| Ref No | Part No | Description |
|--------|-----------------|------------------------|
| 01 | 5VK-12111-00-00 | Valve, Intake |
| 02 | 5VK-12121-00-00 | Valve, Exhaust |
| 03 | 5VK-12113-00-00 | Spring, Valve Inner |
| 04 | 3YF-12116-00-00 | Seat, Valve Spring |
| 05 | 5H0-12119-00-00 | Seal, Valve Stem |
| 06 | 3YF-12117-01-00 | Retainer, Valve Spring |
| 07 | 4G0-12118-00-00 | Cotter, Valve |
| 08 | 5VK-12151-00-00 | Arm, Valve Rocker |
| 09 | 5VK-12161-00-00 | Arm, Valve Rocker 2 |
| 10 | 5VK-12146-00-00 | Shaft, Rocker |
| 11 | 5BP-12159-01-00 | Screw, Valve Adjusting |
| 12 | 90170-06128-00 | Nut |

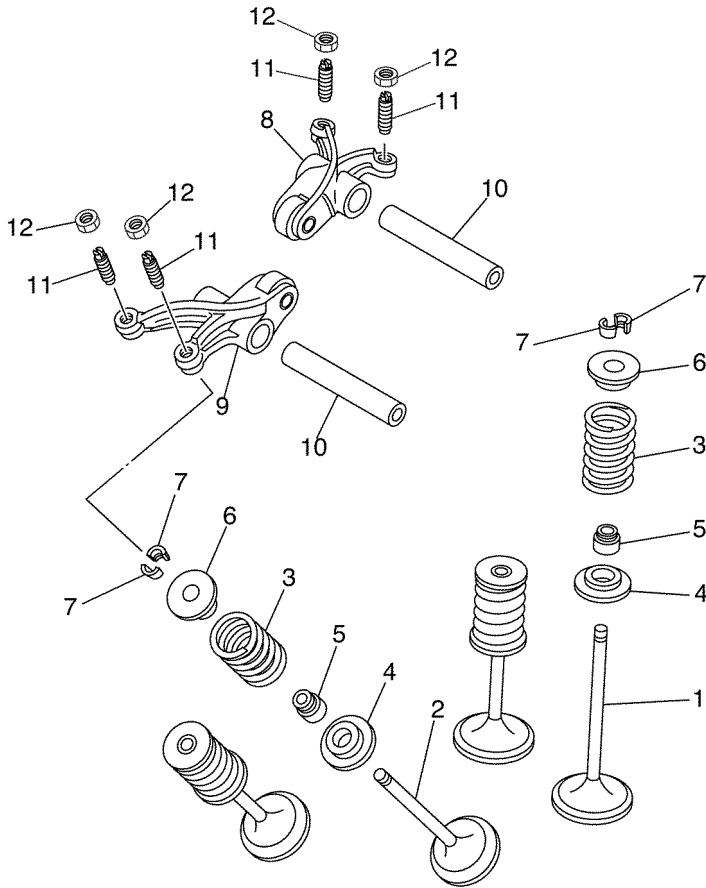 

5VK1300-C040


| Ref No | Part No | Description |
|--------|-----------------|-----------------------------|
| 01 | 5VK-E2170-10-00 | Camshaft Assy 1 |
| 02 | 93306-07209-00 | • . Bearing |
| 03 | 5VK-12284-00-00 | Pin, Decompression Lever |
| 04 | 5VK-12290-00-00 | Lever, Decompression Spring |
| 05 | 5VK-12280-00-00 | Decompression Assy |
| 06 | 5VK-E111F-00-00 | Plate |
| 07 | 95027-06012-00 | Bolt, Flange |
| 08 | 90105-07004-00 | Bolt, Flange |
| 09 | 94591-57126-00 | Chain (98xrh2010-126m) |
| 10 | 5VK-12231-00-00 | Guide, Stopper 1 |
| 11 | 5VK-12241-00-00 | Guide, Stopper 2 |
| 12 | 90119-06X05-00 | Bolt, With Washer |
| 13 | 3TB-12210-00-00 | Tensioner Assy, Cam Chain |
| 14 | 91317-06025-00 | Bolt |
| 15 | 4DW-12213-00-00 | Gasket, Tensioner Case |

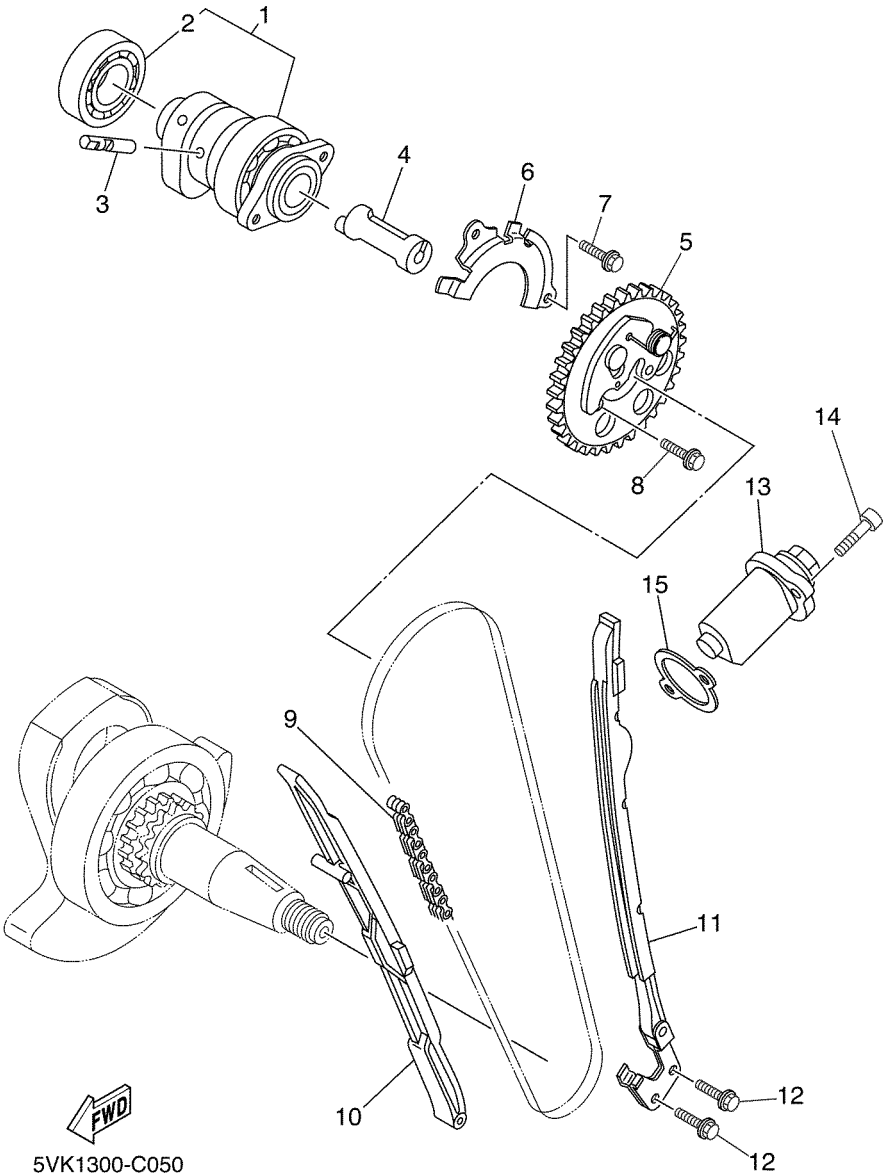 


5VK1300-C050

WATER PUMP

| Ref No | Part No | Description |
|--------|-----------------|-------------------------|
| 01 | 5VK-12436-00-00 | Gear, Drive |
| 02 | 5VK-12450-00-00 | Impeller Shaft Assy |
| 03 | 5VK-12422-00-00 | Cover, Housing |
| 04 | 93210-61750-00 | O-ring |
| 05 | 93306-00106-00 | Bearing |
| 06 | 5VK-12421-00-00 | Housing, Water Pump |
| 07 | 95027-06025-00 | Bolt, Flange |
| 08 | 93101-12173-00 | Oil Seal |
| 09 | 11H-12438-10-00 | Seal, Mechanical |
| 10 | 90201-12541-00 | Washer, Plate |
| 11 | 5VK-12428-00-00 | Gasket, Housing Cover 2 |
| 12 | 90430-06014-00 | Gasket |
| 13 | 93603-16219-00 | Pin, Dowel |
| 14 | 5VK-12459-00-00 | Gear, Impeller Shaft |
| 15 | 99009-12400-00 | Circlip |
| 16 | 5VK-E2469-00-00 | Joint 1 |
| 17 | 91317-06020-00 | Bolt |
| 18 | 93210-33X00-00 | O-ring |
| 19 | 5VK-12481-00-00 | Pipe 1 |
| 20 | 93210-21X00-00 | O-ring |
| 21 | 91317-06012-00 | Bolt |
| 22 | 5VK-E2577-00-00 | Hose 2 |
| 23 | 90450-31X00-00 | Hose Clamp Assy |
| 24 | 91317-06050-00 | Bolt |

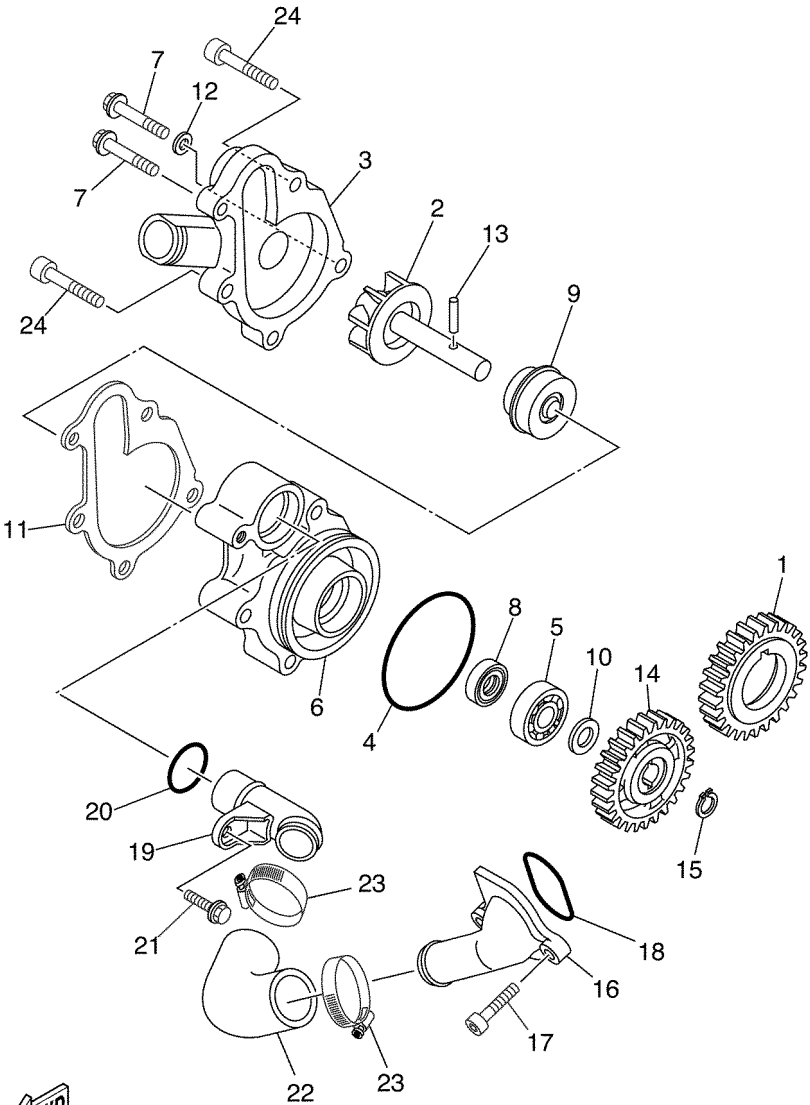 


5VK6300-E060

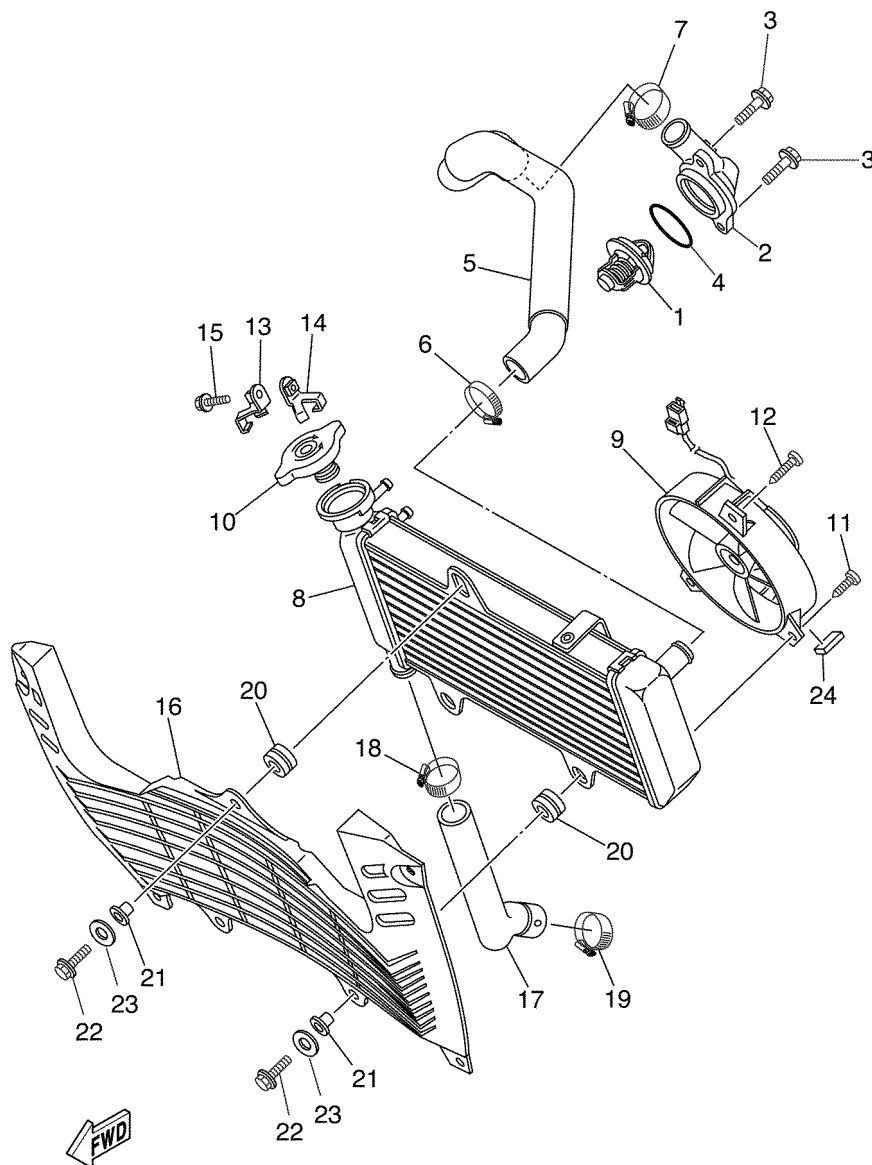 


5VK8300-F070

| Ref No | Part No | Description |
|--------|-----------------|--------------|
| 01 | 5VK-12410-00-00 | Thermostat A |
| 02 | 5VK-E2413-00-00 | Cover, Therm |
| 03 | 90105-06X06-00 | Bolt, Flange |
| 04 | 93210-41X00-00 | O-ring |
| 05 | 5VK-E2578-10-00 | Hose 3 |
| 06 | 90450-32X04-00 | Hose Clamp |
| 07 | 90450-32X04-00 | Hose Clamp |
| 08 | 5VK-E2461-00-00 | Radiator Ass |
| 09 | 5VK-E2405-00-00 | Blower Assy |
| 10 | 5VK-E2462-00-00 | Cap, Radiato |
| 11 | 90169-05802-00 | Tapping Scre |
| 12 | 90169-05801-00 | Tapping Scre |
| 13 | 5VK-E2437-00-00 | Stopper |
| 14 | 5VK-E2437-10-00 | Stopper |
| 15 | 95807-06010-00 | Bolt, Flange |
| 16 | 5VK-E2498-00-00 | Protector |
| 17 | 5VK-E2579-10-00 | Hose 4 |
| 18 | 90450-32X04-00 | Hose Clamp |
| 19 | 90450-32X04-00 | Hose Clamp |
| 20 | 90480-18276-00 | Grommet |
| 21 | 90387-06042-00 | Collar |
| 22 | 97007-06025-00 | Bolt |
| 23 | 92907-06600-00 | Washer, Plat |
| 24 | 1FK-84527-00-00 | Damper |

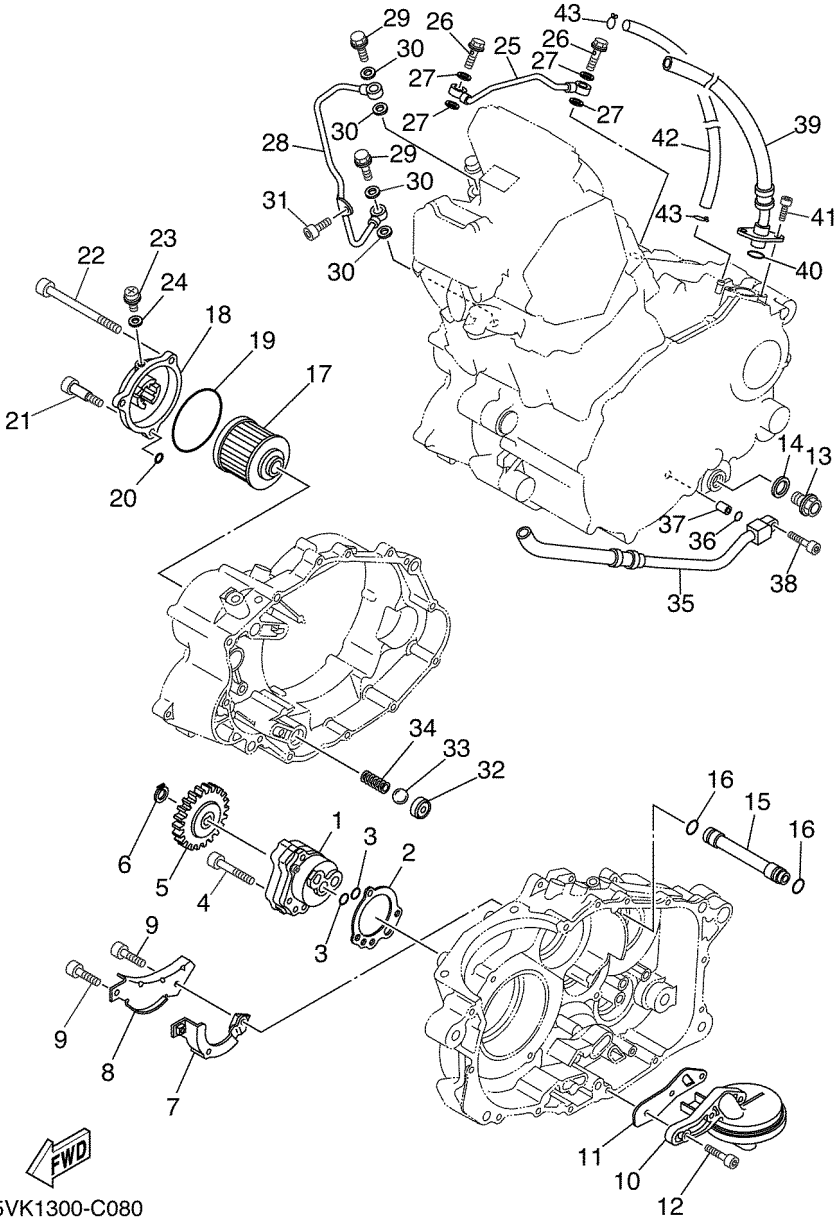 


| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 5LP-13300-00-00 | Oil Pump Assy |
| 02 | 5LP-13329-00-00 | Gasket, Pump Cover |
| 03 | 93210-13X00-00 | O-ring |
| 04 | 92017-06035-00 | Bolt, Button Head |
| 05 | 3AJ-13325-00-00 | Gear, Pump Driven |
| 06 | 99009-11400-00 | Circlip |
| 07 | 5VK-E3356-00-00 | Cover, Pump 2 |
| 08 | 5VK-E3327-00-00 | Cover, Pump Gear |
| 09 | 91317-05008-00 | Bolt |
| 10 | 5VK-WE343-00-00 | Strainer Comp. |
| 11 | 5VK-E3415-00-00 | Seal, Oil Strainer |
| 12 | 91317-06020-00 | Bolt |
| 13 | 90340-14132-00 | Plug, Straight Screw |
| 14 | 214-11198-01-00 | Gasket |
| 15 | 5VK-E3181-00-00 | Pipe, Delivery 3 |
| 16 | 93210-11X00-00 | O-ring |
| 17 | 4X7-13440-01-00 | Element Assy, Oil Cleaner |
| 18 | 2WK-13447-00-00 | Cover, Oil Element |
| 19 | 93210-64X01-00 | O-ring |
| 20 | 93210-07X01-00 | O-ring |
| 21 | 90109-06419-00 | Bolt |
| 22 | 91317-06095-00 | Bolt |
| 23 | 90149-05110-00 | Screw |
| 24 | 90430-05X00-00 | Gasket |
| 25 | 5VK-13161-00-00 | Pipe, Delivery 1 |
| 26 | 90401-08133-00 | Bolt, Union |
| 27 | 90430-08X01-00 | Gasket |
| 28 | 5VK-13171-00-00 | Pipe, Delivery 2 |
| 29 | 90401-10096-00 | Bolt, Union |
| 30 | 90430-10X00-00 | Gasket |
| 31 | 91317-06012-00 | Bolt |
| 32 | 583-13113-00-00 | Seat, Check Ball |
| 33 | 93503-08007-00 | Ball |
| 34 | 90501-04X01-00 | Spring, Compression |
| 35 | 5VK-13464-00-00 | Hose, Oil 1 |
| 36 | 93210-10X00-00 | O-ring |
| 37 | 91810-14X00-00 | Pin, Dowel |
| 38 | 91317-06025-00 | Bolt |
| 39 | 5VK-13465-00-00 | Hose, Oil 2 |
| 40 | 93210-15X00-00 | O-ring |
| 41 | 91317-06016-00 | Bolt |
| 42 | 90445-11033-00 | Hose |
| 43 | 90467-10008-00 | Clip |

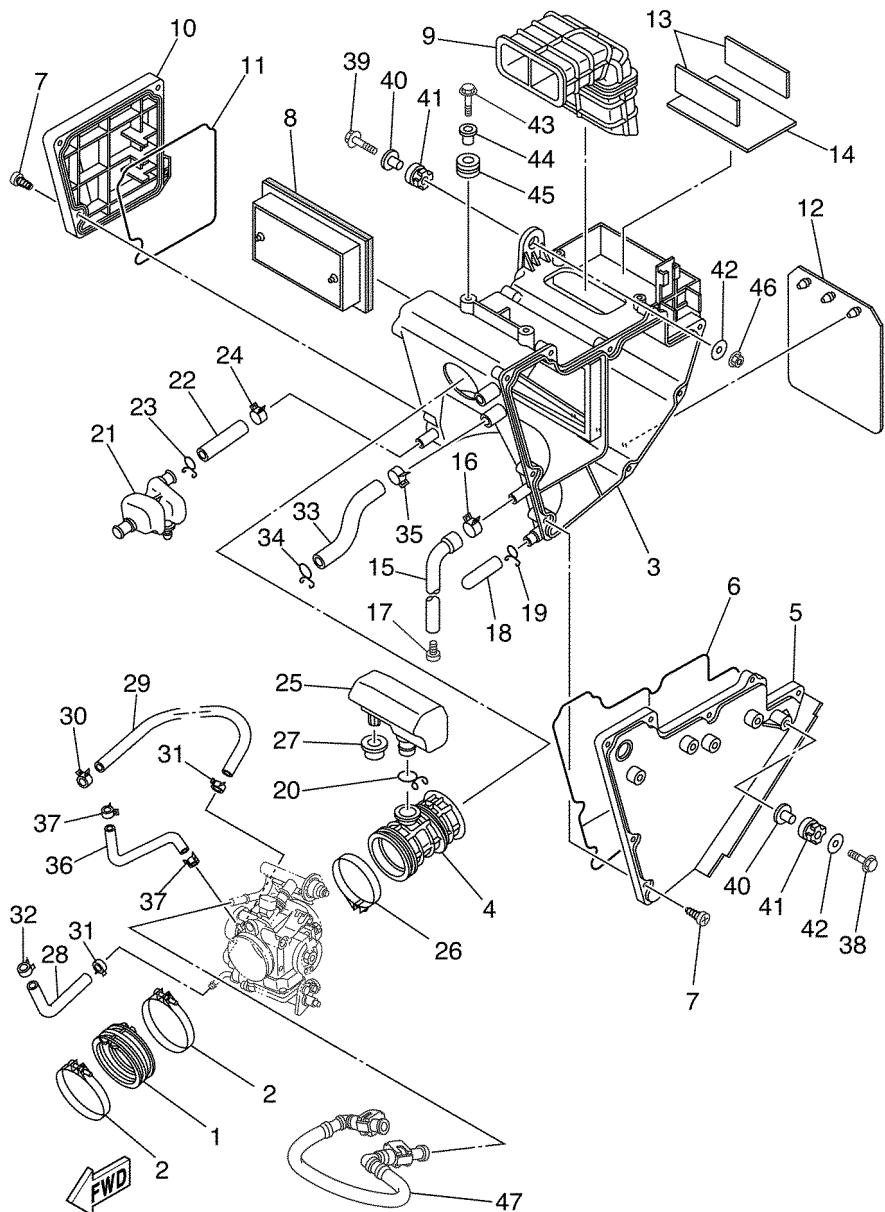 


5VK1300-C090

| Ref No | Part No | Description |
|--------|-----------------|------------------------|
| 01 | 5VK-13586-00-00 | Joint, Carburetor 1 |
| 02 | 90450-72001-00 | Hose Clamp Assy |
| 03 | 5VK-E4411-00-00 | Case, Air Cleaner 1 |
| 04 | 5VK-E4453-00-00 | Joint, Air Cleaner 1 |
| 05 | 5VK-E441A-00-00 | Cover, Cleaner Case 1 |
| 06 | 5VK-E4452-00-00 | Seal |
| 07 | 9770M-50025-00 | Screw, Tapping |
| 08 | 5VK-E4451-00-00 | Element, Air Cleaner |
| 09 | 5VK-E4437-00-00 | Duct |
| 10 | 5VK-E441E-00-00 | Cover, Cleaner Case 2 |
| 11 | 5VK-E4457-00-00 | Seal |
| 12 | 5VK-F1621-00-00 | Flap |
| 13 | 5VK-H2121-00-00 | Pad, Battery |
| 14 | 5VK-H2122-00-00 | Seat, Battery |
| 15 | 5VK-E443E-00-00 | Pipe, Drain |
| 16 | 90467-13062-00 | Clip |
| 17 | 90338-08801-00 | Plug |
| 18 | 5LW-E443E-00-00 | Pipe, Drain |
| 19 | 90467-12800-00 | Clip |
| 20 | 90467-23800-00 | Clip |
| 21 | 5VK-E5371-00-00 | Breather |
| 22 | 5VK-E1167-00-00 | Pipe, Breather 2 |
| 23 | 90467-14800-00 | Clip |
| 24 | 90467-17801-00 | Clip |
| 25 | 5VK-E3591-00-00 | Chamber, Air 2 |
| 26 | 90450-59001-00 | Hose Clamp Assy |
| 27 | 90480-20566-00 | Grommet |
| 28 | 5VK-E243A-10-00 | Hose 1 |
| 29 | 90445-12004-00 | Hose |
| 30 | 90467-11090-00 | Clip |
| 31 | 90467-11108-00 | Clip |
| 32 | 90467-11108-00 | Clip |
| 33 | 5VK-E3545-00-00 | Hose 1 |
| 34 | 90467-170A2-00 | Clip |
| 35 | 90467-17128-00 | Clip |
| 36 | 5VK-13542-00-00 | Hose, Vacuum Sensing 1 |
| 37 | 90467-07138-00 | Clip |
| 38 | 95827-06025-00 | Bolt, Flange |
| 39 | 95827-06030-00 | Bolt, Flange |
| 40 | 90387-075H4-00 | Collar |
| 41 | 90480-15001-00 | Grommet |
| 42 | 90201-064K6-00 | Washer, Plate |
| 43 | 95827-06020-00 | Bolt, Flange |
| 44 | 90387-07037-00 | Collar |
| 45 | 90480-18276-00 | Grommet |
| 46 | 95704-06500-00 | Nut, Flange |
| 47 | 5VK-13971-00-00 | Pipe, Fuel 1 |

| Ref No | Part No | Description |
|--------|-----------------|----------------------------|
| 01 | 5VK-13750-10-00 | Throttle Body Assy |
| 02 | 5VK-13160-00-00 | • . Delivery Pipe Assy 1 |
| 03 | 90430-09002-00 | • . Gasket |
| 04 | 98507-06012-00 | • . Screw, Pan Head |
| 05 | 8CC-14216-10-00 | • . Screw |
| 06 | 5VK-14503-00-00 | • . Adjust Screw Set |
| 07 | 5VK-14531-00-00 | •• .. Spring, Adjust Screw |
| 08 | 5VK-13761-00-00 | • . Injector Assy |
| 09 | 558-14147-00-00 | •• .. O-ring |
| 10 | 5PS-85885-01-00 | • . Throttle Sensor Assy |

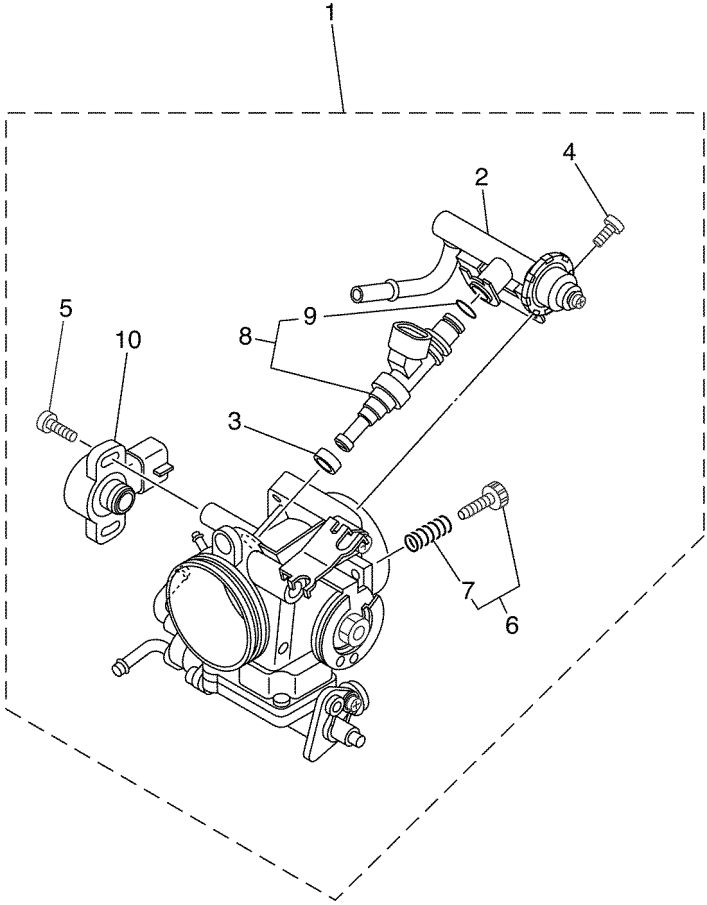 


5VK1300-C100

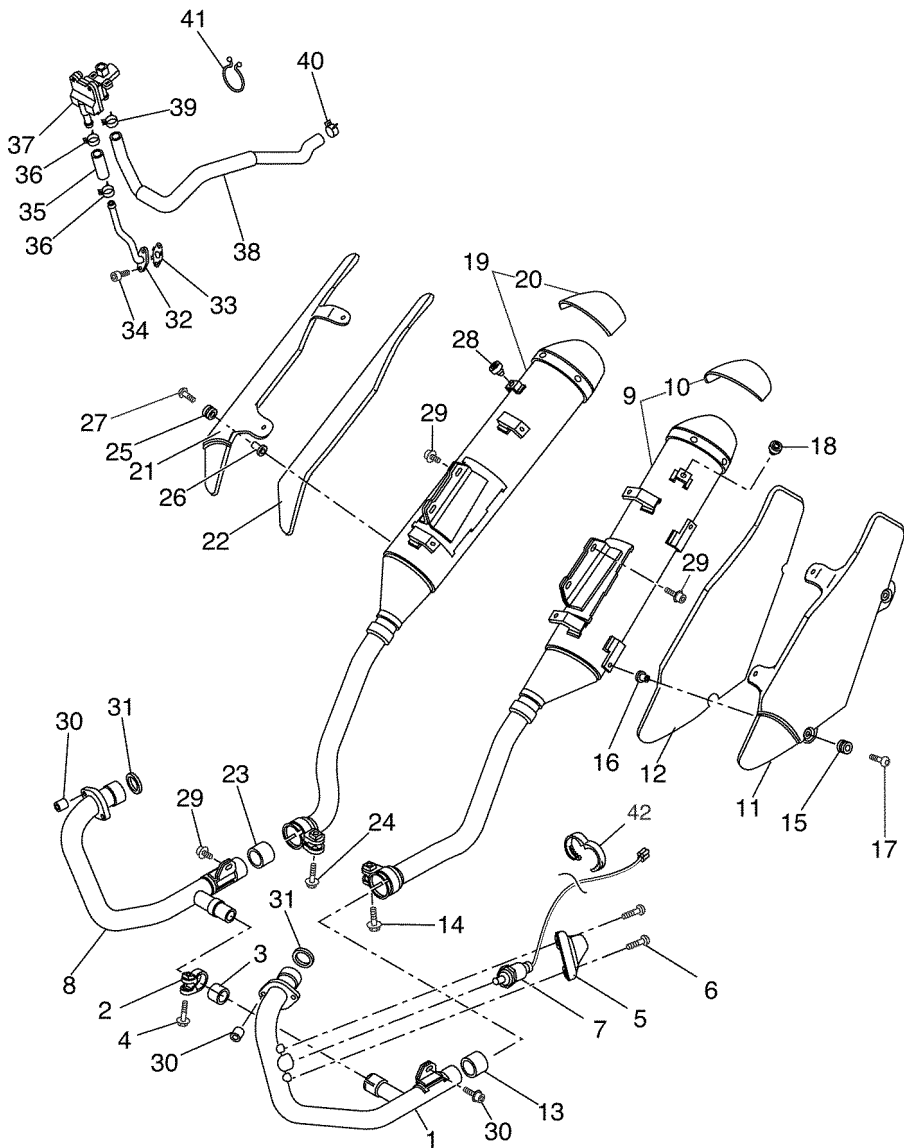 


5VK8300-F110


| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 5VK-E4611-10-00 | Pipe, Exhaust 1 |
| 02 | 5JX-14725-00-00 | Band, Muffler |
| 03 | 4FU-14714-00-00 | Gasket, Muffler |
| 04 | 95814-08035-00 | Bolt, Flange |
| 05 | 5VK-E4628-00-00 | Protector, Exhaust Pipe |
| 06 | 90111-06060-00 | Bolt,hex. Socket Button |
| 07 | 1B9-8592A-00-00 | Sensor |
| 08 | 5VK-E4621-00-00 | Pipe, Exhaust 2 |
| 09 | 5VK-E4711-10-00 | Muffler 1 |
| 10 | 5VK-W1473-20-00 | • . Protector, Muffler 1 |
| 11 | 5VK-E4728-20-00 | Protector, Muffler 2 |
| 12 | 5VK-E4747-00-00 | Damper, Muffler |
| 13 | 4EL-14714-00-00 | Gasket, Muffler |
| 14 | 95024-08040-00 | Bolt, Flange |
| 15 | 90480-12581-00 | Grommet |
| 16 | 90387-06023-00 | Collar |
| 17 | 90149-06280-00 | Screw |
| 18 | 22W-24181-00-00 | Damper, Locating 1 |
| 19 | 5VK-E4721-10-00 | Muffler 2 |
| 20 | 5VK-W1473-20-00 | • . Protector, Muffler 1 |
| 21 | 5VK-E4748-20-00 | Protector, Muffler 4 |
| 22 | 5VK-E4757-00-00 | Damper, Muffler 2 |
| 23 | 4EL-14714-00-00 | Gasket, Muffler |
| 24 | 95024-08040-00 | Bolt, Flange |
| 25 | 90480-12581-00 | Grommet |
| 26 | 90387-06023-00 | Collar |
| 27 | 90149-06280-00 | Screw |
| 28 | 22W-24181-00-00 | Damper, Locating 1 |
| 29 | 90109-085E2-00 | Bolt |
| 30 | 90179-08442-00 | Nut |
| 31 | 3YF-14613-01-00 | Gasket, Exhaust Pipe |
| 32 | 5VK-14871-02-00 | Pipe 1 |
| 33 | 5VK-14815-00-00 | Gasket |
| 34 | 91380-06016-00 | Bolt |
| 35 | 5VK-14881-00-00 | Hose, Bend 1 |
| 36 | 90467-17089-00 | Clip |
| 37 | 5VK-14803-00-00 | Air Induction System Assy |
| 38 | 5VK-E4882-00-00 | Hose, Bend 2 |
| 39 | 90467-17089-00 | Clip |
| 40 | 90467-170A0-00 | Clip |
| 41 | 90464-37257-00 | Clamp |
| 42 | 90464-16001-00 | Clamp |

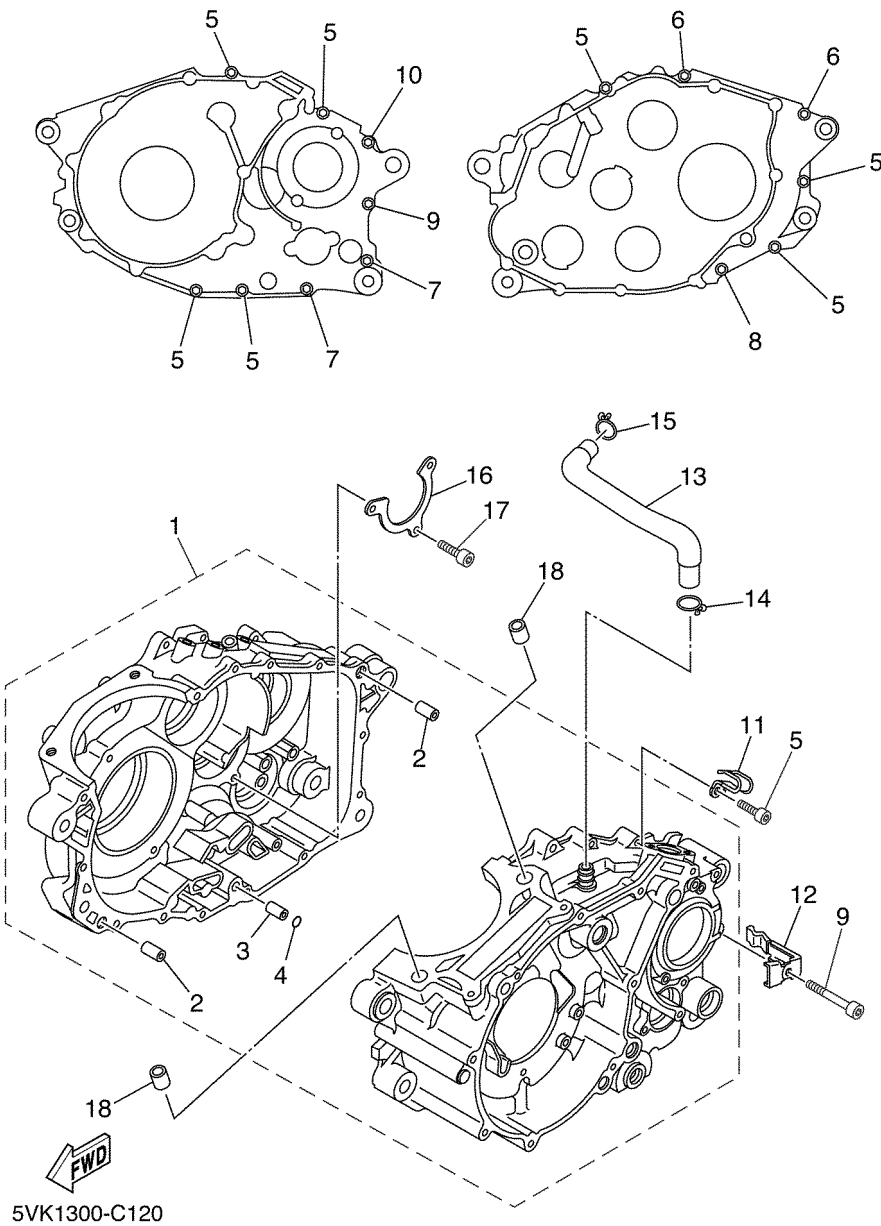 


| Ref No | Part No | Description |
|--------|-----------------|----------------------|
| 01 | 5VK-E5100-00-00 | Crankcase Assy |
| 02 | 99530-12016-00 | • . Pin, Dowel |
| 03 | 91808-16X00-00 | • . Pin, Dowel |
| 04 | 93210-07X01-00 | • . O-ring |
| 05 | 91317-06030-00 | Bolt |
| 06 | 91317-06045-00 | Bolt |
| 07 | 91317-06055-00 | Bolt |
| 08 | 91317-06060-00 | Bolt |
| 09 | 91317-06080-00 | Bolt |
| 10 | 91317-06090-00 | Bolt |
| 11 | 90462-07X00-00 | Clamp |
| 12 | 90465-12013-00 | Clamp |
| 13 | 5VK-11166-00-00 | Pipe, Breather 1 |
| 14 | 90467-14015-00 | Clip |
| 15 | 90467-14015-00 | Clip |
| 16 | 5VK-E5383-00-00 | Plate, Bearing Cover |
| 17 | 91317-06016-00 | Bolt |
| 18 | 99530-14016-00 | Pin, Dowel |

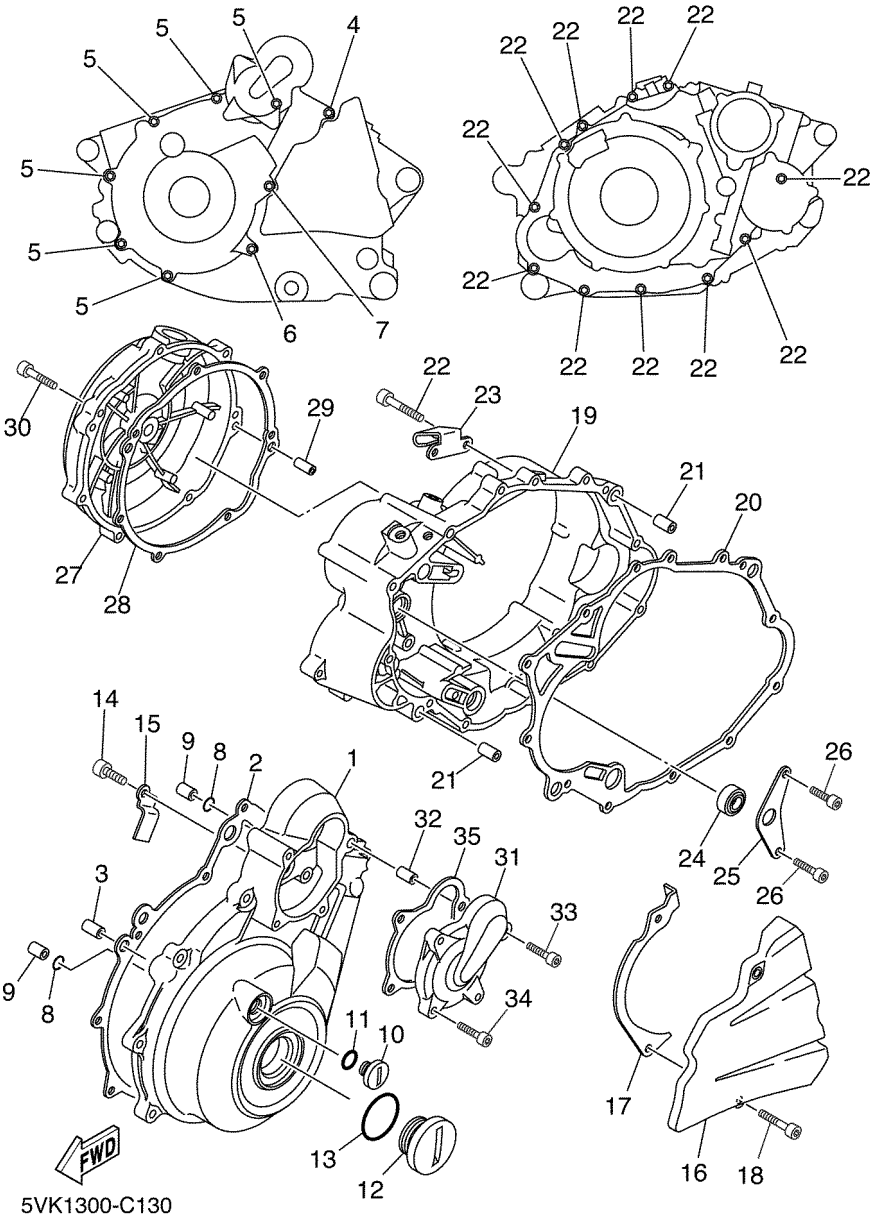 

| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 5VK-WE541-00-00 | Crankcase Cover Assy 1 |
| 02 | 5VK-E5451-00-00 | Gasket, Crankcase Cover 1 |
| 03 | 99530-12016-00 | Pin, Dowel |
| 04 | 91317-06035-00 | Bolt |
| 05 | 91317-06025-00 | Bolt |
| 06 | 91317-06050-00 | Bolt |
| 07 | 91317-06050-00 | Bolt |
| 08 | 93210-13X00-00 | O-ring |
| 09 | 99530-12016-00 | Pin, Dowel |
| 10 | 90340-14X00-00 | Plug, Straight Screw |
| 11 | 93210-14X00-00 | O-ring |
| 12 | 90340-36X00-00 | Plug, Straight Screw |
| 13 | 93210-35X00-00 | O-ring |
| 14 | 91317-06012-00 | Bolt |
| 15 | 90462-16X00-00 | Clamp |
| 16 | 5VK-E5421-00-00 | Cover, Crankcase 2 |
| 17 | 5VK-E7466-00-00 | Guide, Chain |
| 18 | 91317-06025-00 | Bolt |
| 19 | 5VK-E5431-00-00 | Cover, Crankcase 3 |
| 20 | 5VK-E5462-00-00 | Gasket, Crankcase Cover 3 |
| 21 | 99530-12016-00 | Pin, Dowel |
| 22 | 91317-06030-00 | Bolt |
| 23 | 5VK-E5441-00-00 | Holder, Clutch Cable |
| 24 | 93101-14164-00 | Oil Seal |
| 25 | 5VK-E5118-00-00 | Holder |
| 26 | 91317-06012-00 | Bolt |
| 27 | 5VK-E5416-00-00 | Cover, Oil Pump |
| 28 | 5VK-E5453-00-00 | Gasket |
| 29 | 91808-16X00-00 | Pin, Dowel |
| 30 | 90105-06X20-00 | Bolt, Flange |
| 31 | 5VK-WE544-00-00 | Generator Cover Assy |
| 32 | 91808-16X00-00 | Pin, Dowel |
| 33 | 91317-06035-00 | Bolt |
| 34 | 91317-06025-00 | Bolt |
| 35 | 5VK-15455-00-00 | Gasket 1 |

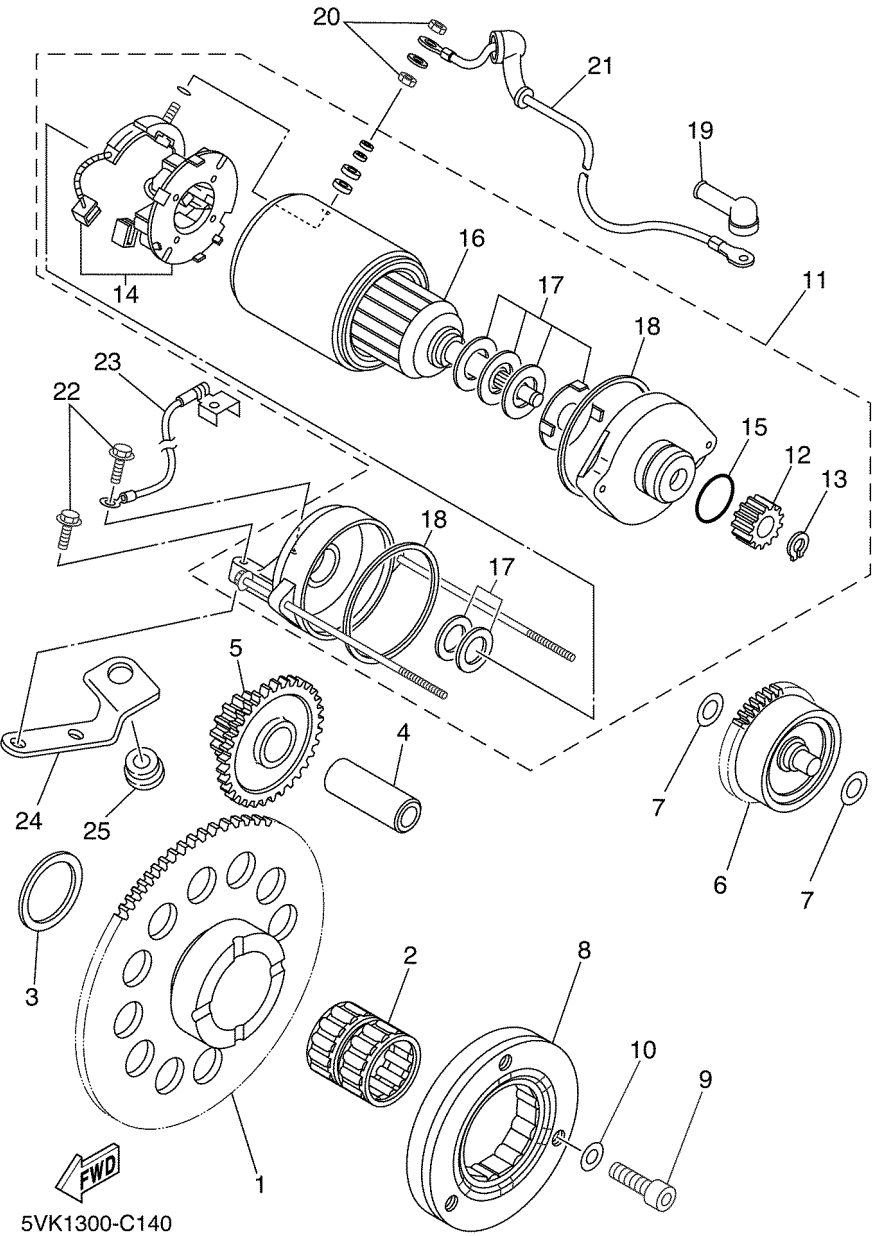 


| Ref No | Part No | Description |
|--------|-----------------|--------------------------|
| 01 | 3YF-15515-00-00 | Gear 3 |
| 02 | 93310-530C7-00 | Bearing |
| 03 | 90201-30X01-00 | Washer, Plate |
| 04 | 5VK-E5522-00-00 | Shaft 2 |
| 05 | 5VK-15517-00-00 | Gear, Idler 2 |
| 06 | 5VK-E5560-00-00 | Damper Assy |
| 07 | 90201-10X18-00 | Washer, Plate |
| 08 | 5VK-15590-00-00 | Starter One-way Assy |
| 09 | 91317-08025-00 | Bolt |
| 10 | 90201-08X18-00 | Washer, Plate |
| 11 | 3SX-81890-00-00 | Motor Assy |
| 12 | 1VJ-15511-00-00 | • . Gear, Starting Motor |
| 13 | 93440-11024-00 | • . Circlip |
| 14 | 3AJ-81801-00-00 | • . Brush Set |
| 15 | 1FK-81847-00-00 | • . O-ring |
| 16 | 3AJ-81850-00-00 | • . Armature Assy |
| 17 | 3AJ-81809-00-00 | • . Washer Kit |
| 18 | 11H-81844-00-00 | • . Gasket |
| 19 | 4G0-81871-00-00 | Cap |
| 20 | 4XV-8182A-00-00 | Nut |
| 21 | 5VK-81815-00-00 | Cord, Starter Motor |
| 22 | 95817-06035-00 | Bolt, Flange |
| 23 | 5VK-H2116-00-00 | Wire, Minus Lead |
| 24 | 5VK-E5199-00-00 | Bracket |
| 25 | 90480-13398-00 | Grommet |

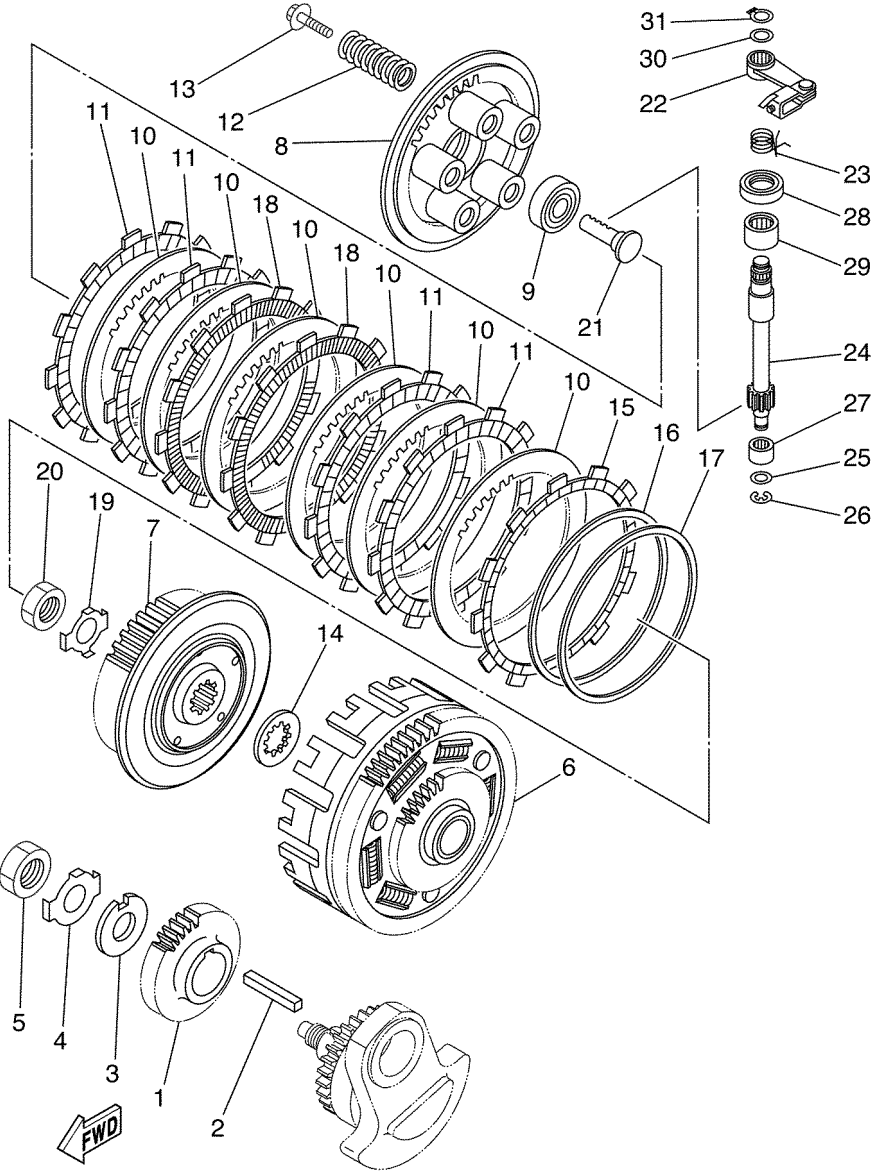 


| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 5VK-16111-00-00 | Gear, Primary Drive |
| 02 | 90282-07001-00 | Key, Straight |
| 03 | 90209-20012-00 | Washer |
| 04 | 90215-20X00-00 | Washer, Lock |
| 05 | 90170-20274-00 | Nut |
| 06 | 5VK-16150-00-00 | Primary Driven Gear Comp. |
| 07 | 5VK-16371-00-00 | Boss, Clutch |
| 08 | 5VK-16351-00-00 | Plate, Pressure 1 |
| 09 | 93306-00304-00 | Bearing |
| 10 | 4X7-16325-00-00 | Plate, Clutch 2 |
| 11 | 22U-16321-00-00 | Plate, Friction |
| 12 | 90501-260A1-00 | Spring, Compression |
| 13 | 90119-06105-00 | Bolt, With Washer |
| 14 | 2JN-16154-00-00 | Plate, Thrust 1 |
| 15 | 5VK-16331-00-00 | Plate, Friction 2 |
| 16 | 5JG-16383-00-00 | Spring, Clutch Boss |
| 17 | 5JG-16384-00-00 | Plate, Seat |
| 18 | 5TA-16321-00-00 | Plate, Friction |
| 19 | 90215-20X01-00 | Washer, Lock |
| 20 | 90170-20327-00 | Nut |
| 21 | 4XV-16356-01-00 | Rod, Push 1 |
| 22 | 5VK-16340-00-00 | Push Lever Assy |
| 23 | 90508-16X00-00 | Spring, Torsion |
| 24 | 5VK-E6382-00-00 | Axle, Push Lever |
| 25 | 90201-08X19-00 | Washer, Plate |
| 26 | 99001-07600-00 | Circlip |
| 27 | 93317-11020-00 | Bearing |
| 28 | 93102-15212-00 | Oil Seal |
| 29 | 93315-31502-00 | Bearing |
| 30 | 90201-10X17-00 | Washer, Plate |
| 31 | 99009-10400-00 | Circlip |

TRANSMISSION

| Ref No | Part No | Description |
|--------|-----------------|------------------|
| 01 | 5VK-E7401-00-00 | Main Axle Assy |
| 02 | 5VK-E7141-00-00 | Gear, 4th Pinion |
| 02 | 5VK-E7141-10-00 | Gear, 4th Pinion |
| 03 | 90209-21X00-00 | Washer |
| 04 | 93440-25084-00 | Circlip |
| 05 | 5VK-E7131-00-00 | Gear, 3rd Pinion |
| 06 | 5VK-E7151-00-00 | Gear, 5th Pinion |
| 06 | 5VK-E7151-10-00 | Gear, 5th Pinion |
| 07 | 90387-21002-00 | Collar |
| 08 | 90209-22X00-00 | Washer |
| 09 | 90209-21351-00 | Washer |
| 10 | 5VK-E7121-00-00 | Gear, 2nd Pinion |
| 11 | 93306-205XA-00 | Bearing |
| 12 | 93306-004XL-00 | Bearing |
| 13 | 5VK-E7402-00-00 | Drive Axle Assy |
| 14 | 5VK-E7221-00-00 | Gear, 2nd Wheel |
| 15 | 90209-26348-00 | Washer |
| 16 | 93440-28062-00 | Circlip |
| 17 | 5VK-E7251-00-00 | Gear, 5th Wheel |
| 18 | 5VK-E7231-00-00 | Gear, 3rd Wheel |
| 19 | 90209-21X00-00 | Washer |
| 20 | 93440-25084-00 | Circlip |
| 21 | 5VK-E7241-00-00 | Gear, 4th Wheel |
| 22 | 5VK-E7211-00-00 | Gear, 1st Wheel |
| 23 | 90201-208G4-00 | Washer, Plate |
| 24 | 93410-20825-00 | Circlip |
| 25 | 93306-305X4-00 | Bearing |
| 26 | 90387-25802-00 | Collar |
| 27 | 93210-22X00-00 | O-ring |
| 28 | 93102-35368-00 | Oil Seal |
| 29 | 5VK-E7471-00-00 | Plate, Cover |
| 30 | 90101-06X26-00 | Bolt |
| 31 | 93306-004XM-00 | Bearing |
| 32 | 5VK-E7460-10-00 | Sprocket, Drive |
| 33 | 90215-21X00-00 | Washer, Lock |
| 34 | 90179-18003-00 | Nut |

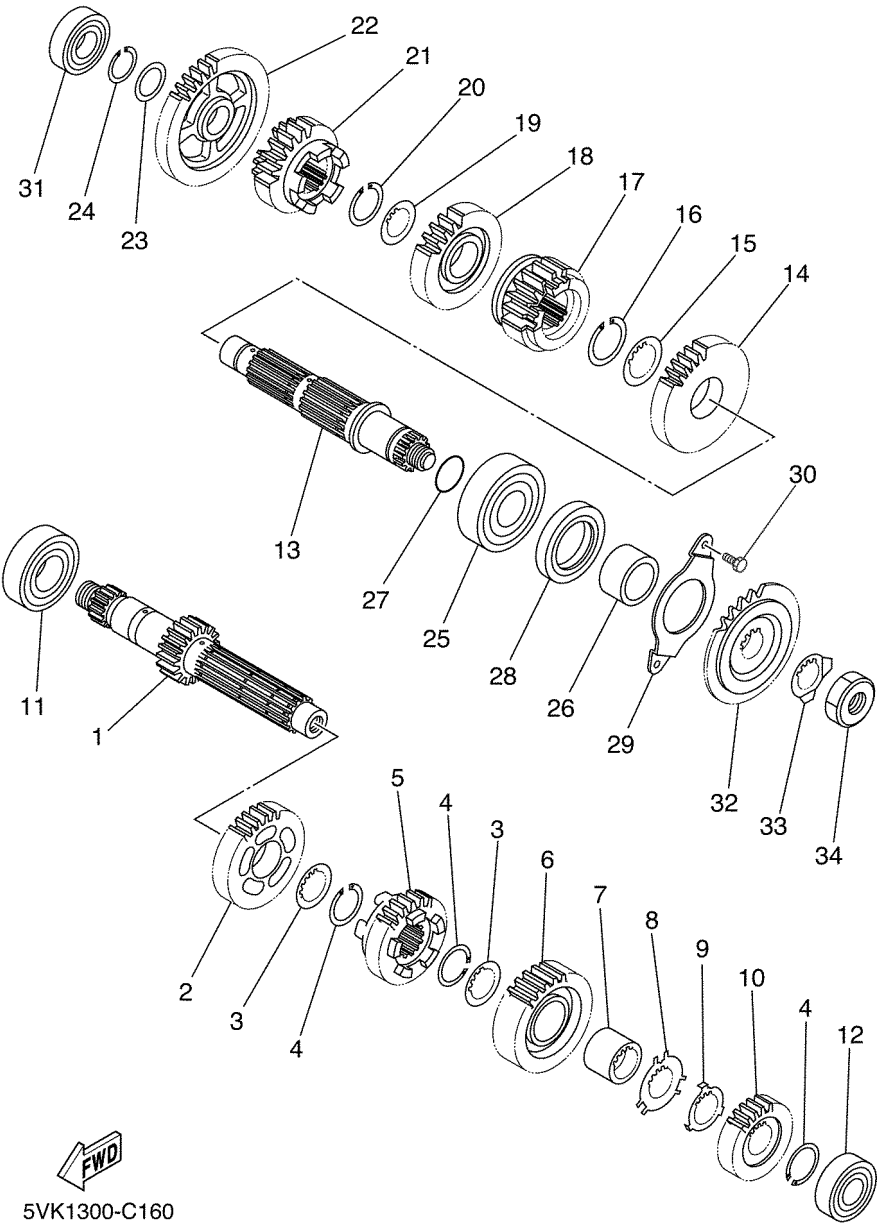 


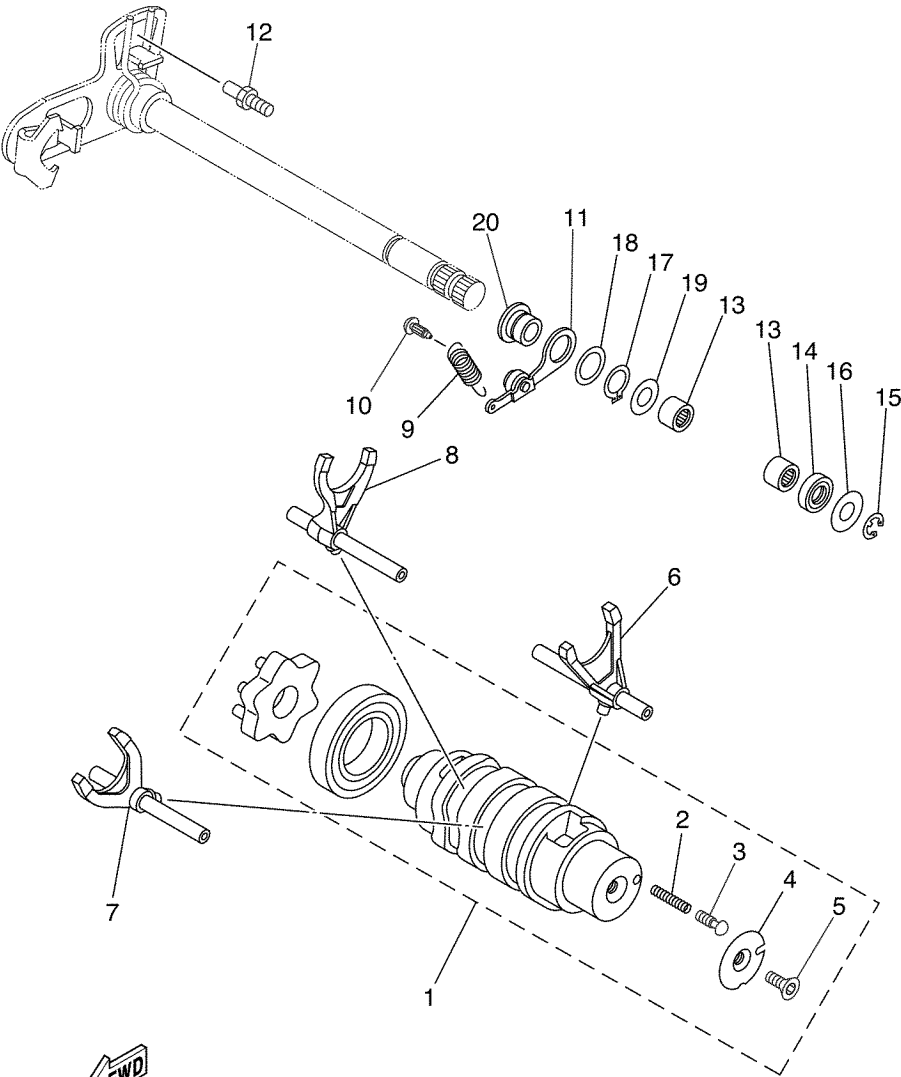 


5VK1300-C170

| Ref No | Part No | Description |
|--------|-----------------|--------------------------|
| 01 | 5VK-18540-00-00 | Shift Cam Assy |
| 02 | 90501-06022-00 | • . Spring, Compression |
| 03 | 4UN-18542-00-00 | • . Point, Neutral |
| 04 | 4UN-18566-00-00 | • . Plate, Side 2 |
| 05 | 90149-05321-00 | • . Screw |
| 06 | 5VK-E8501-00-00 | Fork, Shift 1 |
| 07 | 5VK-E8502-00-00 | Fork, Shift 2 |
| 08 | 5VK-E8503-00-00 | Fork, Shift 3 |
| 09 | 5VK-E8144-00-00 | Hanger, Spring |
| 10 | 132-16346-00-00 | Hook, Spring |
| 11 | 5JW-18140-00-00 | Stopper Lever Assy |
| 12 | 5VK-18127-00-00 | Stopper, Screw |
| 13 | 93315-11206-00 | Bearing |
| 14 | 93102-12106-00 | Oil Seal (sd 12-22-5 Hs) |
| 15 | 99001-10600-00 | Circlip |
| 16 | 90201-12X06-00 | Washer, Plate |
| 17 | 93410-17X00-00 | Circlip |
| 18 | 90201-17X01-00 | Washer, Plate |
| 19 | 90201-12X05-00 | Washer, Plate |
| 20 | 5VK-E8699-00-00 | Boss 1 |

| Ref No | Part No | Description |
|--------|-----------------|------------------------|
| 01 | 5VK-18101-00-00 | Shift Shaft Assy |
| 02 | 5VK-E8110-01-00 | Shift Pedal Assy |
| 03 | 5VK-E8113-00-00 | • . Cover, Shift Pedal |
| 04 | 91317-06020-00 | Bolt |

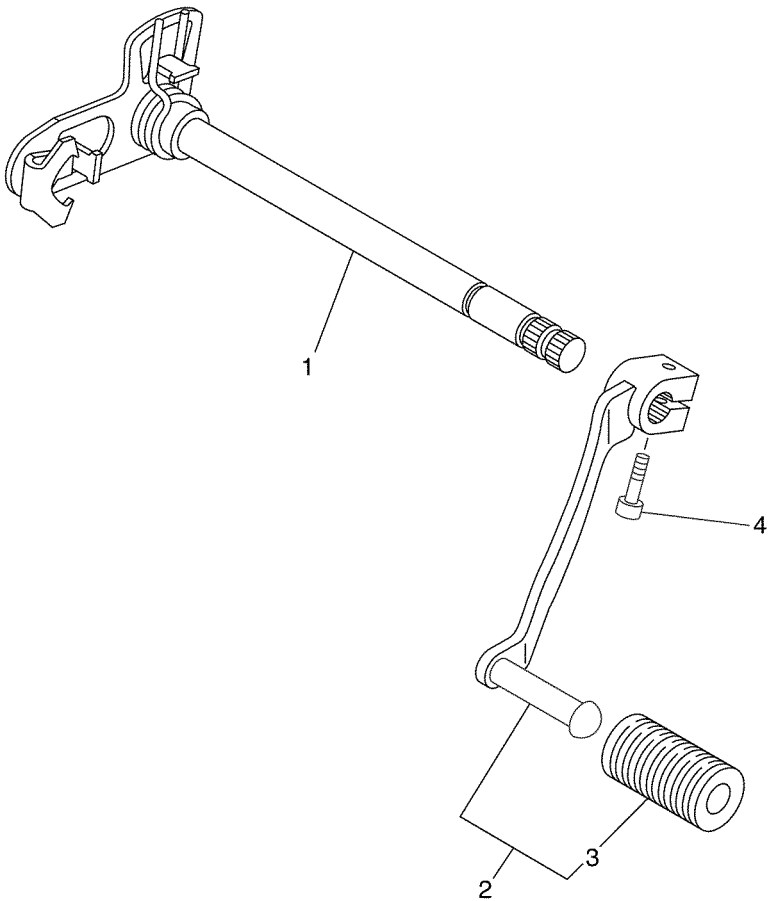 


5VK1300-C180

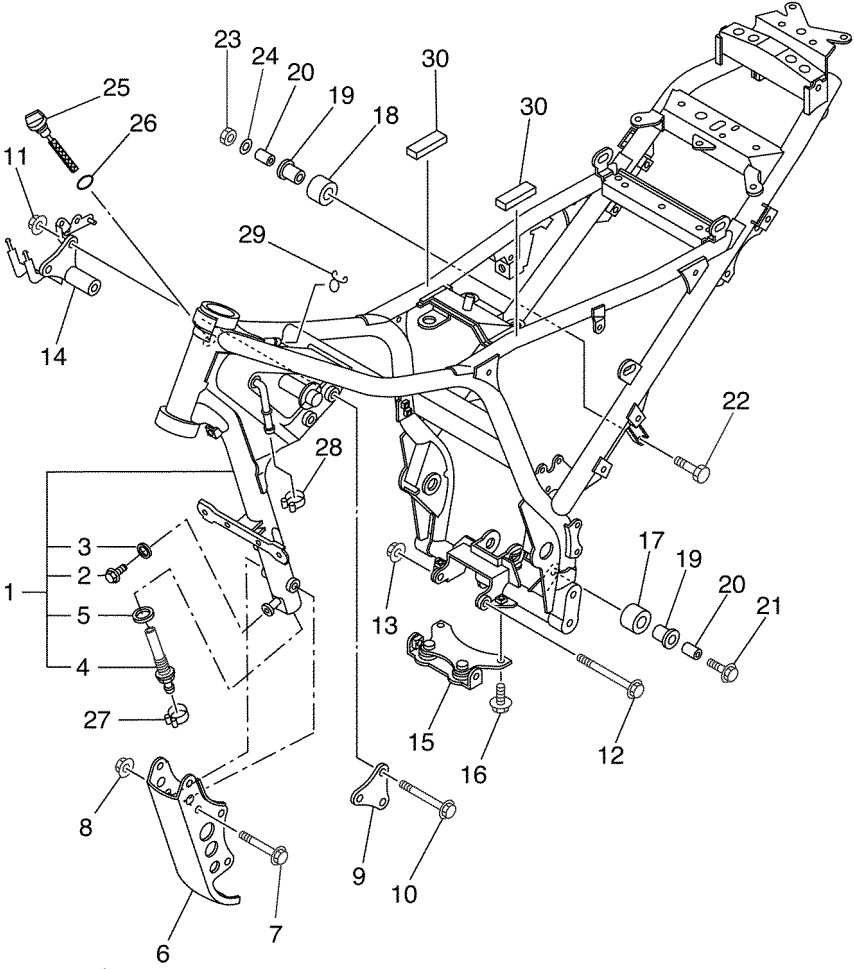 


5VK1300-C191

| Ref No | Part No | Description |
|--------|-----------------|----------------------|
| 01 | 5VK-F1110-10-00 | Frame Comp. |
| 02 | 95807-08012-00 | • . Bolt, Flange |
| 03 | 90430-08119-00 | • . Gasket |
| 04 | 5VK-F1756-00-00 | • . Net, Filter |
| 05 | 90430-22123-00 | • . Gasket |
| 06 | 5VK-F1316-00-00 | Stay, Engine 3 |
| 07 | 95814-10070-00 | Bolt, Flange |
| 08 | 90179-10658-00 | Nut |
| 09 | 5VK-F1315-00-00 | Stay, Engine 2 |
| 10 | 95814-10100-00 | Bolt, Flange |
| 11 | 90179-10658-00 | Nut |
| 12 | 90105-10040-00 | Bolt, Washer Based |
| 13 | 90179-10658-00 | Nut |
| 14 | 5VK-F1410-00-00 | Engine Bracket Comp. |
| 15 | 5VK-21445-00-00 | Stay, Muffler 1 |
| 16 | 95024-08016-00 | Bolt, Flange |
| 17 | 30X-22178-00-00 | Tensioner |
| 18 | 10V-22178-00-00 | Tensioner |
| 19 | 10V-22184-00-00 | Bush |
| 20 | 90387-08024-00 | Collar |
| 21 | 95827-08040-00 | Bolt, Flange |
| 22 | 90101-08428-00 | Bolt |
| 23 | 95607-08100-00 | Nut, U |
| 24 | 92907-08200-00 | Washer |
| 25 | 5VK-15362-00-00 | Plug, Oil Level |
| 26 | 93210-19123-00 | O-ring |
| 27 | 90467-19800-00 | Clip |
| 28 | 90467-17800-00 | Clip |
| 29 | 90467-10008-00 | Clip |
| 30 | 5VK-21746-00-00 | Damper |

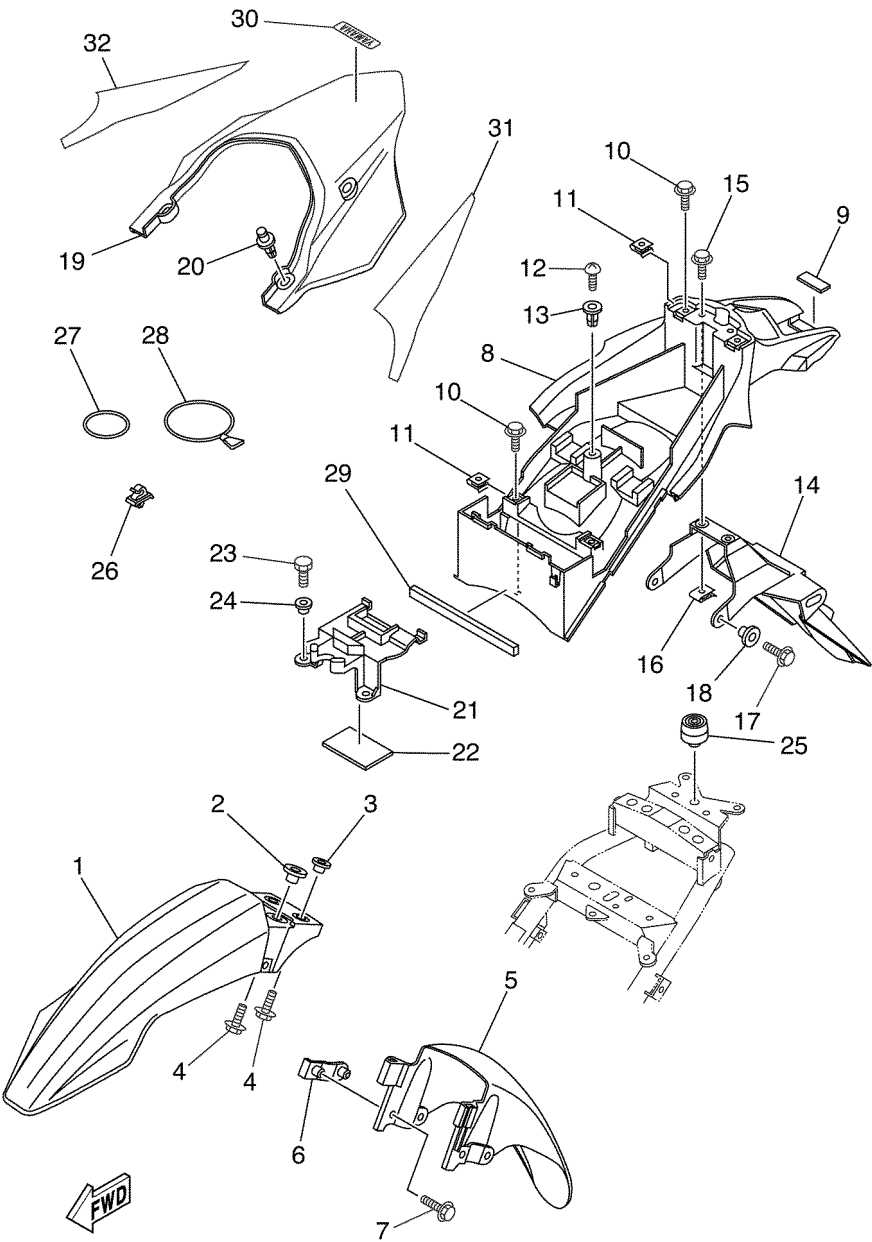 


5VK8300-F200

| Ref No | Part No | Description |
|--------|-----------------|-------------------------------|
| 01 | 5VK-F1511-10-00 | Fender, Front |
| 02 | 90387-065X7-00 | Collar |
| 03 | 90387-087L0-00 | Collar |
| 04 | 90119-06096-00 | Bolt, With Washer |
| 05 | 5VK-F1556-00-00 | Fender, Front 2 |
| 06 | 5VK-F1587-00-00 | Stay 1 |
| 07 | 90119-06051-00 | Bolt, With Washer |
| 08 | 5VK-F1611-01-00 | Fender, Rear |
| 09 | 5DM-28371-00-00 | Damper |
| 10 | 95807-06012-00 | Bolt, Flange |
| 11 | 90183-06023-00 | Nut, Spring |
| 12 | 97707-60020-00 | Screw, Tapping |
| 13 | 90338-08226-00 | Plug |
| 14 | 5VK-F1685-00-00 | Bracket, License |
| 15 | 90119-06118-00 | Bolt, With Washer |
| 16 | 90183-06023-00 | Nut, Spring |
| 17 | 95807-06014-00 | Bolt, Flange |
| 18 | 90387-06648-00 | Collar |
| 19 | 5VK-F1651-00-00 | Cover, Rear Fender |
| 19 | 5VK-F1651-10-00 | Cover, Rear Fender |
| 20 | 90269-08066-00 | Rivet |
| 21 | 5VK-F160E-00-00 | Box |
| 22 | 5VK-21639-00-00 | Damper 2 |
| 23 | 97007-05012-00 | Bolt |
| 24 | 90387-05803-00 | Collar |
| 25 | 1T4-24741-00-00 | Pad, Seat |
| 26 | 90464-07259-00 | Clamp |
| 27 | 4XV-21376-00-00 | Band, Tool |
| 28 | 3YX-21376-00-00 | Band, Tool |
| 29 | 5VK-21649-00-00 | Damper |
| 30 | 1D2-2153A-00-00 | Emblem, Yamaha |
| 30 | 1D2-2153A-40-00 | Emblem, Yamaha |
| 31 | 5VK-21661-00-00 | Graphic, R.fender Cover (l.h) |
| 32 | 5VK-21662-00-00 | Graphic, R.fender Cover (r.h) |

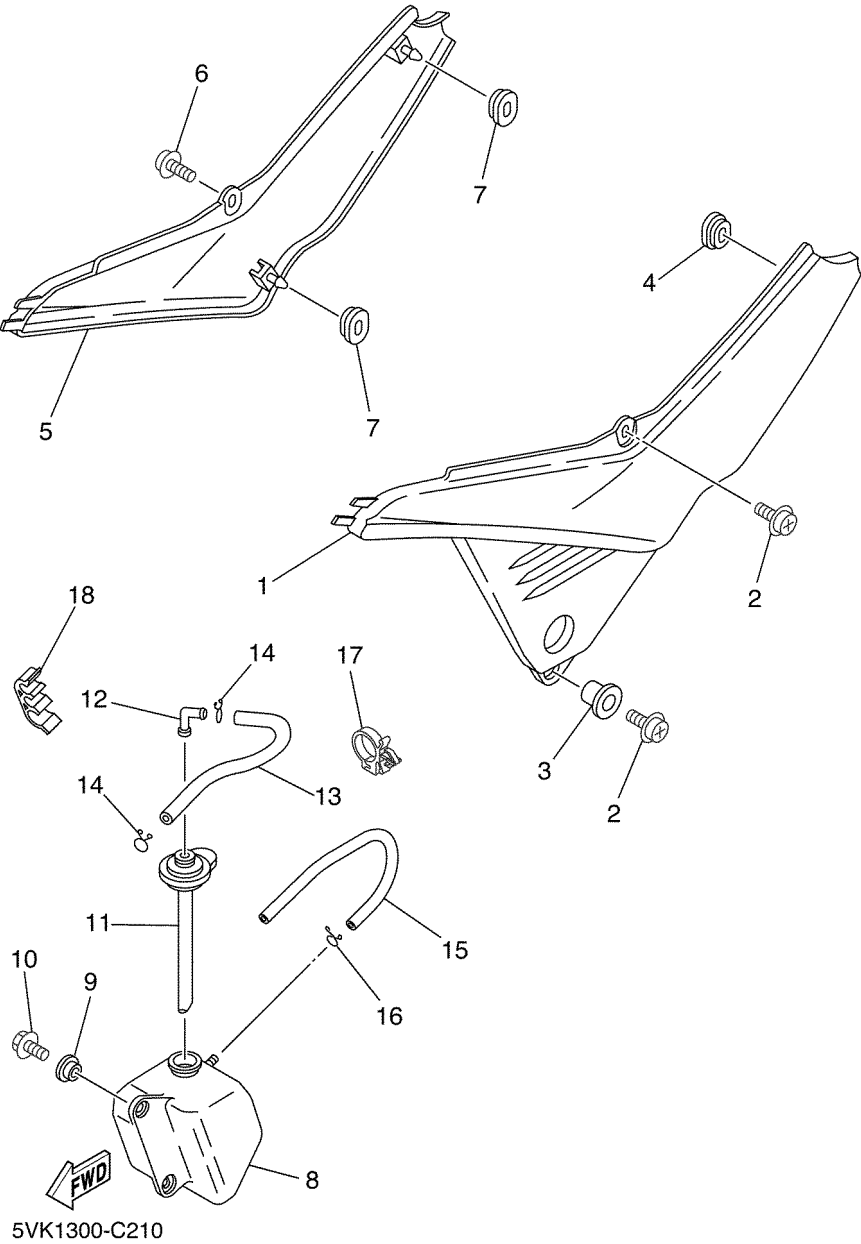 

| Ref No | Part No | Description |
|--------|-----------------|--------------------|
| 01 | 5VK-F1711-00-00 | Cover, Side 1 |
| 02 | 90159-06078-00 | Screw, With Washer |
| 03 | 90387-07717-00 | Collar |
| 04 | 90480-01558-00 | Grommet |
| 05 | 5VK-F1721-00-00 | Cover, Side 2 |
| 06 | 90159-06078-00 | Screw, With Washer |
| 07 | 90480-01558-00 | Grommet |
| 08 | 5VK-F1871-00-00 | Tank, Recovery |
| 09 | 90387-062M9-00 | Collar |
| 10 | 95807-06012-00 | Bolt, Flange |
| 11 | 5VK-21875-00-00 | Cap |
| 12 | 26H-21828-00-00 | Elbow |
| 13 | 90445-08020-00 | Hose |
| 14 | 90467-08003-00 | Clip |
| 15 | 90445-08008-00 | Hose |
| 16 | 90467-08003-00 | Clip |
| 17 | 90464-16006-00 | Clamp |
| 18 | 90464-11008-00 | Clamp |

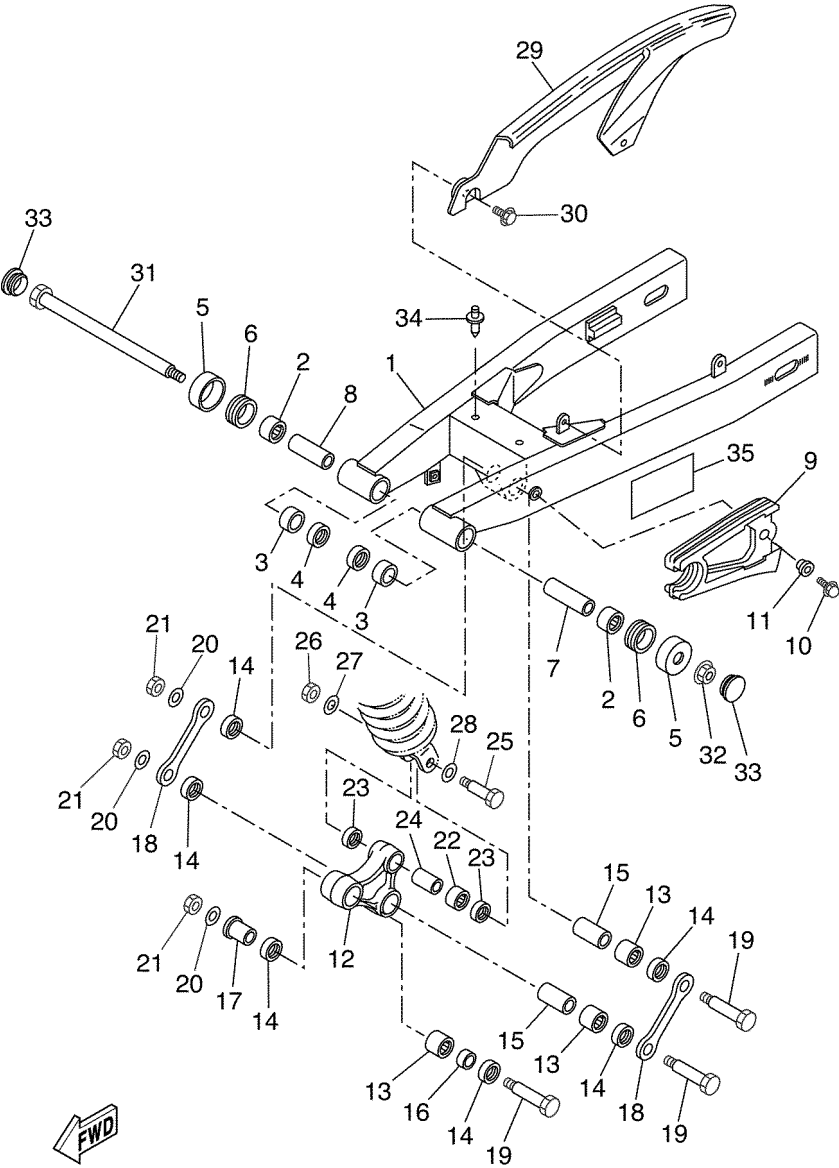 


5VK4300-D220


REAR ARM

| Ref No | Part No | Description |
|--------|-----------------|-----------------------|
| 01 | 5VK-F2110-00-00 | Rear Arm Comp. |
| 02 | 93315-22251-00 | Bearing |
| 03 | 90380-22111-00 | Bush, Solid |
| 04 | 93106-22019-00 | Oil Seal (dc 22-28-8) |
| 05 | 30X-2219X-00-00 | Cover |
| 06 | 93108-35004-00 | Oil Seal (35-41-8) |
| 07 | 5VK-22124-00-00 | Bush 2 |
| 08 | 5VK-22123-00-00 | Bush 1 |
| 09 | 5VK-F2151-00-00 | Seal, Guard |
| 10 | 95807-06020-00 | Bolt, Flange |
| 11 | 90387-06066-00 | Collar |
| 12 | 5VK-F217A-00-00 | Arm, Relay |
| 13 | 93315-32053-00 | Bearing |
| 14 | 93109-20076-00 | Oil Seal |
| 15 | 90387-167R5-00 | Collar |
| 16 | 90387-16011-00 | Collar |
| 17 | 90387-16012-00 | Collar |
| 18 | 5VK-F217F-00-00 | Rod, Connecting 1 |
| 19 | 5VK-22125-00-00 | Bolt |
| 20 | 90201-160F6-00 | Washer, Plate |
| 21 | 90185-14002-00 | Nut, Self-locking |
| 22 | 93315-31759-00 | Bearing |
| 23 | 93109-17071-00 | Oil Seal |
| 24 | 90387-127W0-00 | Collar |
| 25 | 90101-10659-00 | Bolt |
| 26 | 95614-10100-00 | Nut, U |
| 27 | 90201-101J1-00 | Washer, Plate |
| 28 | 90201-13013-00 | Washer, Plate |
| 29 | 5VK-F2311-00-00 | Case, Chain |
| 30 | 90119-06861-00 | Bolt, With Washer |
| 31 | 1VJ-22141-00-00 | Shaft, Pivot |
| 32 | 95607-14200-00 | Nut, Self-locking |
| 33 | 90338-28242-00 | Plug |
| 34 | 90269-08066-00 | Rivet |
| 35 | 5VK-F1668-00-00 | Label, Tire |

| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 5VK-22210-01-00 | Shock Absorber Assy, Rear |
| 02 | 4AA-22259-40-00 | • . Label, Warning |
| 03 | 90101-12742-00 | Bolt |
| 04 | 95617-12100-00 | Nut, U |
| 05 | 5VK-F2243-00-00 | Washer 1 |

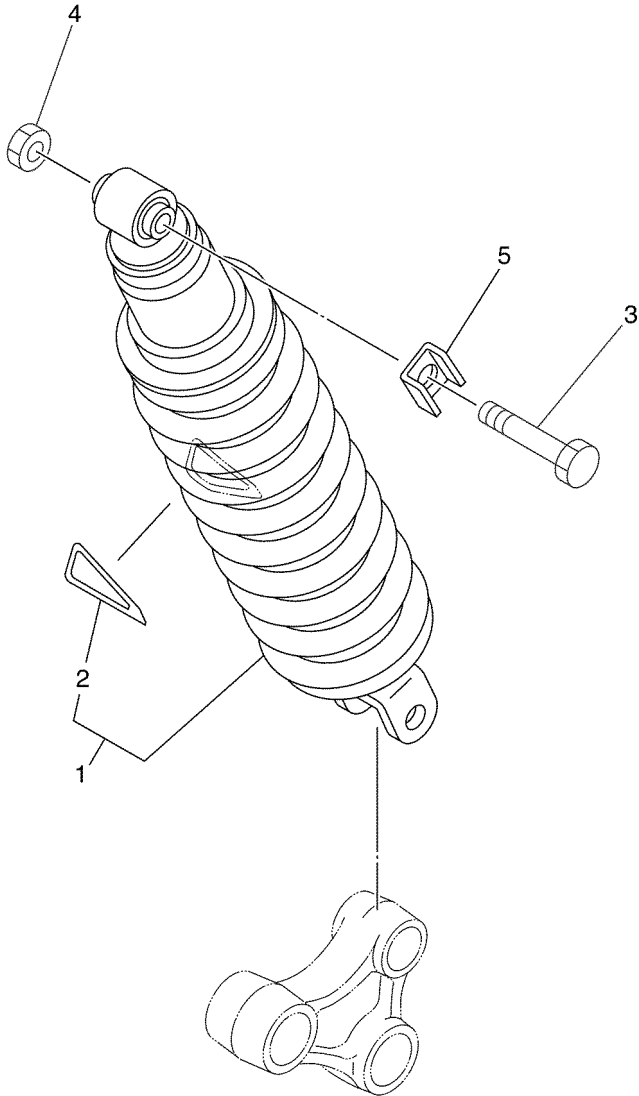 



5VK1300-C230

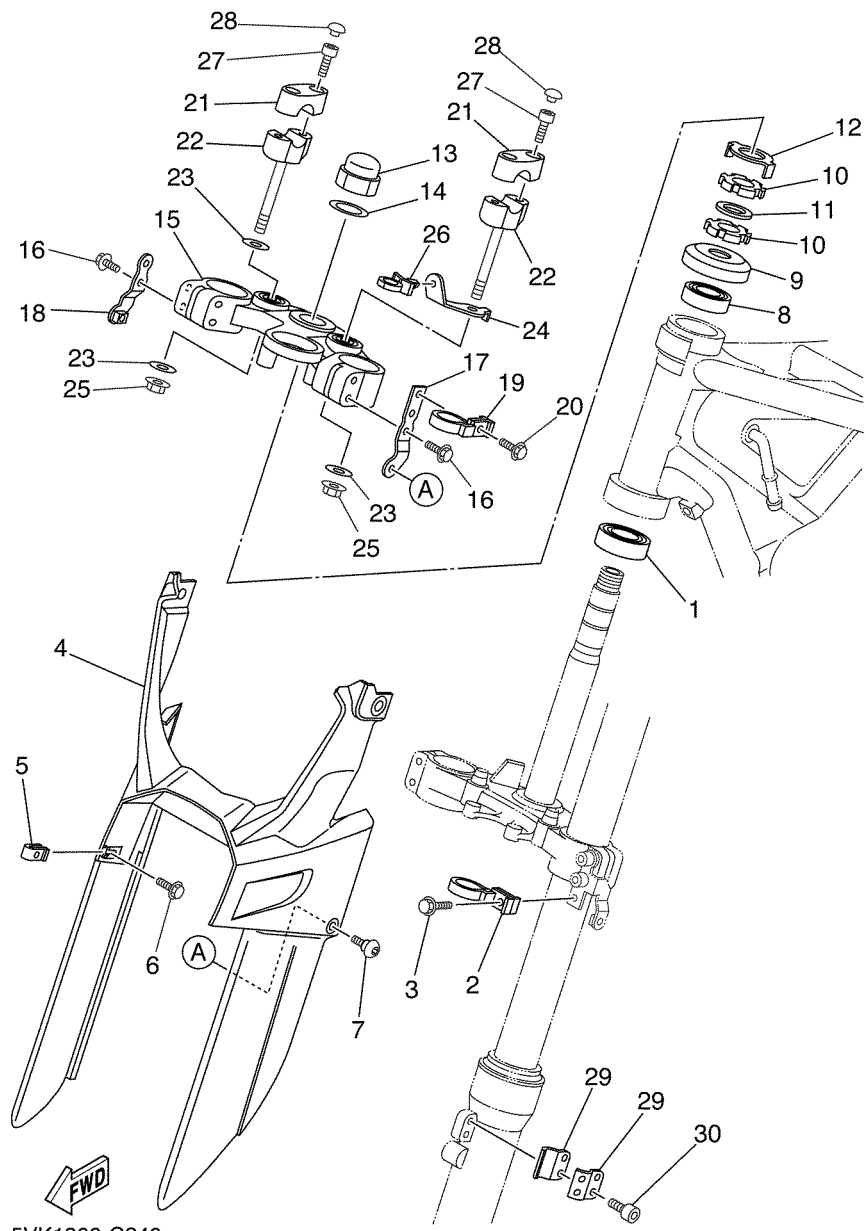 


5VK1300-C240

| Ref No | Part No | Description |
|--------|-----------------|-------------------------|
| 01 | 93332-00008-00 | Bearing |
| 02 | 5VK-23389-00-00 | Guide, Cable |
| 03 | 90105-05361-00 | Bolt, Flange |
| 04 | 5VK-F3472-00-00 | Protector |
| 05 | 90183-05061-00 | Nut, Spring |
| 06 | 90119-05193-00 | Bolt, With Washer |
| 07 | 90111-05011-00 | Bolt,hex. Socket Button |
| 08 | 93332-000Y6-00 | Bearing |
| 09 | 1W1-23416-00-00 | Cover, Ball Race 2 |
| 10 | 90179-25615-00 | Nut |
| 11 | 90202-26142-00 | Washer, Plate |
| 12 | 3YF-23418-00-00 | Washer, Special |
| 13 | 90176-22081-00 | Nut, Crown |
| 14 | 90201-220T0-00 | Washer, Plate |
| 15 | 5VK-23430-00-00 | Handle Crown Comp. |
| 16 | 95027-08040-00 | Bolt, Flange |
| 17 | 5VK-F317E-00-00 | Stay |
| 18 | 5VK-F317F-00-00 | Stay 2 |
| 19 | 5VK-23389-00-00 | Guide, Cable |
| 20 | 90105-05361-00 | Bolt, Flange |
| 21 | 4H7-23441-01-P5 | Holder, Handle Upper |
| 22 | 3Y6-23442-00-P1 | Holder, Handle Lower |
| 23 | 90201-10141-00 | Washer, Plate |
| 24 | 5VK-F317M-00-00 | Stay 3 |
| 25 | 95607-10200-00 | Nut, U Flange |
| 26 | 90464-12001-00 | Clamp |
| 27 | 91317-08030-00 | Bolt |
| 28 | 90338-06004-00 | Plug |
| 29 | 5VK-F3466-00-00 | Clamp |
| 30 | 91317-06016-00 | Bolt |

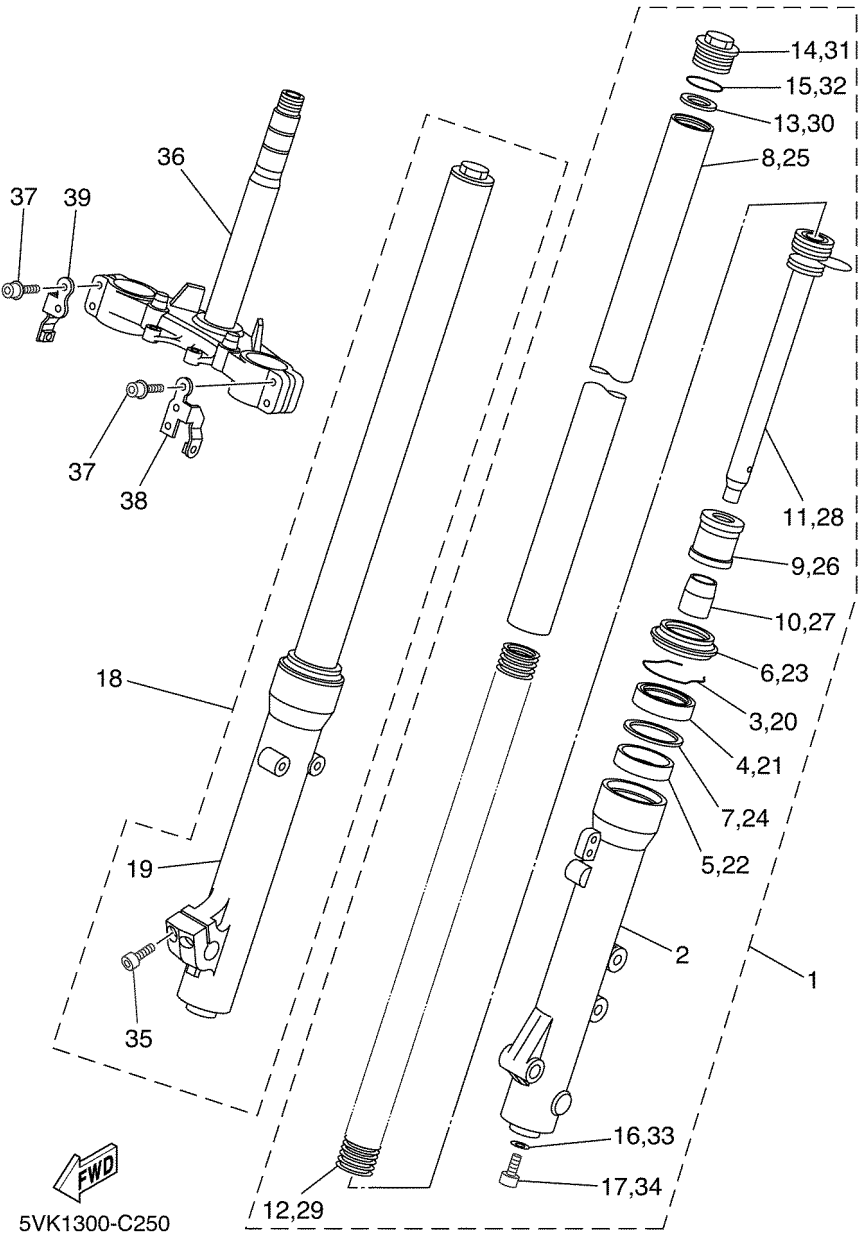 


| Ref No | Part No | Description |
|--------|-----------------|--------------------------------|
| 01 | 5VK-F3102-00-00 | Front Fork Assy (l.h) |
| 02 | 5VK-F3126-00-00 | • . Tube, Outer (left) |
| 03 | 5VK-F3153-00-00 | • . Ring, Snap |
| 04 | 4DA-23145-L0-00 | • . Oil Seal |
| 05 | 5VK-F3125-00-00 | • . Metal, Slide 1 |
| 06 | 5VK-F3144-00-00 | • . Seal, Dust |
| 07 | 5VK-F3146-00-00 | • . Washer, Oil Seal |
| 08 | 5VK-F3110-00-00 | • . Inner Tube Comp.1 |
| 09 | 3XJ-23171-L0-00 | • . Piston, Front Fork |
| 10 | 5VK-F3173-00-00 | • . Spindle, Taper |
| 11 | 5VK-F3170-00-00 | • . Cylinder Comp., Front Fork |
| 12 | 5VK-F3141-00-00 | • . Spring, Front Fork |
| 13 | 5VK-F3149-00-00 | • . Washer, Spring Upper |
| 14 | 5VK-F3111-00-00 | • . Bolt, Cap |
| 15 | 4V4-23188-L0-00 | • . O-ring |
| 16 | 5JH-F3158-00-00 | • . Gasket |
| 17 | 5VK-F3181-00-00 | • . Bolt, Hexagon Socket Head |
| 18 | 5VK-F3103-00-00 | Front Fork Assy (r.h) |
| 19 | 5VK-F3136-00-00 | • . Tube, Outer (right) |
| 20 | 5VK-F3153-00-00 | • . Ring, Snap |
| 21 | 4DA-23145-L0-00 | • . Oil Seal |
| 22 | 5VK-F3125-00-00 | • . Metal, Slide 1 |
| 23 | 5VK-F3144-00-00 | • . Seal, Dust |
| 24 | 5VK-F3146-00-00 | • . Washer, Oil Seal |
| 25 | 5VK-F3110-00-00 | • . Inner Tube Comp.1 |
| 26 | 3XJ-23171-L0-00 | • . Piston, Front Fork |
| 27 | 5VK-F3173-00-00 | • . Spindle, Taper |
| 28 | 5VK-F3170-00-00 | • . Cylinder Comp., Front Fork |
| 29 | 5VK-F3141-00-00 | • . Spring, Front Fork |
| 30 | 5VK-F3149-00-00 | • . Washer, Spring Upper |
| 31 | 5VK-F3111-00-00 | • . Bolt, Cap |
| 32 | 4V4-23188-L0-00 | • . O-ring |
| 33 | 5JH-F3158-00-00 | • . Gasket |
| 34 | 5VK-F3181-00-00 | • . Bolt, Hexagon Socket Head |
| 35 | 4CU-F3181-00-00 | • . Bolt (m8x25) |
| 36 | 5VK-F3340-00-00 | Under Bracket Comp. |
| 37 | 5SE-F3394-00-00 | Bolt, Special |
| 38 | 5VK-F334G-00-00 | Bracket 1 |
| 39 | 5VK-F334H-00-00 | Bracket 2 |

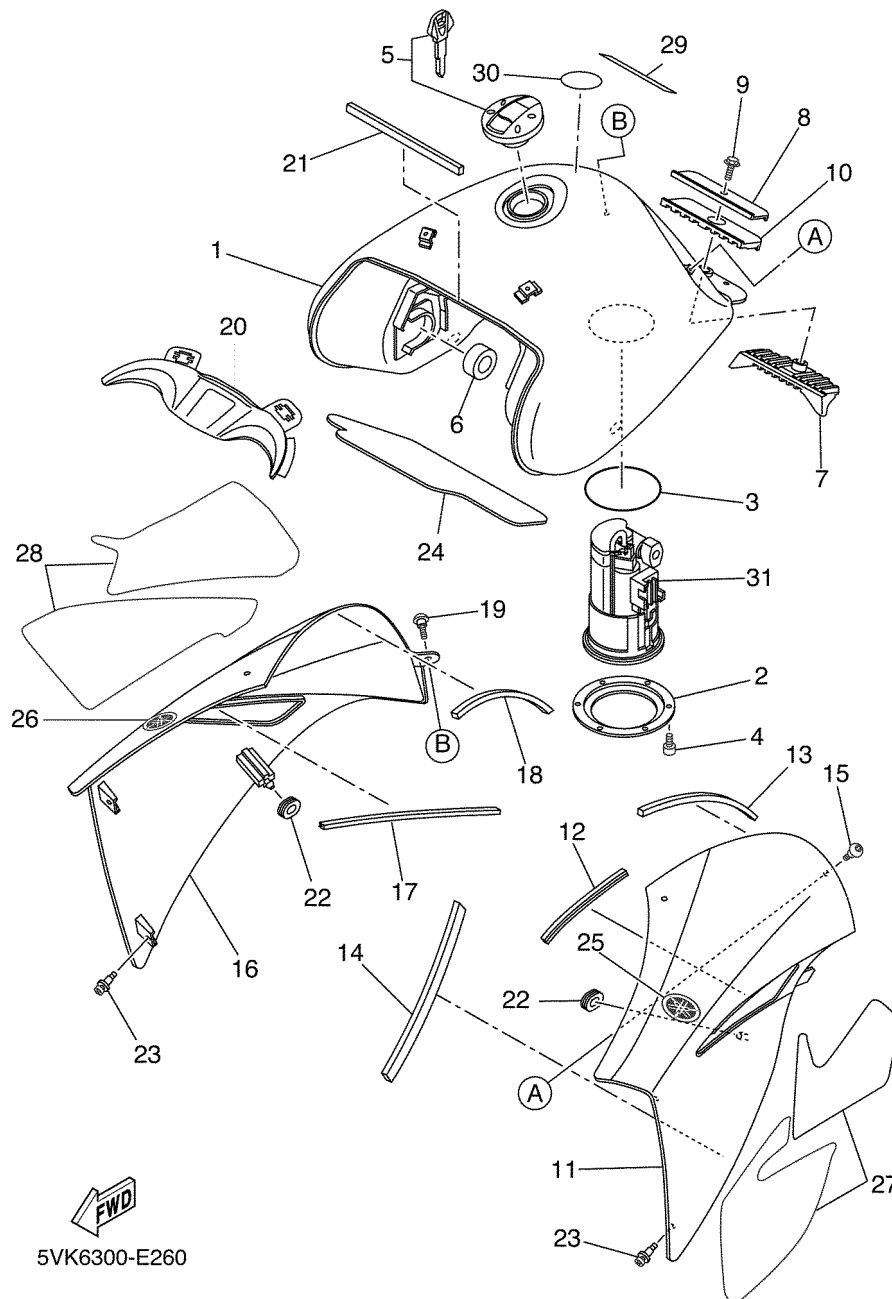 

5VK6300-E260


FUEL TANK

| Ref No | Part No | Description |
|--------|-----------------|--------------------------|
| 01 | 5VK-F4110-10-P0 | Fuel Tank Comp. |
| 02 | 5VK-F4491-00-00 | Bracket, Fuel Pump |
| 03 | 5JW-24486-00-00 | O-ring |
| 04 | 91317-05010-00 | Bolt |
| 05 | 5VK-24602-00-00 | Cap Assy |
| 06 | 3TB-24181-00-00 | Damper, Locating 1 |
| 07 | 5VK-24182-00-00 | Damper, Locating 2 |
| 08 | 5VK-F4186-00-00 | Washer, Special |
| 09 | 95827-06012-00 | Bolt, Flange |
| 10 | 5VK-24183-00-00 | Damper, Locating 3 |
| 11 | 5VK-F137W-01-00 | Scoop, Air 1 |
| 11 | 5VK-F137W-11-00 | Scoop, Air 1 |
| 12 | 5VK-28345-00-00 | Mole 1 |
| 13 | 5VK-2414H-00-00 | Damper, Plate 1 |
| 14 | 5VK-2414K-00-00 | Damper, Plate 3 |
| 15 | 90111-05011-00 | Bolt,hex. Socket Button |
| 16 | 5VK-F137X-01-00 | Scoop, Air 2 |
| 16 | 5VK-F137X-11-00 | Scoop, Air 2 |
| 17 | 5VK-28345-00-00 | Mole 1 |
| 18 | 5VK-2414H-00-00 | Damper, Plate 1 |
| 19 | 90111-05011-00 | Bolt,hex. Socket Button |
| 20 | 5VK-F137Y-00-00 | Guide, Air |
| 21 | 5VK-28371-00-00 | Damper |
| 22 | 90480-01141-00 | Grommet |
| 23 | 90269-06008-00 | Rivet |
| 24 | 5VK-2416F-00-00 | Insulator, Fuel Tank 1 |
| 25 | 5VK-F413B-01-00 | Emblem |
| 26 | 5VK-F413B-01-00 | Emblem |
| 27 | 5VK-2137C-20-00 | Graphic, Scoop Air Set 1 |
| 27 | 5VK-2137C-30-00 | Graphic, Scoop Air Set 1 |
| 28 | 5VK-2137D-20-00 | Graphic, Scoop Air Set 2 |
| 28 | 5VK-2137D-30-00 | Graphic, Scoop Air Set 2 |
| 29 | 5WW-F1568-00-00 | Label, Warning |
| 30 | 5DN-F415A-10-00 | Label, Caution |
| 31 | 5VK-13907-01-00 | Fuel Pump Comp. |
| 31 | 5VK-13907-10-00 | Fuel Pump Comp. |

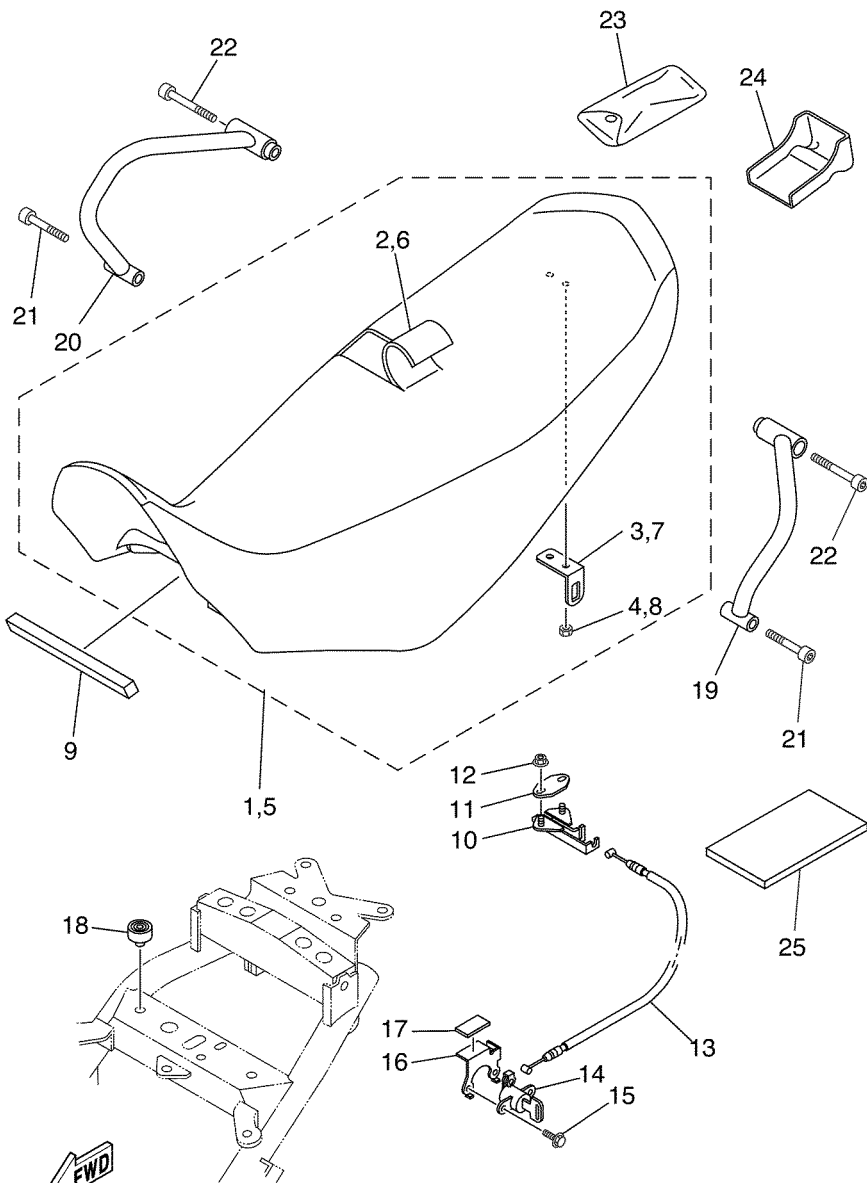 

1D21300-C270


| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 5VK-F4770-11-00 | Semi-double Seat Assy |
| 02 | 5VK-24731-11-00 | • . Cover, Seat |
| 03 | 4HM-24728-00-00 | • . Bracket, Seat |
| 04 | 90179-06635-00 | • . Nut |
| 05 | 5VK-F4770-21-00 | Semi-double Seat Assy |
| 06 | 5VK-24731-21-00 | • . Cover, Seat |
| 07 | 4HM-24728-00-00 | • . Bracket, Seat |
| 08 | 90179-06635-00 | • . Nut |
| 09 | 5VK-24737-00-00 | Damper, Seat |
| 10 | 4BP-24780-00-00 | Seat Lock Assy |
| 11 | 5VK-F4792-00-00 | Plate |
| 12 | 95707-06500-00 | Nut, Flange |
| 13 | 5VK-F478E-00-00 | Cable, Seat Lock |
| 14 | 2TV-W2470-00-00 | Seat Lock Assy |
| 15 | 95027-06014-00 | Bolt, Flange |
| 16 | 5VK-F478X-00-00 | Bracket, Seat Lock |
| 17 | 5VK-24747-00-00 | Damper, Seat |
| 18 | 3VL-F4741-10-00 | Pad, Seat |
| 19 | 5VK-F474A-10-00 | Assist, Grip |
| 20 | 5VK-F474W-10-00 | Assist,grip 2 |
| 21 | 90110-08X02-00 | Bolt, Hexagon Socket Head |
| 22 | 90110-08X06-00 | Bolt, Hexagon Socket Head |
| 23 | 5VK-F8100-00-00 | Tool Kit |
| 24 | 5VK-F8116-00-00 | Tool, Special |
| 25 | 5VK-F8199-E1-00 | Manual,owner's |
| 25 | 5VK-F8199-F1-00 | Manual,owner's |
| 25 | 5VK-F8199-G1-00 | Manual,owner's |
| 25 | 5VK-F8199-H1-00 | Manual,owner's |
| 25 | 5VK-F8199-S1-00 | Manual,owner's |

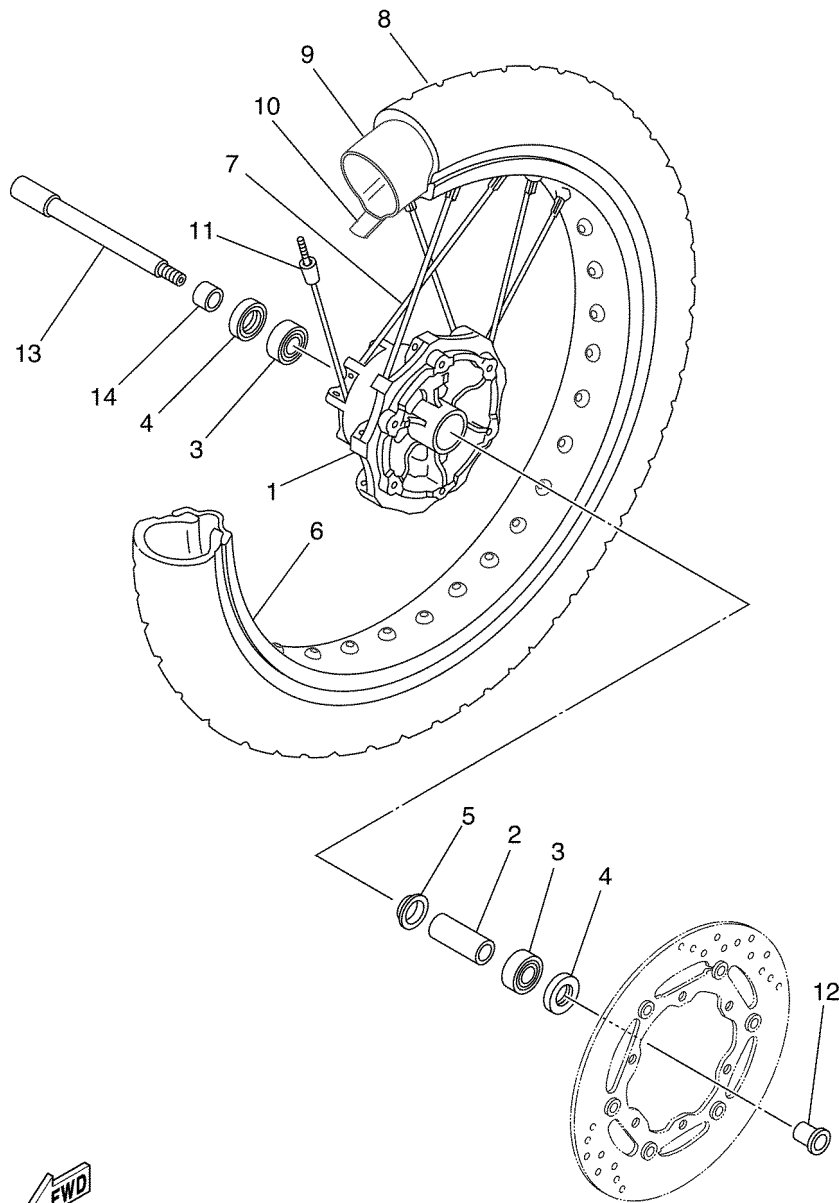 

| Ref No | Part No | Description |
|--------|-----------------|------------------------|
| 01 | 5VK-25111-00-00 | Hub, Front |
| 02 | 5VK-25117-00-00 | Spacer, Bearing |
| 03 | 93306-20348-00 | Bearing |
| 04 | 93106-23002-00 | Oil Seal |
| 05 | 136-25115-00-00 | Flange, Spacer 1 |
| 06 | 94418-21800-00 | Rim (1.85-21) |
| 07 | 5VK-F5104-00-00 | Spoke Set, Front |
| 08 | *00-00000-00-00 | Tire (90/90-21m/c 54s) |
| 08 | *00-00000-00-00 | Tire (90/90-21m/c 54t) |
| 09 | *00-00000-00-00 | Tube |
| 09 | *00-00000-00-00 | Tube (21) |
| 10 | *00-00000-00-00 | Band, Rim |
| 10 | *00-00000-00-00 | Band, Rim (21) |
| 11 | 3HT-25398-00-00 | Balancer, Wheel (15g) |
| 12 | 5VK-F5183-00-00 | Collar, Wheel |
| 13 | 5VK-25181-00-00 | Axle, Wheel |
| 14 | 5VK-F5186-00-00 | Collar, Wheel |




 5VK1300-C280

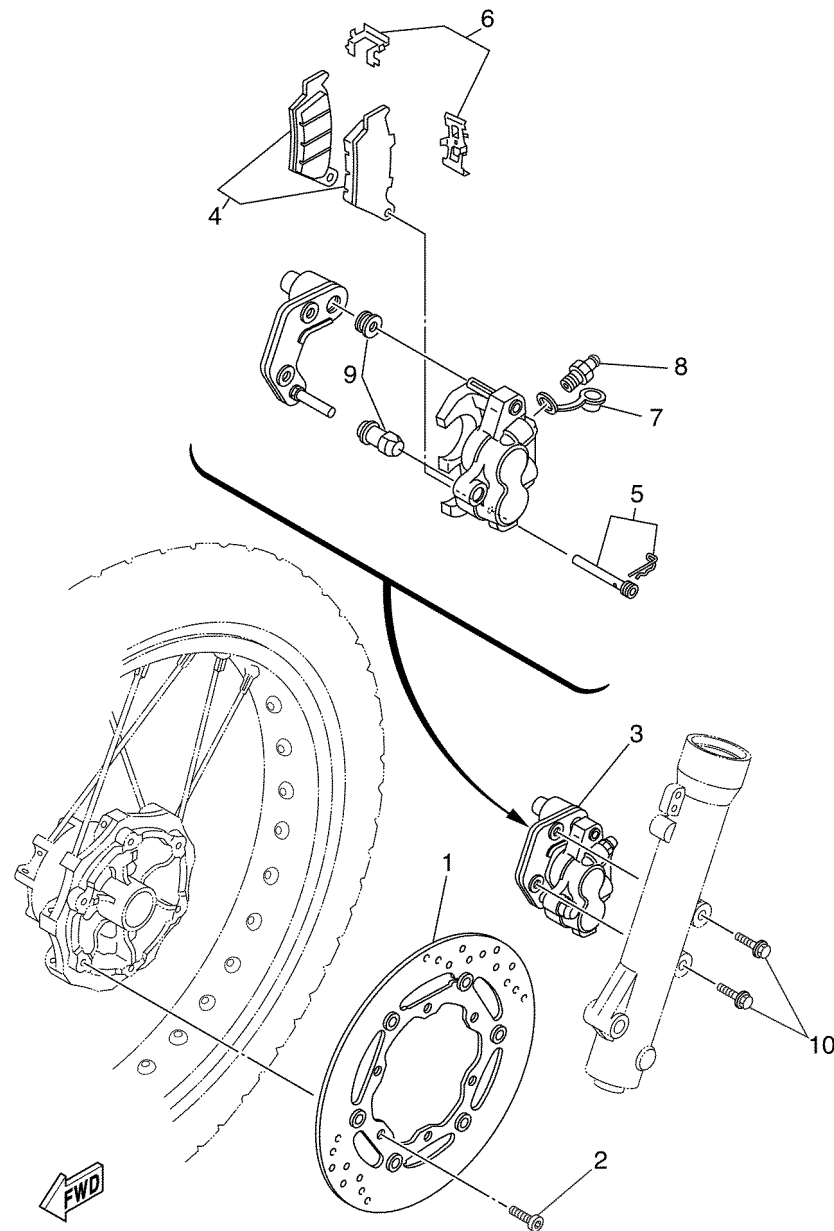


5VK1300-C290

| Ref No | Part No | Description |
|--------|-----------------|--------------------------|
| 01 | 5VK-F581T-00-00 | Disk Brake Assy |
| 02 | 90111-08823-00 | Bolt, hex. Socket Button |
| 03 | 5VK-F580T-00-00 | Caliper Assy (left) |
| 04 | 5VK-W0045-00-00 | • Brake Pad Kit |
| 05 | 5VK-F5924-00-00 | • Pin, Pad |
| 06 | 5VK-F5919-00-00 | • Support, Pad |
| 07 | 5DS-F5825-00-00 | • Cap |
| 08 | 5SE-F5824-00-00 | • Screw, Bleed |
| 09 | 5DS-F5917-00-00 | • Boot, Caliper |
| 10 | 90105-10069-00 | Bolt, Flange |

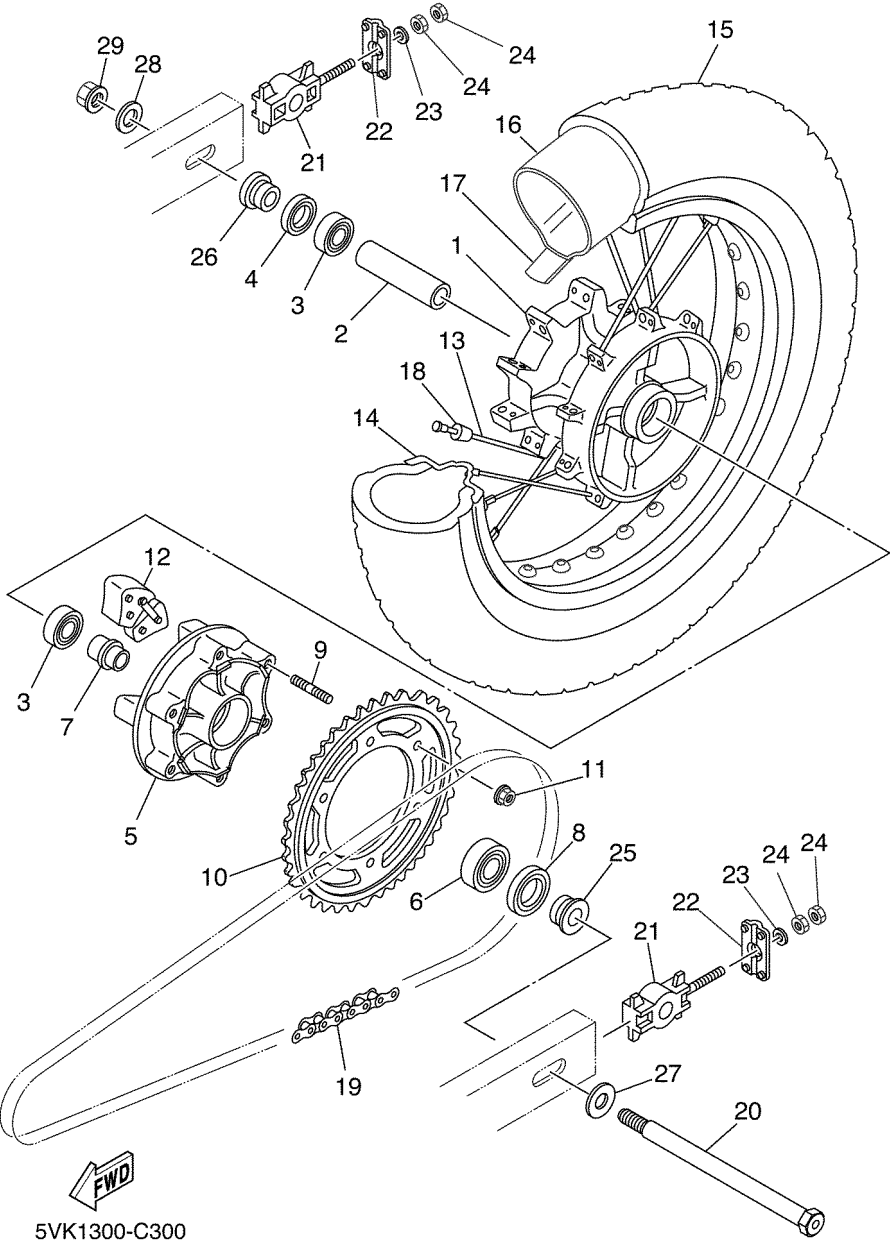 

REAR WHEEL


| Ref No | Part No | Description |
|--------|-----------------|--------------------------|
| 01 | 5VK-25311-00-00 | Hub, Rear |
| 02 | 90560-17306-00 | Spacer |
| 03 | 93306-20348-00 | Bearing |
| 04 | 93106-23002-00 | Oil Seal |
| 05 | 5VK-25366-00-00 | Clutch, Hub |
| 06 | 93306-30437-00 | Bearing |
| 07 | 1VJ-25377-00-00 | Collar, Wheel |
| 08 | 93106-30029-00 | Oil Seal |
| 09 | 90116-10485-00 | Bolt, Stud |
| 10 | 5VK-25445-01-00 | Sprocket, Driven (45t) |
| 11 | 95607-10200-00 | Nut, U Flange |
| 12 | 5Y1-25364-00-00 | Damper |
| 13 | 5VK-F5304-00-00 | Spoke Set, Rear |
| 14 | 94427-17800-00 | Rim (4.25-17) |
| 15 | *00-00000-00-00 | Tire (130/80-17 M/c 65s) |
| 15 | *00-00000-00-00 | Tire (130/80-17 M/c 65t) |
| 16 | *00-00000-00-00 | Tube |
| 16 | *00-00000-00-00 | Tube (21) |
| 17 | *00-00000-00-00 | Band, Rim |
| 17 | *00-00000-00-00 | Band, Rim (21) |
| 18 | 3HT-25398-00-00 | Balancer, Wheel (15g) |
| 19 | 94568-B6110-00 | Chain |
| 20 | 3AJ-25381-01-00 | Axle, Wheel |
| 21 | 1UF-25388-00-00 | Puller, Chain 1 |
| 22 | 5VK-F2174-00-00 | End 1 |
| 23 | 92907-08600-00 | Washer, Plate |
| 24 | 95307-08600-00 | Nut |
| 25 | 90387-17801-00 | Collar |
| 26 | 90387-17802-00 | Collar |
| 27 | 90201-170T3-00 | Washer, Plate |
| 28 | 90201-160T2-00 | Washer, Plate |
| 29 | 95604-16200-00 | Nut, U Flange |

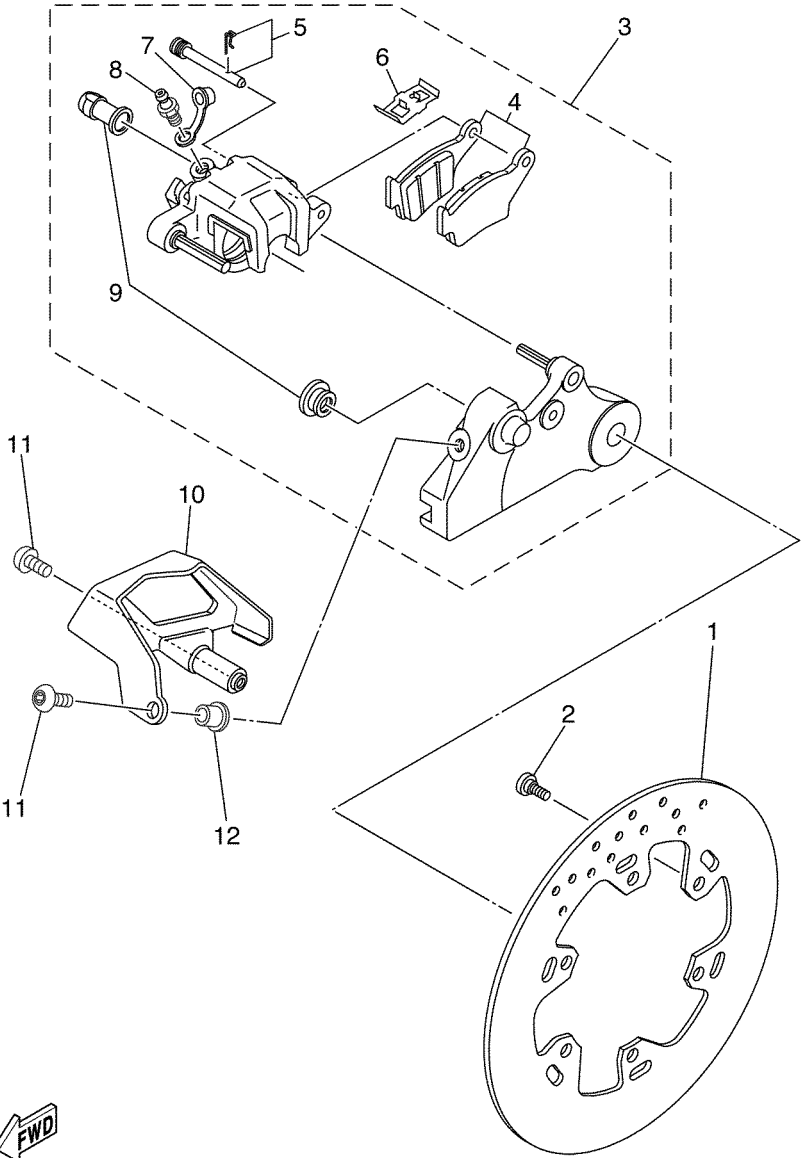 

| Ref No | Part No | Description |
|--------|-----------------|--------------------------|
| 01 | 5VK-F582W-00-00 | Disk, Rear Brake 2 |
| 02 | 90109-06816-00 | Bolt |
| 03 | 5VK-F580W-00-00 | Caliper Assy, Rear 2 |
| 04 | 5VK-W0046-00-00 | • . Brake Pad Kit 2 |
| 05 | 5VK-F5924-10-00 | • . Pin, Pad |
| 06 | 5VK-F5919-10-00 | • . Support, Pad |
| 07 | 5DS-F5825-00-00 | • . Cap |
| 08 | 5SE-F5824-00-00 | • . Screw, Bleed |
| 09 | 5DS-F5917-00-00 | • . Boot, Caliper |
| 10 | 5CH-F7491-00-00 | Protector |
| 11 | 90111-06029-00 | Bolt, hex. Socket Button |
| 12 | 90387-06852-00 | Collar |



 
5VK1300-C310

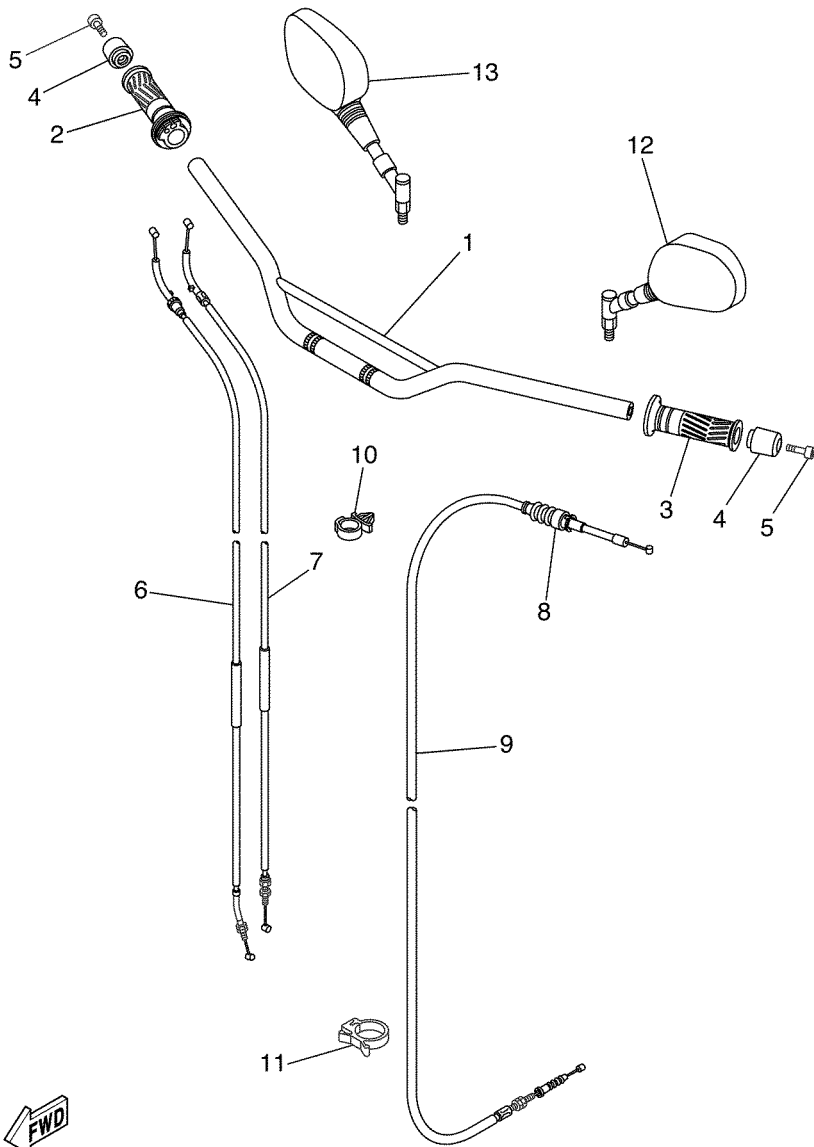

| Ref No | Part No | Description |
|--------|-----------------|-------------------------------|
| 01 | 5VK-F6110-00-00 | Handle Comp. |
| 02 | 4YR-26240-02-00 | Grip Assy |
| 03 | 4YR-26241-02-00 | Grip (left) |
| 04 | 4JH-26246-00-00 | End, Grip |
| 05 | 91317-06035-00 | Bolt |
| 06 | 5VK-F6311-00-00 | Cable, Throttle 1 |
| 07 | 5VK-F6312-00-00 | Cable, Throttle 2 |
| 08 | 1E6-26342-00-00 | Boot, Cable |
| 09 | 5VK-F6335-00-00 | Cable, Clutch |
| 10 | 90464-12001-00 | Clamp |
| 11 | 90464-18004-00 | Clamp |
| 12 | 5VK-F6280-00-00 | Rear View Mirror Assy (left) |
| 13 | 5VK-F6290-00-00 | Rear View Mirror Assy (right) |




 5VK1300-C320

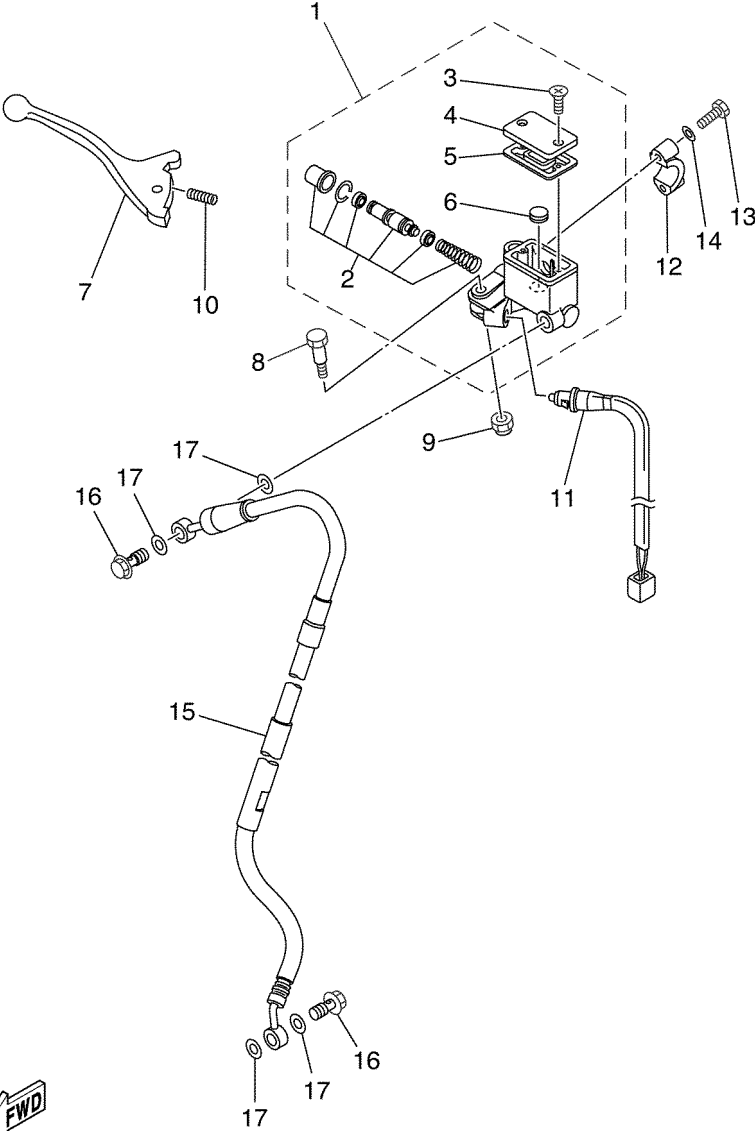

5VK1300-C330

| Ref No | Part No | Description |
|--------|-----------------|--------------------------|
| 01 | 5VK-W2587-00-00 | Master Cylinder Sub Assy |
| 02 | 3XP-W0041-00-00 | • . Cylinder Kit, Master |
| 03 | 98706-04012-00 | • . Screw, Flat Head |
| 04 | 3GM-W2585-21-00 | • . Reservoir Cap Set |
| 05 | 55U-25854-00-00 | • . Diaphragm, Reservoir |
| 06 | 5CG-25715-00-00 | • . Separator Assy |
| 07 | 5VK-83922-00-00 | Lever 2 |
| 08 | 90109-06577-00 | Bolt |
| 09 | 95606-06100-00 | Nut, U |
| 10 | 90501-10312-00 | Spring, Compression |
| 11 | 5VK-83980-00-00 | Front Stop Switch Assy |
| 12 | 56A-25867-00-00 | Bracket, Master Cylinder |
| 13 | 97007-06025-00 | Bolt |
| 14 | 92907-06600-00 | Washer, Plate |
| 15 | 5VK-F5872-10-00 | Hose, Brake 1 |
| 16 | 90401-10X03-00 | Bolt, Union |
| 17 | 90201-10X03-00 | Washer, Plate |

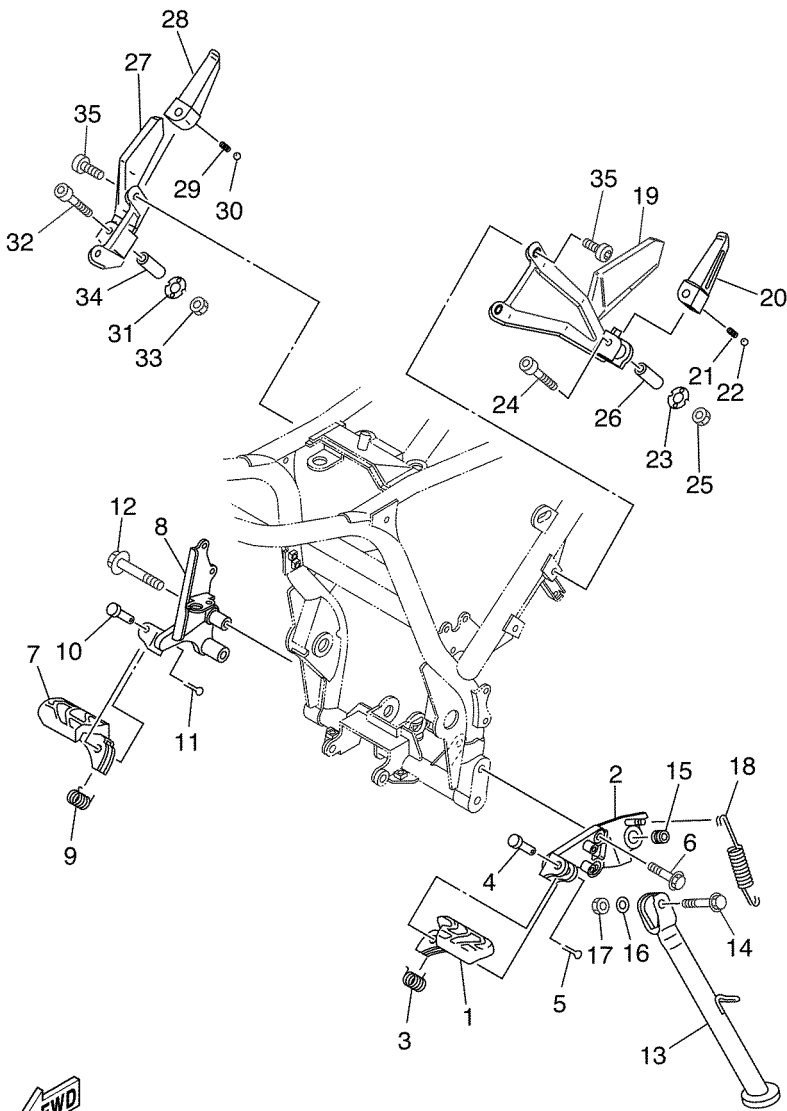 



5VK8300-F340

| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 5VK-27411-00-00 | Footrest 1 |
| 02 | 5VK-F7412-00-00 | Bracket, Footrest 1 |
| 03 | 90508-20801-00 | Spring, Torsion |
| 04 | 90240-10800-00 | Pin, Clevis |
| 05 | 91401-25020-00 | Pin, Cotter |
| 06 | 90105-10813-00 | Bolt, Flange |
| 07 | 5VK-27421-00-00 | Footrest 2 |
| 08 | 5VK-F7422-00-00 | Bracket, Footrest 2 |
| 09 | 90508-20802-00 | Spring, Torsion |
| 10 | 90240-10800-00 | Pin, Clevis |
| 11 | 91401-25020-00 | Pin, Cotter |
| 12 | 90105-10811-00 | Bolt, Flange |
| 13 | 5VK-F7311-00-00 | Stand, Side |
| 14 | 90105-10814-00 | Bolt, Flange |
| 15 | 90387-10020-00 | Collar |
| 16 | 90201-101J1-00 | Washer, Plate |
| 17 | 95617-10100-00 | Nut, U |
| 18 | 90506-20002-00 | Spring, Tension |
| 19 | 5VK-F741L-10-00 | Bracket 4 |
| 20 | 5VK-F7431-00-00 | Footrest, Rear 1 |
| 21 | 90501-12X02-00 | Spring, Compression |
| 22 | 93501-04X00-00 | Ball |
| 23 | 5VK-F7437-00-00 | Washer, Special |
| 24 | 5VK-F7416-00-00 | Bolt, Footrest |
| 25 | 95604-06200-00 | Nut, U Flange |
| 26 | 90387-06X37-00 | Collar |
| 27 | 5VK-F742L-10-00 | Bracket 5 |
| 28 | 5VK-F7441-00-00 | Footrest, Rear 2 |
| 29 | 90501-12X02-00 | Spring, Compression |
| 30 | 93501-04X00-00 | Ball |
| 31 | 5VK-F7437-00-00 | Washer, Special |
| 32 | 5VK-F7416-00-00 | Bolt, Footrest |
| 33 | 95604-06200-00 | Nut, U Flange |
| 34 | 90387-06X37-00 | Collar |
| 35 | 90110-08127-00 | Bolt, Hexagon Socket Head |

REAR MASTER CYLINDER

| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 5VK-F7211-00-00 | Pedal, Brake |
| 02 | 90506-20369-00 | Spring, Tension |
| 03 | 5VK-2583V-00-00 | Rr. Master Cylinder Assy. |
| 04 | 3BN-W0042-50-00 | • . Cylinder Kit, Master |
| 05 | 93210-15620-00 | • . O-ring |
| 06 | 2VN-25866-00-00 | • . Circlip |
| 07 | 4ML-2582A-50-00 | • . Joint |
| 08 | 2YK-27222-00-00 | • . Joint |
| 09 | 4SS-27218-00-00 | • . Nut |
| 10 | 3KW-27234-00-00 | • . Pin, Brake Rod |
| 11 | 5JJ-25894-00-00 | Tank, Reservoir |
| 12 | 3XP-25852-50-00 | Cap, Reservoir |
| 13 | 2VN-25854-00-00 | Diaphragm, Reservoir |
| 14 | 2VN-25855-00-00 | Bush,diaphragm |
| 15 | 5VK-25895-00-00 | Hose, Reservoir |
| 16 | 90467-12085-00 | Clip |
| 17 | 90119-06044-00 | Bolt, With Washer |
| 18 | 5VK-F117M-10-00 | Cover 2 |
| 19 | 90109-085G6-00 | Bolt |
| 20 | 90240-08124-00 | Pin, Clevis |
| 21 | 90201-08083-00 | Washer, Plate |
| 22 | 91401-16012-00 | Pin, Cotter |
| 23 | 5VK-F5873-00-00 | Hose, Brake 2 |
| 24 | 90401-10X03-00 | Bolt, Union |
| 25 | 90201-10X03-00 | Washer, Plate |
| 26 | 5VK-F5875-00-00 | Holder, Brake Hose 1 |
| 27 | 95027-06012-00 | Bolt, Flange |
| 28 | 5VK-F117F-10-00 | Cover |
| 29 | 90149-06298-00 | Screw |

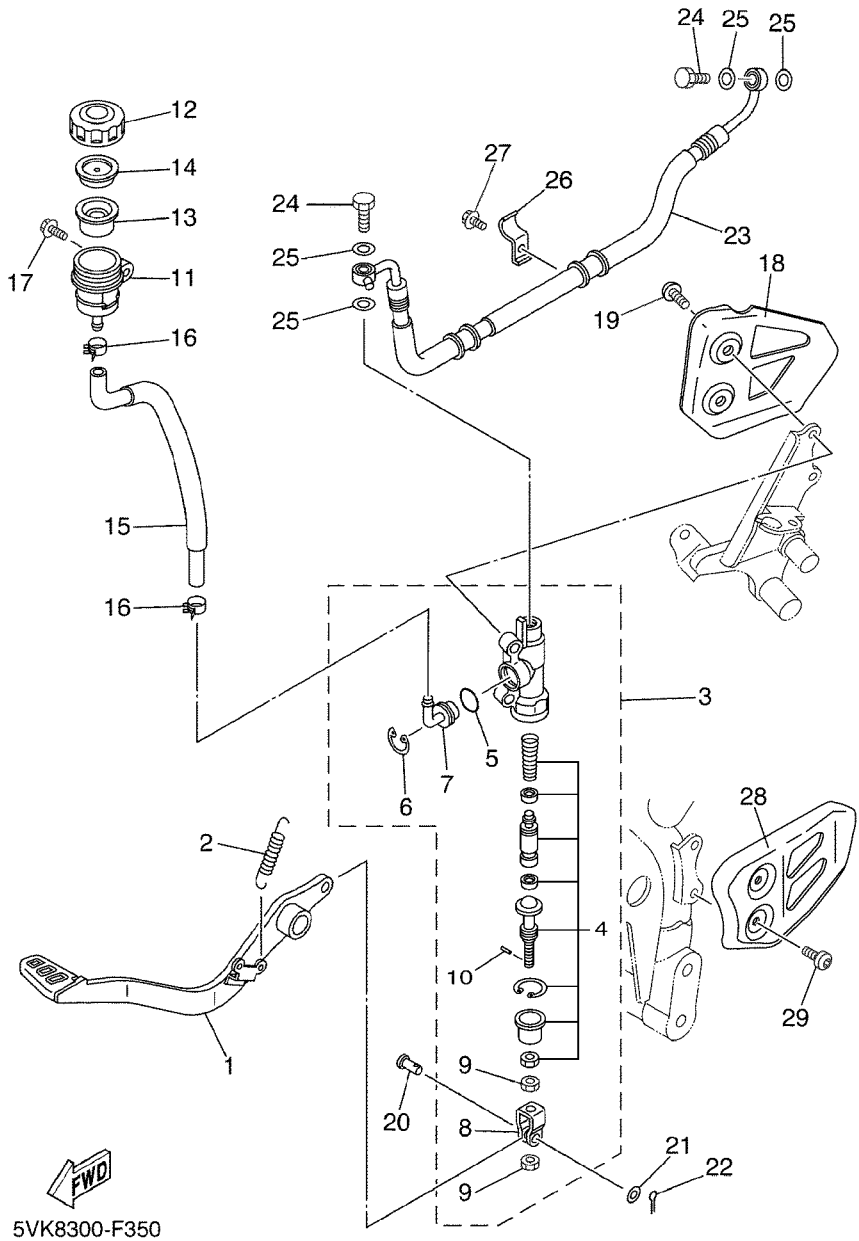 


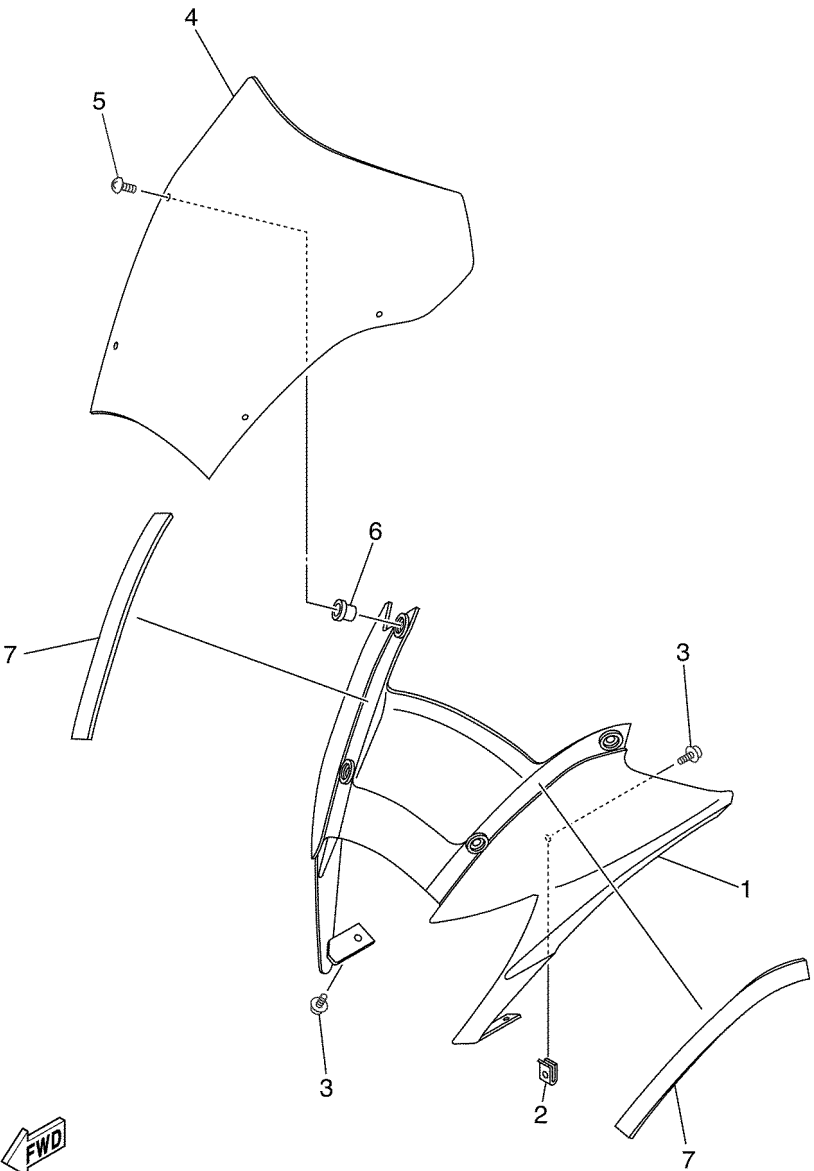 


| Ref No | Part No | Description |
|--------|-----------------|--------------------|
| 01 | 5VK-F8351-00-00 | Body, Cowling |
| 01 | 5VK-F8351-10-00 | Body, Cowling |
| 02 | 90183-05061-00 | Nut, Spring |
| 03 | 90159-05083-00 | Screw, With Washer |
| 04 | 5VK-F8381-10-00 | Windshield |
| 04 | 5VK-F8381-20-00 | Windshield |
| 05 | 90150-05023-00 | Screw, Round Head |
| 06 | 90179-05523-00 | Nut |
| 07 | 5VK-2837K-00-00 | Damper 6 |


5VK8300-F360

| Ref No | Part No | Description |
|--------|-----------------|-------------------|
| 01 | 5VK-81410-00-00 | Stator Assy |
| 02 | 5VK-81450-10-00 | Rotor Assy |
| 03 | 92017-06030-00 | Bolt, Button Head |
| 04 | 91317-05014-00 | Bolt |
| 05 | 90201-05X08-00 | Washer, Plate |

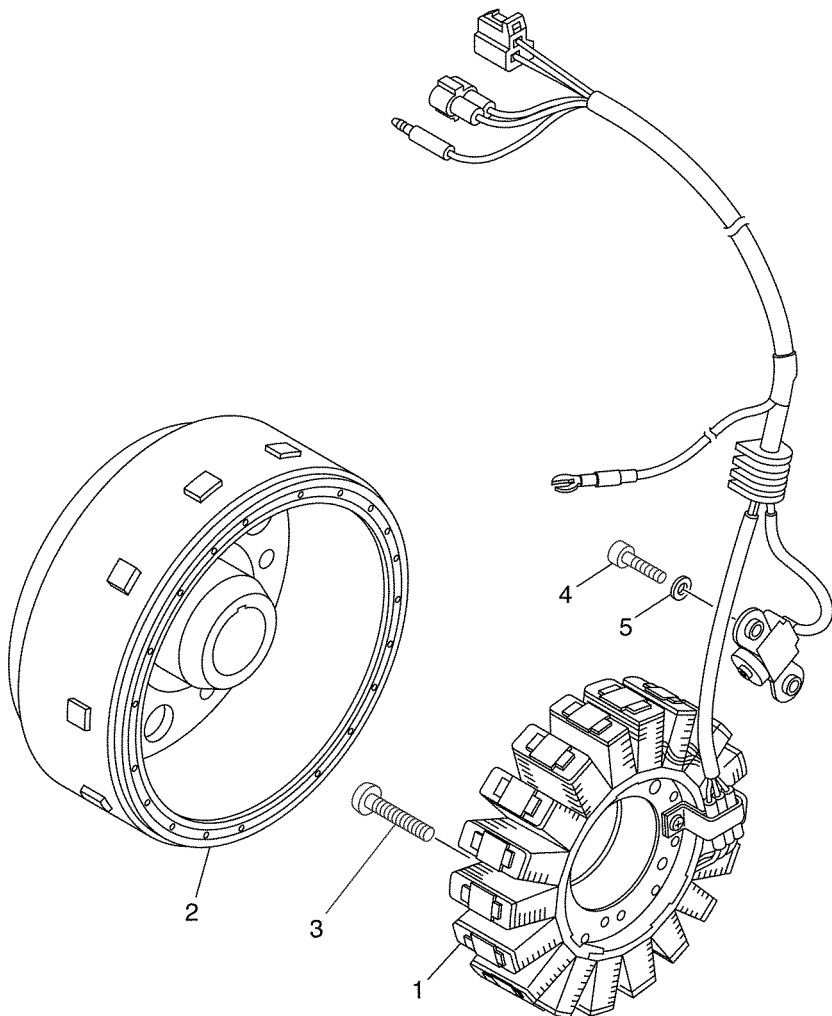 


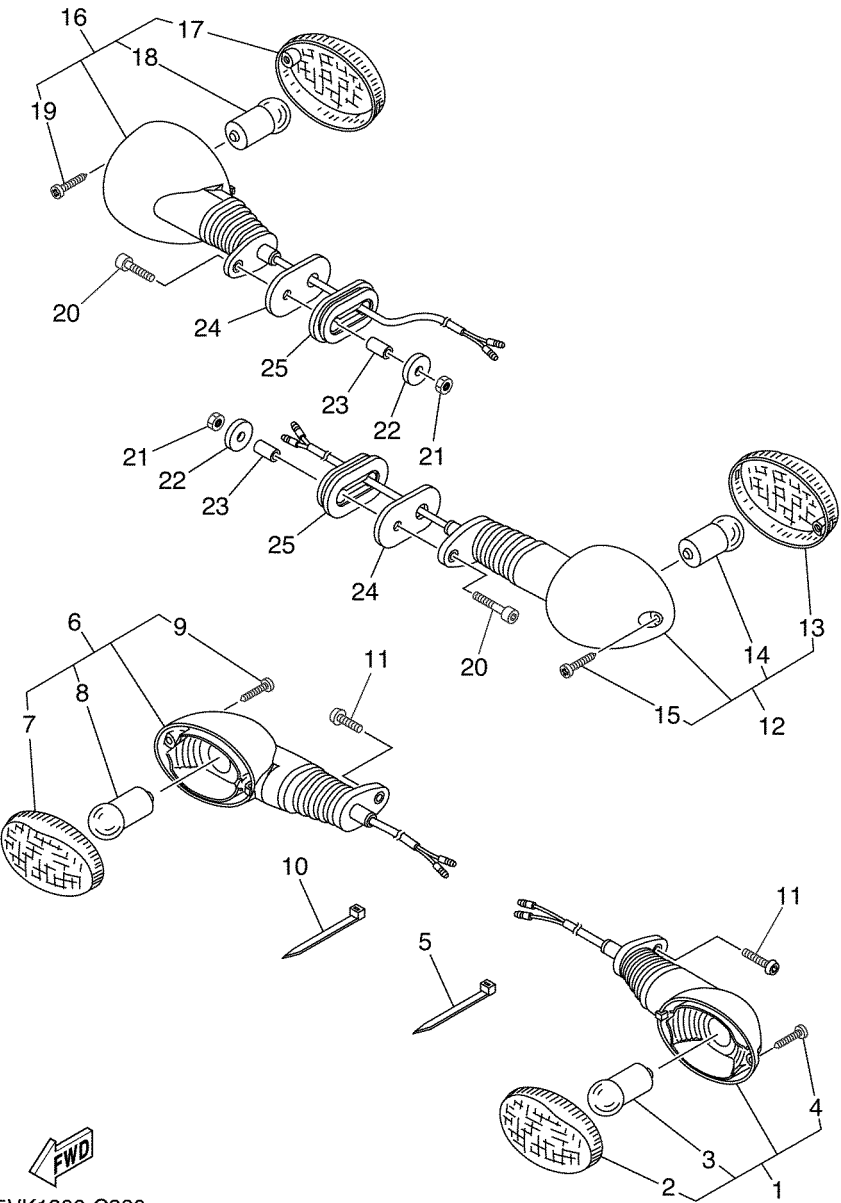 


5VK1300-C380

| Ref No | Part No | Description |
|--------|-----------------|----------------------------|
| 01 | 5VK-H3310-00-00 | Front Flasher Light Assy 1 |
| 02 | 5VK-H333A-00-00 | • . Lens Comp |
| 03 | 5VK-H3311-00-00 | • . Bulb, Flasher |
| 04 | 5VK-H3333-00-00 | • . Screw, Lens Fitting |
| 05 | 90464-16061-00 | Clamp |
| 06 | 5VK-H3320-00-00 | Front Flasher Light Assy 2 |
| 07 | 5VK-H333A-00-00 | • . Lens Comp |
| 08 | 5VK-H3311-00-00 | • . Bulb, Flasher |
| 09 | 5VK-H3333-00-00 | • . Screw, Lens Fitting |
| 10 | 90464-16061-00 | Clamp |
| 11 | 92017-06014-00 | Bolt, Button Head |
| 12 | 5VK-H3330-00-00 | Rear Flasher Light Assy 1 |
| 13 | 5VK-H333A-00-00 | • . Lens Comp |
| 14 | 5VK-H3311-00-00 | • . Bulb, Flasher |
| 15 | 5VK-H3333-00-00 | • . Screw, Lens Fitting |
| 16 | 5VK-H3340-00-00 | Rear Flasher Light Assy 2 |
| 17 | 5VK-H333A-00-00 | • . Lens Comp |
| 18 | 5VK-H3311-00-00 | • . Bulb, Flasher |
| 19 | 5VK-H3333-00-00 | • . Screw, Lens Fitting |
| 20 | 91317-06035-00 | Bolt |
| 21 | 95607-06100-00 | Nut, U |
| 22 | 90201-06026-00 | Washer, Plate |
| 23 | 90387-06088-00 | Collar |
| 24 | 5VK-83359-00-00 | Washer, Special |
| 25 | 5VK-83345-00-00 | Plug, Blind |

| Ref No | Part No | Description |
|--------|-----------------|----------------------|
| 01 | 5VK-83500-40-00 | Speedometer Complete |
| 01 | 5VK-83500-50-00 | Speedometer Complete |
| 02 | 90164-05014-00 | Screw, Tapping |
| 03 | 90480-14555-00 | Grommet |
| 04 | 5VK-H3519-00-00 | Bracket, Meter |
| 05 | 92017-06014-00 | Bolt, Button Head |
| 06 | 90464-12089-00 | Clamp |

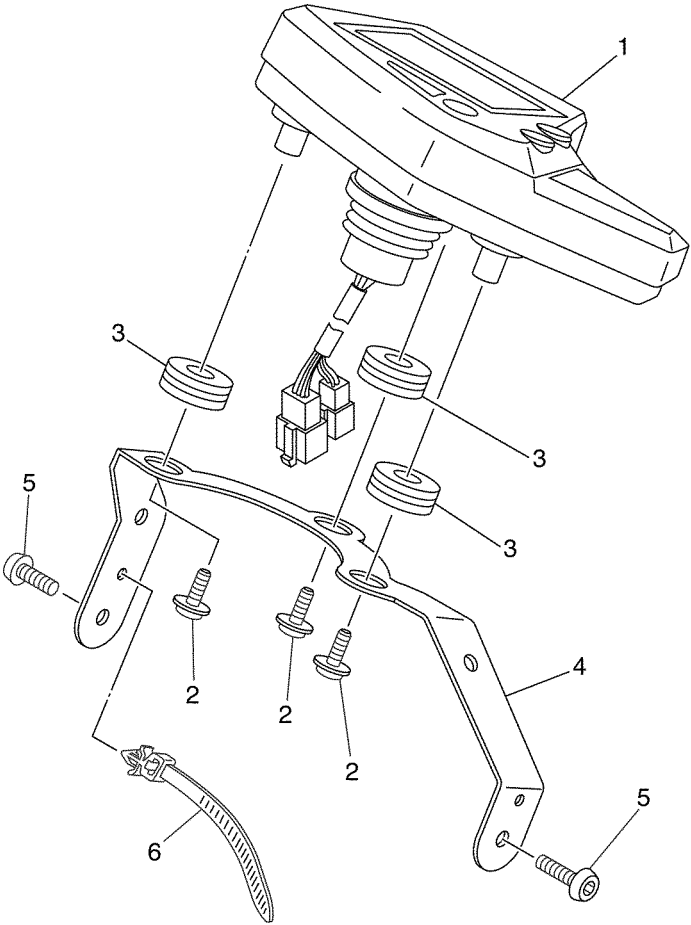 


5VK1300-C390

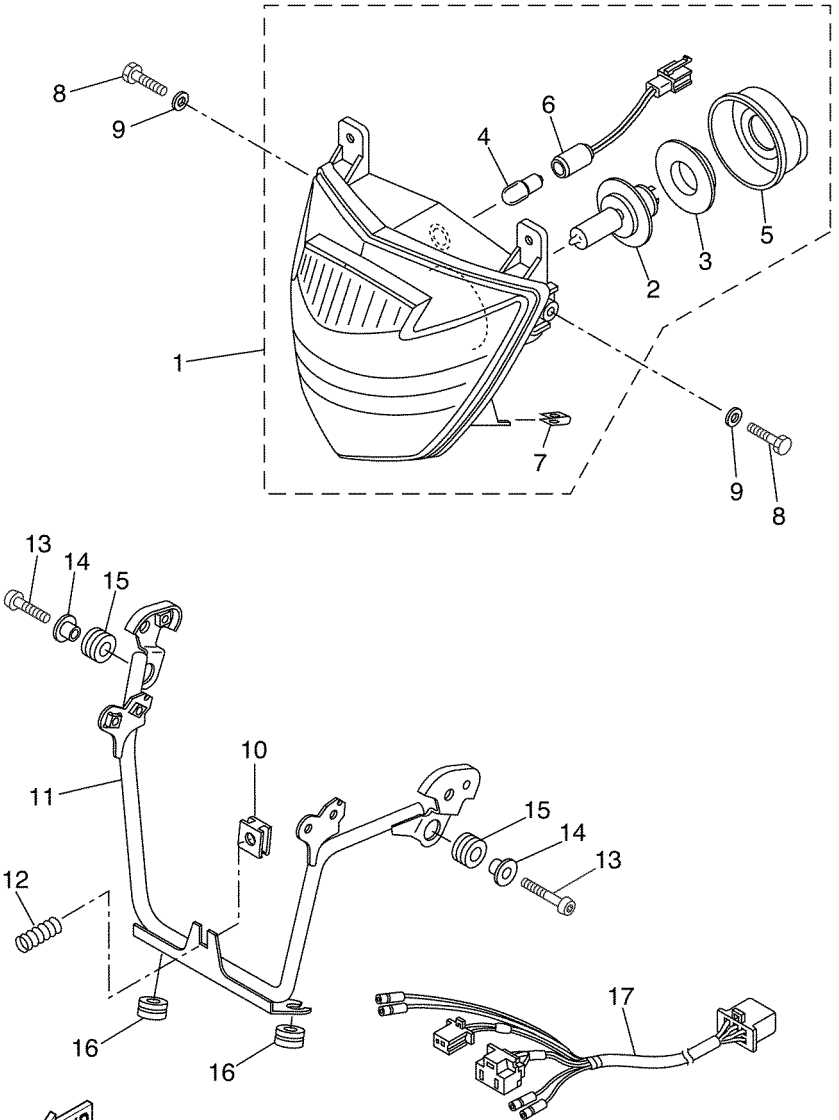 


1D21300-C401



| Ref No | Part No | Description |
|--------|-----------------|----------------------|
| 01 | 5VK-H410A-01-00 | Headlight Unit Comp. |
| 01 | 5VK-H410A-11-00 | Headlight Unit Comp. |
| 02 | 5VK-H4314-00-00 | • . Bulb, Headlight |
| 03 | 5VK-H4393-00-00 | • . Holder, Bulb |
| 04 | 3WW-H4347-00-00 | • . Bulb (12v-5w) |
| 05 | 5VK-H4397-00-00 | • . Cover, Socket |
| 06 | 5VK-H4312-00-00 | • . Cord Assy |
| 07 | 90183-05808-00 | • . Nut, Spring |
| 08 | 90101-06815-00 | Bolt |
| 09 | 90201-06839-00 | Washer, Plate |
| 10 | 5VK-H4334-00-00 | Nut, Adjusting |
| 11 | 5VK-H4118-00-00 | Stay, Headlight 1 |
| 12 | 5VK-H4332-00-00 | Spring, Screw |
| 13 | 92017-06020-00 | Bolt, Button Head |
| 14 | 90387-065G0-00 | Collar |
| 15 | 90480-15058-00 | Grommet |
| 16 | 90480-15316-00 | Grommet |
| 17 | 5VK-H4359-10-00 | Cord, Headlight |

TAILLIGHT

| Ref No | Part No | Description |
|--------|-----------------|-----------------------------|
| 01 | 5VK-H4710-10-00 | Taillight Unit Assy |
| 02 | 5VK-H4721-00-00 | • . Lens, Taillight |
| 03 | 5VK-H4743-00-00 | • . Lens, Licence Light |
| 04 | 5VK-H4714-00-00 | • . Bulb (bay15d 12v-21/5w) |
| 05 | 5VK-H4735-00-00 | • . Cord Assy |
| 06 | 5SE-H4724-00-00 | • . Screw, Lens Fitting |
| 07 | 90480-14329-00 | Grommet |
| 08 | 90387-065G0-00 | Collar |
| 09 | 90201-06057-00 | Washer, Plate |
| 10 | 95607-06200-00 | Nut, Self U-flange |
| 11 | 3NC-H5130-00-00 | Rear Reflector Assy |
| 12 | 95607-05200-00 | Nut, U Flange |

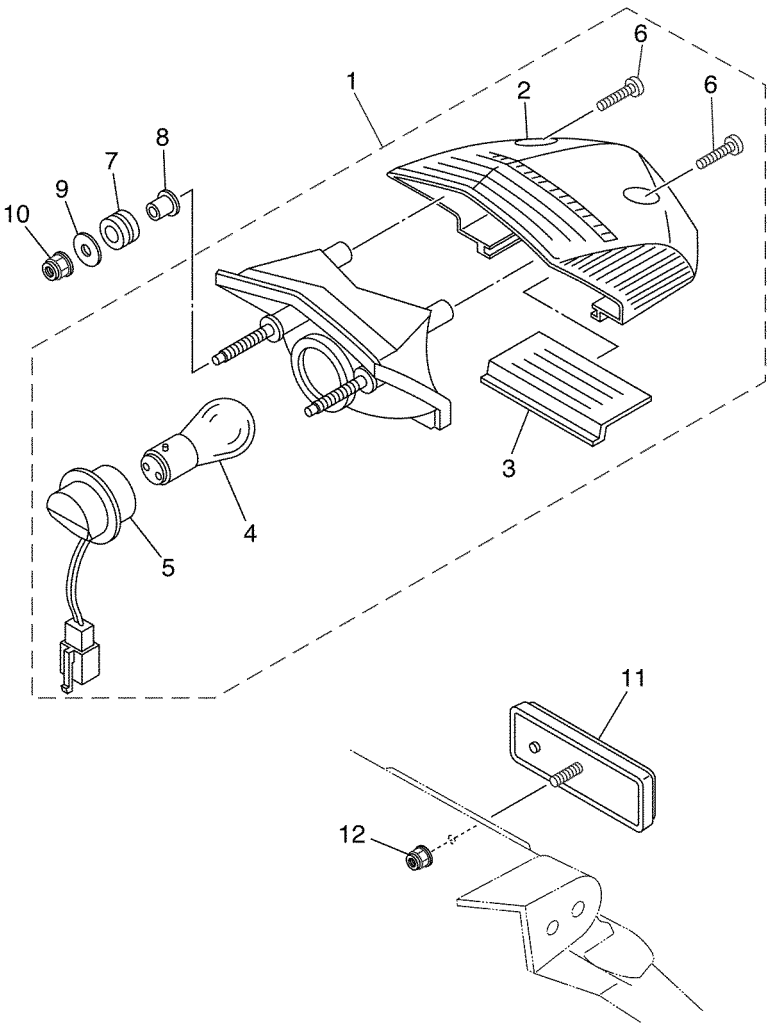 


5VK1300-C410

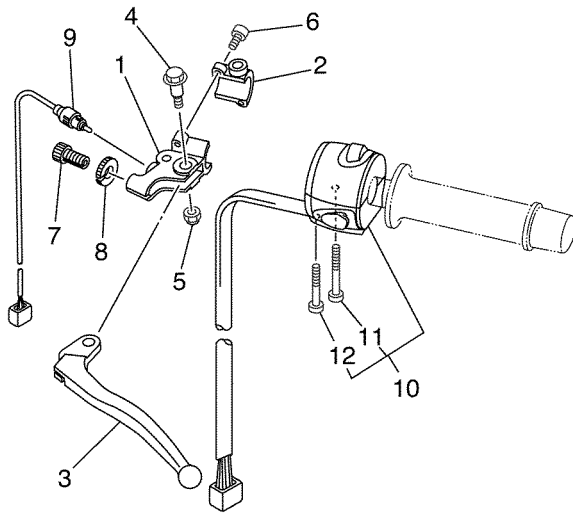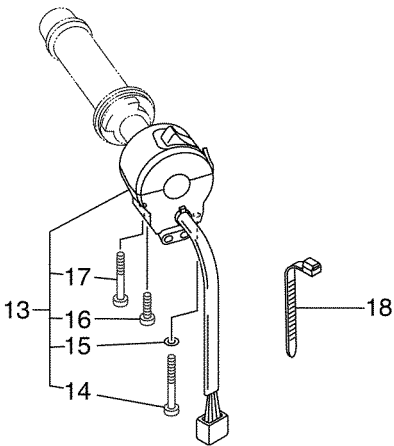  

| Ref No | Part No | Description |
|--------|-----------------|-----------------------|
| 01 | 1LN-82911-00-00 | Holder, Lever 1 |
| 02 | 33G-82913-01-00 | Holder, Lever Lower 1 |
| 03 | 3FY-83912-01-00 | Lever 1 |
| 04 | 90109-06799-00 | Bolt |
| 05 | 95607-06100-00 | Nut, U |
| 06 | 91317-05020-00 | Bolt |
| 07 | 90123-08046-00 | Bolt |
| 08 | 90179-08148-00 | Nut |
| 09 | 5VK-82917-00-00 | Switch |
| 10 | 5VK-83969-00-00 | Switch, Handle 5 |
| 11 | 98507-05030-00 | • . Screw, Pan Head |
| 12 | 98507-05045-00 | • . Screw, Pan Head |
| 13 | 5VK-83975-00-00 | Switch, Handle 2 |
| 14 | 98507-05055-00 | • . Screw, Pan Head |
| 15 | 92907-05600-00 | • . Washer, Plate |
| 16 | 98507-05045-00 | • . Screw, Pan Head |
| 17 | 98507-05020-00 | • . Screw, Pan Head |
| 18 | 90464-25004-00 | Clamp |




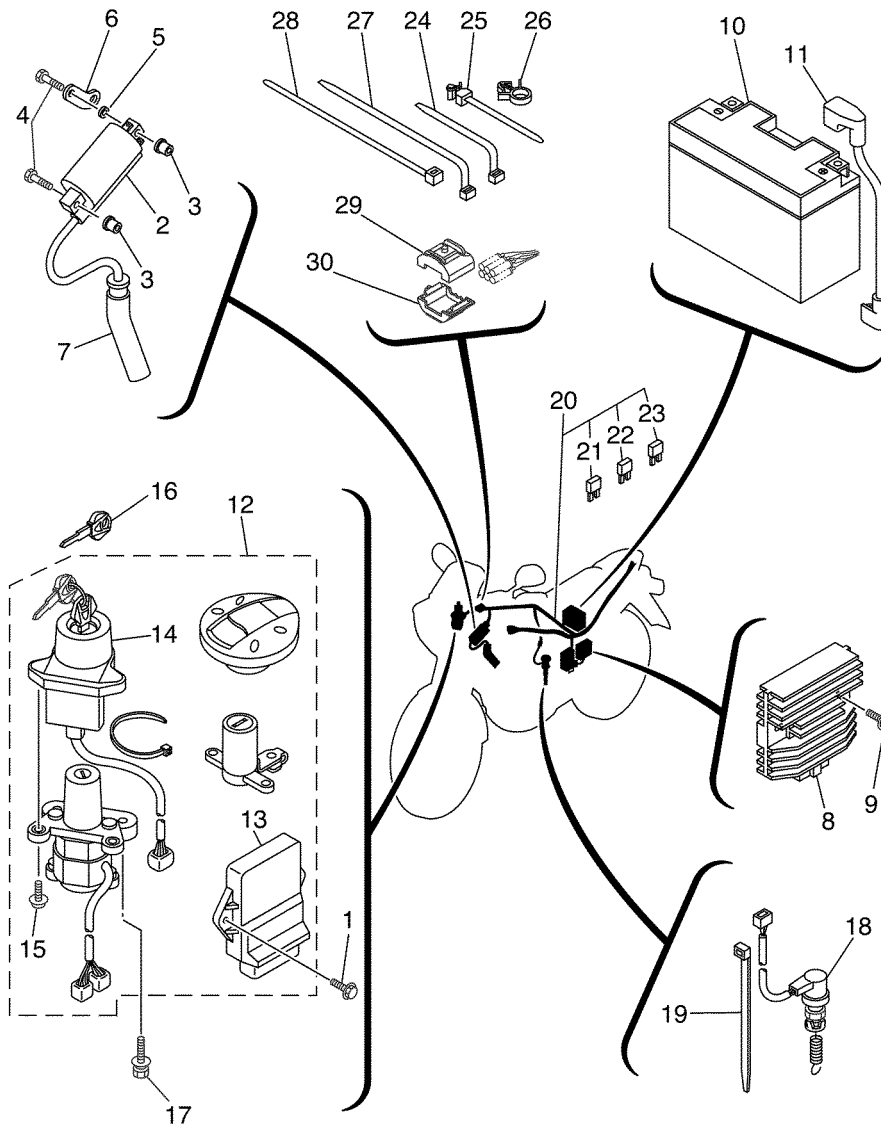 

5VK8300-F430

ELECTRICAL 1

| Ref No | Part No | Description |
|--------|-----------------|------------------------------|
| 01 | 90119-06192-00 | Bolt, With Washer |
| 02 | 4GV-82310-00-00 | Ignition Coil Assy |
| 03 | 90179-05523-00 | Nut |
| 04 | 97007-05025-00 | Bolt |
| 05 | 90201-05556-00 | Washer, Plate |
| 06 | 5VK-82312-00-00 | Holder, Coil Fitting |
| 07 | 5VK-82370-00-00 | Plug Cap Assy |
| 08 | 5SL-81960-00-00 | Rectifier & Regulator Assy |
| 09 | 95027-06020-00 | Bolt, Flange |
| 10 | 5FL-82100-01-00 | Battery Assy (gt9b-4) |
| 11 | 5VK-H2115-00-00 | Wire, Plus Lead |
| 12 | 5VK-W8250-10-00 | Main Sw. Immobilizer Kit |
| 13 | 5VK-8591A-10-00 | • . Engine Control Unit Assy |
| 14 | 5VS-8255P-00-00 | • . Immobilizer. Unit Comp. |
| 15 | 5SL-82113-00-00 | • . Screw |
| 16 | 5SL-82511-08-00 | Blank Key |
| 17 | 90109-080G5-00 | Bolt |
| 18 | 5VK-82530-00-00 | Stop Switch Assy |
| 19 | 90464-16061-00 | Clamp |
| 20 | 5VK-H2590-20-00 | Wire Harness Assy |
| 21 | 5JJ-82151-00-00 | • . Fuse (7.5a-bl) |
| 22 | 5JJ-82151-30-00 | • . Fuse (10a-bl) |
| 23 | 5JJ-82151-20-00 | • . Fuse (20a-bl) |
| 24 | 90464-13077-00 | Clamp |
| 25 | 90464-12089-00 | Clamp |
| 26 | 90464-15157-00 | Clamp |
| 27 | 90464-15195-00 | Clamp |
| 28 | 1UA-82591-00-00 | Band |
| 29 | 5VS-8258J-00-00 | Housing, Connecteur 1 |
| 30 | 5VS-8259J-00-00 | Housing, Connecteur 2 |

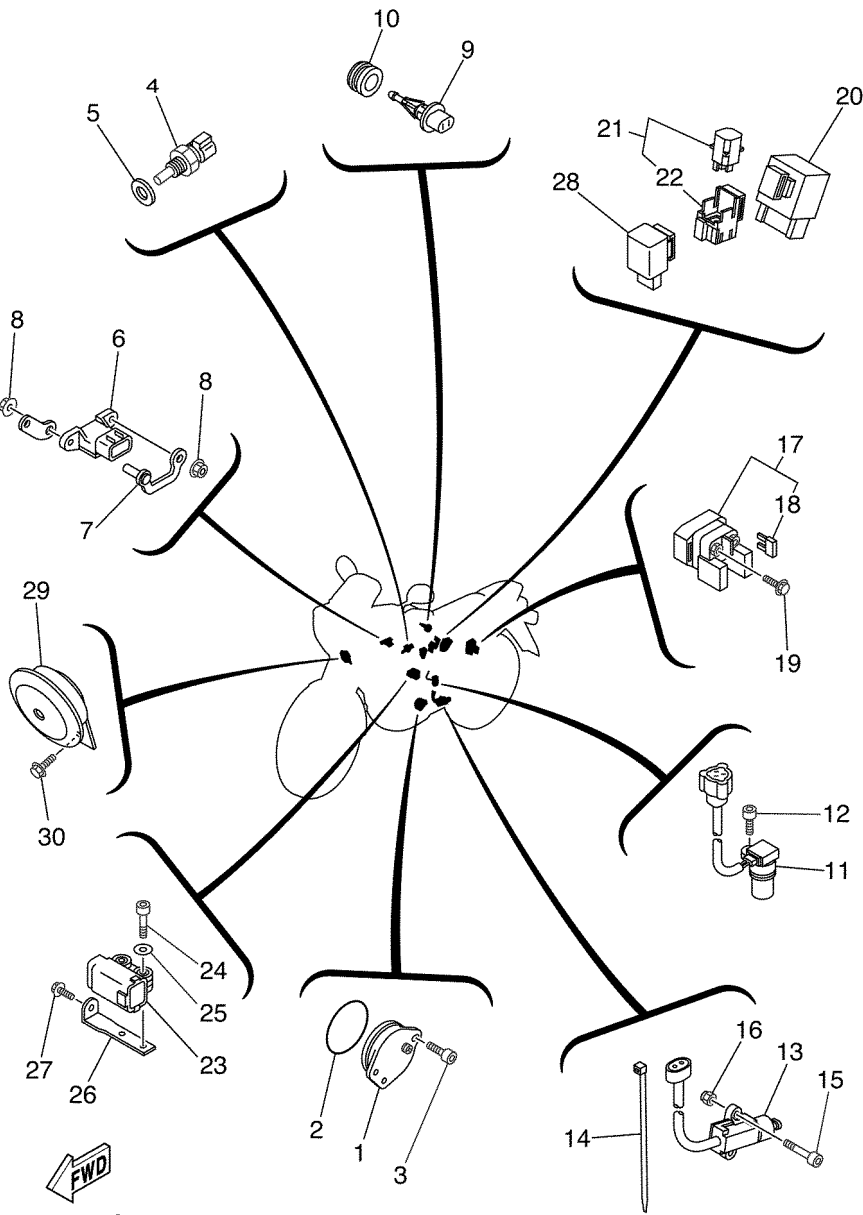 

5VK1300-C441

| Ref No | Part No | Description |
|--------|-----------------|---------------------------|
| 01 | 1AE-82540-00-00 | Neutral Switch Assy |
| 02 | 93210-29X00-00 | O-ring |
| 03 | 90110-06122-00 | Bolt, Hexagon Socket Head |
| 04 | 5PS-85790-00-00 | Thermosensor Assy |
| 05 | 90430-12X00-00 | Gasket |
| 06 | 5PS-82380-00-00 | Sensor, Pressure |
| 07 | 5VK-82388-00-00 | Plate |
| 08 | 95707-06500-00 | Nut, Flange |
| 09 | 5VU-85886-00-00 | Sensor, Air Temperature |
| 10 | 5CA-14435-00-00 | Grommet |
| 11 | 5LP-83755-01-00 | Sensor, Speed |
| 12 | 91317-06014-00 | Bolt |
| 13 | 5RT-82566-50-00 | Switch, Side Stand |
| 14 | 90464-16061-00 | Clamp |
| 15 | 91317-05035-00 | Bolt |
| 16 | 95607-05100-00 | Nut, U |
| 17 | 4SV-81940-12-00 | Starter Relay Assy |
| 18 | 1AE-82151-00-00 | • . Fuse (30a-bl) |
| 19 | 95027-06008-00 | Bolt, Flange |
| 20 | 5VK-81950-40-00 | Relay Assy |
| 21 | 5JJ-81950-20-00 | Relay Assy |
| 22 | 5JJ-81952-00-00 | • . Holder, Relay |
| 23 | 5PS-82576-01-00 | Lean Angle Sensor |
| 24 | 91317-04025-00 | Bolt |
| 25 | 90201-047A2-00 | Washer, Plate |
| 26 | 5VK-F1453-00-00 | Bracket, Switch |
| 27 | 95807-06016-00 | Bolt, Flange |
| 28 | 4GY-83350-00-00 | Flasher Relay Assy |
| 29 | 5VK-H3371-00-00 | Horn |
| 30 | 95027-06010-00 | Bolt, Flange |