



| Ref No | Part No         | Description                 |
|--------|-----------------|-----------------------------|
| 01     | 5VK-E1101-00-00 | Cylinder Head Assy          |
| 02     | 4G0-11133-11-00 | • . Guide, Valve 1          |
| 03     | 93440-10085-00  | • . Circlip                 |
| 04     | 95617-08618-00  | Bolt, Stud                  |
| 05     | 5VK-11181-00-00 | Gasket, Cylinder Head 1     |
| 06     | 90105-09002-00  | Bolt, Flange                |
| 07     | 90105-09004-00  | Bolt, Flange                |
| 08     | 90105-09003-00  | Bolt, Flange                |
| 09     | 91317-06030-00  | Bolt                        |
| 10     | 90201-096J9-00  | Washer, Plate               |
| 11     | 94701-00X09-00  | Plug, Spark (ngk Cr7e)      |
| 12     | 93612-16X00-00  | Pin, Dowel                  |
| 13     | 5VK-E1185-00-00 | Cover, Cylinder Head Side 1 |
| 14     | 93210-96X00-00  | O-ring                      |
| 15     | 90105-06X06-00  | Bolt, Flange                |
| 16     | 5VK-E1186-00-00 | Cover, Cylinder Head Side 2 |
| 17     | 93210-78X00-00  | O-ring                      |
| 18     | 91317-06018-00  | Bolt                        |



| Ref No | Part No         | Description      |
|--------|-----------------|------------------|
| 01     | 5VK-11311-00-00 | Cylinder 1       |
| 02     | 5VK-11351-00-00 | Gasket, Cylinder |
| 03     | 90105-10078-00  | Bolt, Flange     |
| 04     | 90105-10077-00  | Bolt, Flange     |
| 05     | 90201-101A4-00  | Washer, Plate    |
| 06     | 91317-06040-00  | Bolt             |

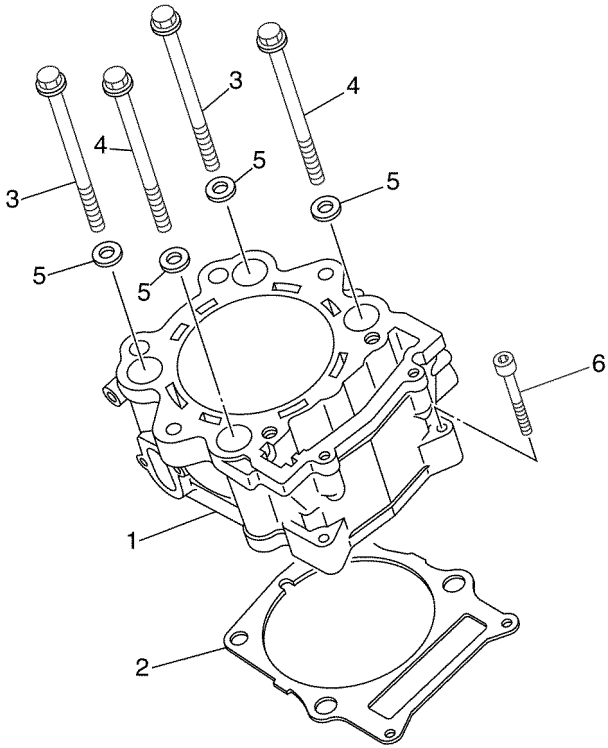

5VK1300-C020

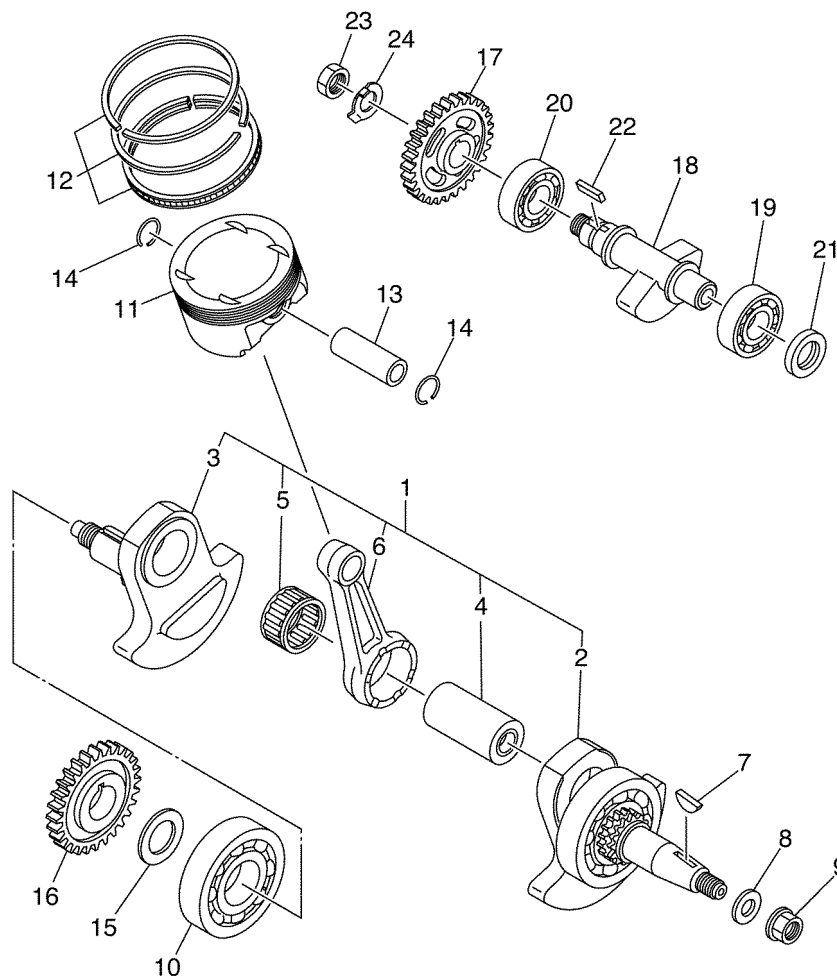


5VK1300-C030

| Ref No | Part No         | Description           |
|--------|-----------------|-----------------------|
| 01     | 5VK-11400-00-00 | Crankshaft Assy       |
| 02     | 5VK-11401-09-00 | • . Crank Sub Assy 1  |
| 03     | 5VK-11422-00-00 | • . Crank 2           |
| 04     | 5VK-11681-00-00 | • . Pin, Crank 1      |
| 05     | 93310-84010-00  | • . Bearing           |
| 06     | 5VK-11651-00-00 | • . Rod, Connecting   |
| 07     | 90280-05001-00  | Key, Woodruff         |
| 08     | 90201-16013-00  | Washer, Plate         |
| 09     | 90179-16448-00  | Nut                   |
| 10     | 93306-308Y0-00  | Bearing               |
| 11     | 5VK-11631-00-00 | Piston (std)          |
| 12     | 5VK-11603-00-00 | Piston Ring Set (std) |
| 13     | 5VK-11633-00-00 | Pin, Piston           |
| 14     | 93450-24824-00  | Circlip               |
| 15     | 90201-30X00-00  | Washer, Plate         |
| 16     | 5VK-11536-00-00 | Gear, Drive           |
| 17     | 5VK-11531-00-00 | Gear, Balance Weight  |
| 18     | 5VK-11454-00-00 | Weight 1              |
| 19     | 93306-305YA-00  | Bearing               |
| 20     | 93306-305X4-00  | Bearing               |
| 21     | 93101-25106-00  | Oil Seal              |
| 22     | 90282-05058-00  | Key, Straight         |
| 23     | 90170-18003-00  | Nut                   |
| 24     | 90215-18X00-00  | Washer, Lock          |


**VALVE**

| Ref No | Part No         | Description            |
|--------|-----------------|------------------------|
| 01     | 5VK-12111-00-00 | Valve, Intake          |
| 02     | 5VK-12121-00-00 | Valve, Exhaust         |
| 03     | 5VK-12113-00-00 | Spring, Valve Inner    |
| 04     | 3YF-12116-00-00 | Seat, Valve Spring     |
| 05     | 5H0-12119-00-00 | Seal, Valve Stem       |
| 06     | 3YF-12117-01-00 | Retainer, Valve Spring |
| 07     | 4G0-12118-00-00 | Cotter, Valve          |
| 08     | 5VK-12151-00-00 | Arm, Valve Rocker      |
| 09     | 5VK-12161-00-00 | Arm, Valve Rocker 2    |
| 10     | 5VK-12146-00-00 | Shaft, Rocker          |
| 11     | 5BP-12159-01-00 | Screw, Valve Adjusting |
| 12     | 90170-06128-00  | Nut                    |

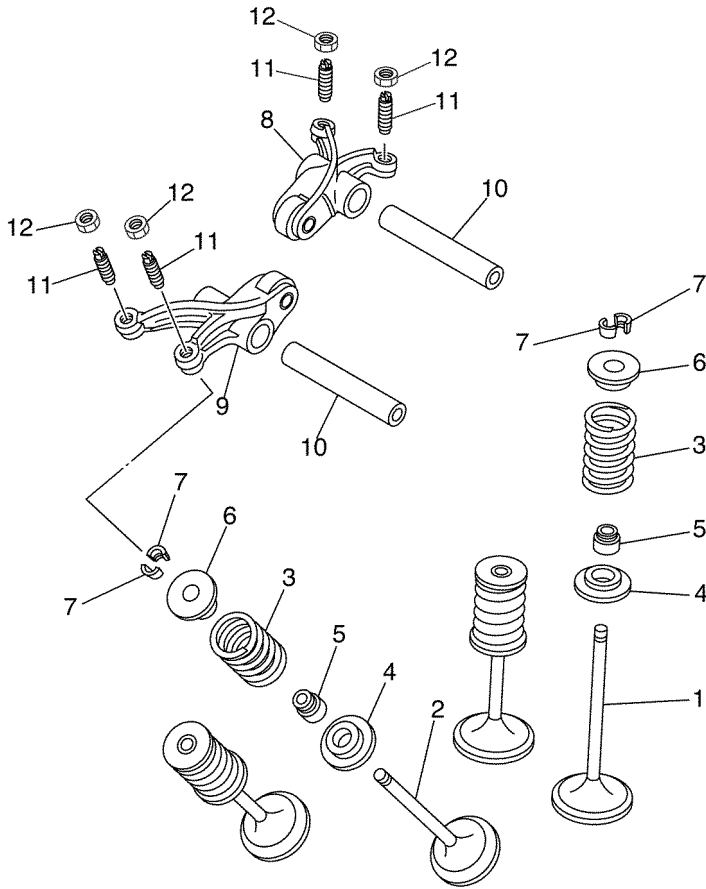


5VK1300-C040

| Ref No | Part No         | Description                 |
|--------|-----------------|-----------------------------|
| 01     | 5VK-E2170-00-00 | Camshaft Assy 1             |
| 02     | 93306-072Y1-00  | • . Bearing                 |
| 03     | 5VK-12284-00-00 | Pin, Decompression Lever    |
| 04     | 5VK-12290-00-00 | Lever, Decompression Spring |
| 05     | 5VK-12280-00-00 | Decompression Assy          |
| 06     | 5VK-1111F-00-00 | Plate                       |
| 07     | 95027-06012-00  | Bolt, Flange                |
| 08     | 90105-07004-00  | Bolt, Flange                |
| 09     | 94591-57126-00  | Chain                       |
| 10     | 5VK-12231-00-00 | Guide, Stopper 1            |
| 11     | 5VK-12241-00-00 | Guide, Stopper 2            |
| 12     | 90119-06X05-00  | Bolt, With Washer           |
| 13     | 3TB-12210-00-00 | Tensioner Assy, Cam Chain   |
| 14     | 91317-06025-00  | Bolt                        |
| 15     | 4DW-12213-00-00 | Gasket, Tensioner Case      |

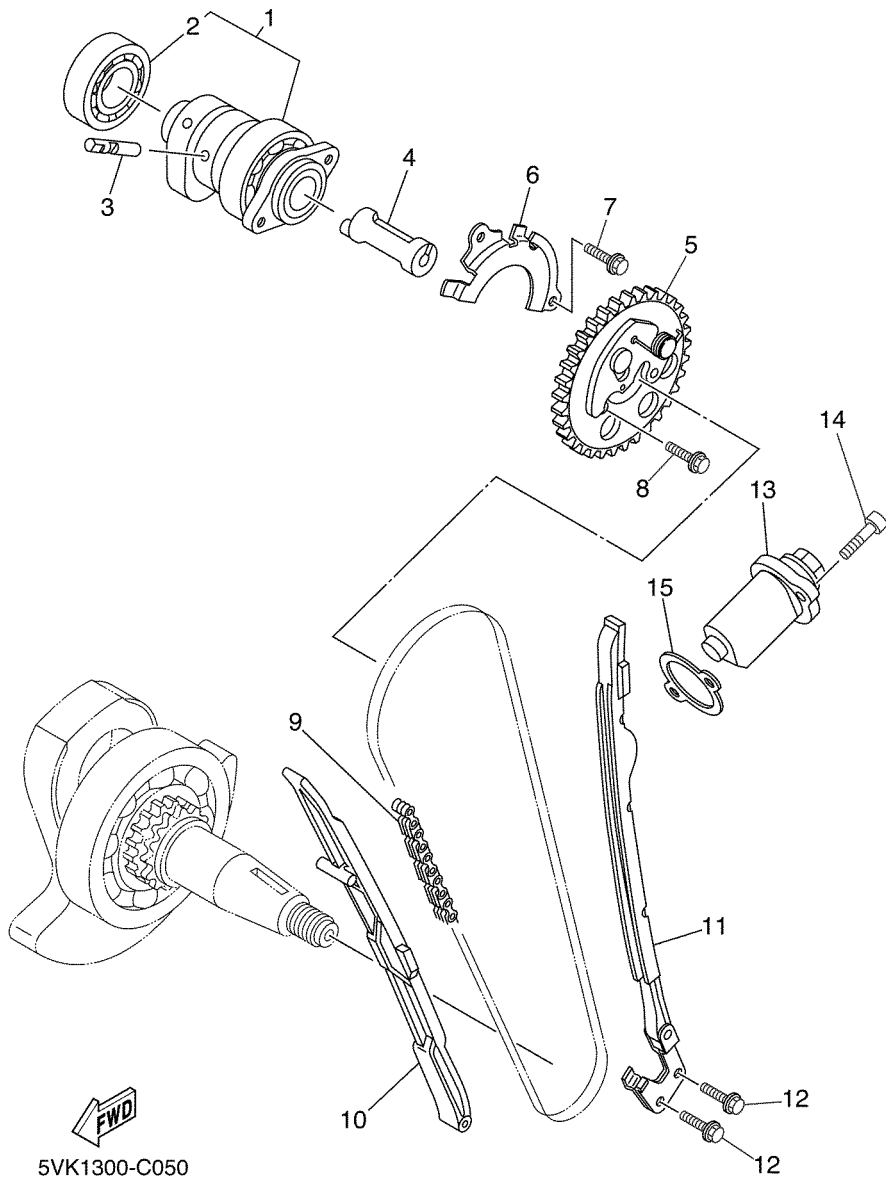


**WATER PUMP**

| Ref No | Part No         | Description             |
|--------|-----------------|-------------------------|
| 01     | 5VK-12436-00-00 | Gear, Drive             |
| 02     | 5VK-12450-00-00 | Impeller Shaft Assy     |
| 03     | 5VK-12422-00-00 | Cover, Housing          |
| 04     | 93210-61750-00  | O-ring                  |
| 05     | 93306-00106-00  | Bearing                 |
| 06     | 5VK-12421-00-00 | Housing, Water Pump     |
| 07     | 95027-06025-00  | Bolt, Flange            |
| 08     | 93101-12173-00  | Oil Seal                |
| 09     | 11H-12438-10-00 | Seal, Mechanical        |
| 10     | 90201-12541-00  | Washer, Plate           |
| 11     | 5VK-12428-00-00 | Gasket, Housing Cover 2 |
| 12     | 90430-06014-00  | Gasket                  |
| 13     | 93603-16219-00  | Pin, Dowel              |
| 14     | 5VK-12459-00-00 | Gear, Impeller Shaft    |
| 15     | 99009-12400-00  | Circlip                 |
| 16     | 5VK-E2469-00-00 | Joint 1                 |
| 17     | 91317-06020-00  | Bolt                    |
| 18     | 93210-33X00-00  | O-ring                  |
| 19     | 5VK-12481-00-00 | Pipe 1                  |
| 20     | 93210-21X00-00  | O-ring                  |
| 21     | 91317-06012-00  | Bolt                    |
| 22     | 5VK-12577-00-00 | Hose 2                  |
| 23     | 90467-29800-00  | Clip                    |
| 24     | 91317-06050-00  | Bolt                    |

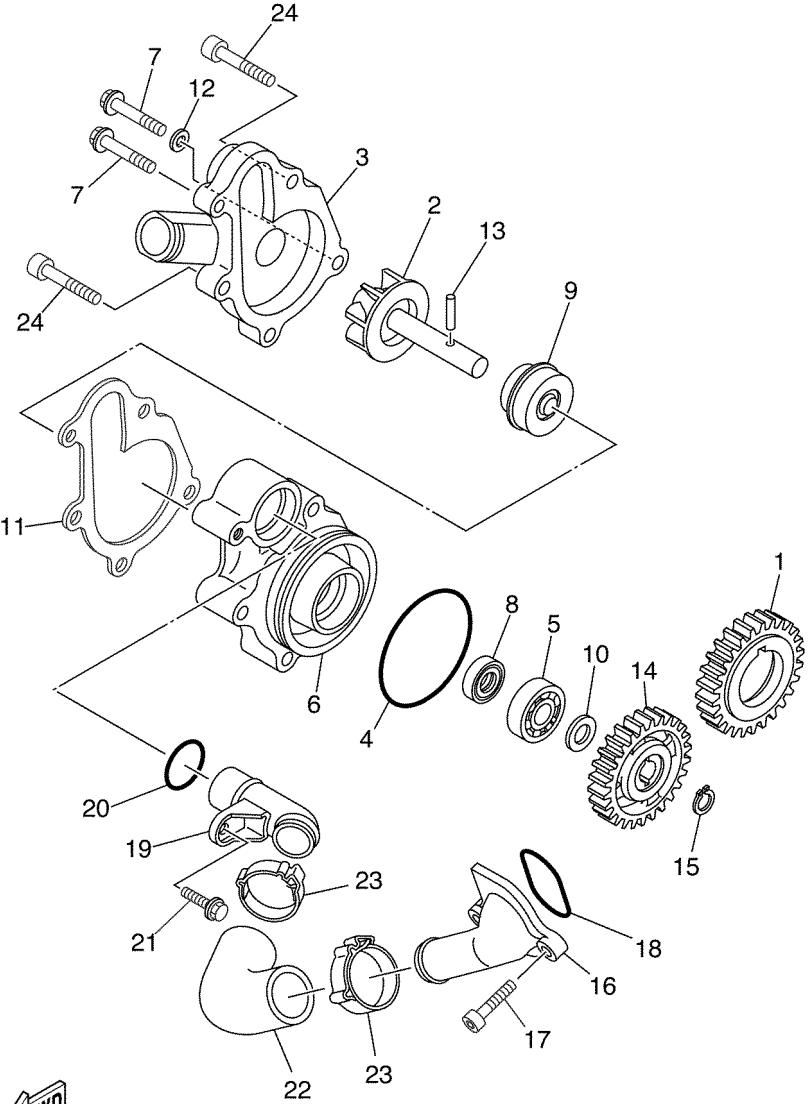


  
5VK1300-C060

| Ref No | Part No         | Description       |
|--------|-----------------|-------------------|
| 01     | 5VK-12410-00-00 | Thermostat Assy   |
| 02     | 5VK-E2413-00-00 | Cover, Thermostat |
| 03     | 90105-06X06-00  | Bolt, Flange      |
| 04     | 93210-41042-00  | O-ring            |
| 05     | 5VK-E2578-10-00 | Hose 3            |
| 06     | 90467-27800-00  | Clip              |
| 07     | 90467-29800-00  | Clip              |
| 08     | 5VK-E2461-00-00 | Radiator Assy     |
| 09     | 5VK-E2405-00-00 | Blower Assy       |
| 10     | 5VK-E2462-00-00 | Cap, Radiator     |
| 11     | 90169-05802-00  | Tapping Screw     |
| 12     | 90169-05801-00  | Tapping Screw     |
| 13     | 5VK-E2437-00-00 | Stopper           |
| 14     | 5VK-E2437-10-00 | Stopper           |
| 15     | 95807-06010-00  | Bolt, Flange      |
| 16     | 5VK-E2498-00-00 | Protector         |
| 17     | 5VK-E2579-10-00 | Hose 4            |
| 18     | 90467-27800-00  | Clip              |
| 19     | 90467-29800-00  | Clip              |
| 20     | 90480-18276-00  | Grommet           |
| 21     | 90387-06042-00  | Collar            |
| 22     | 97507-06525-00  | Bolt, With Washer |
| 23     | 1FK-84527-00-00 | Damper            |

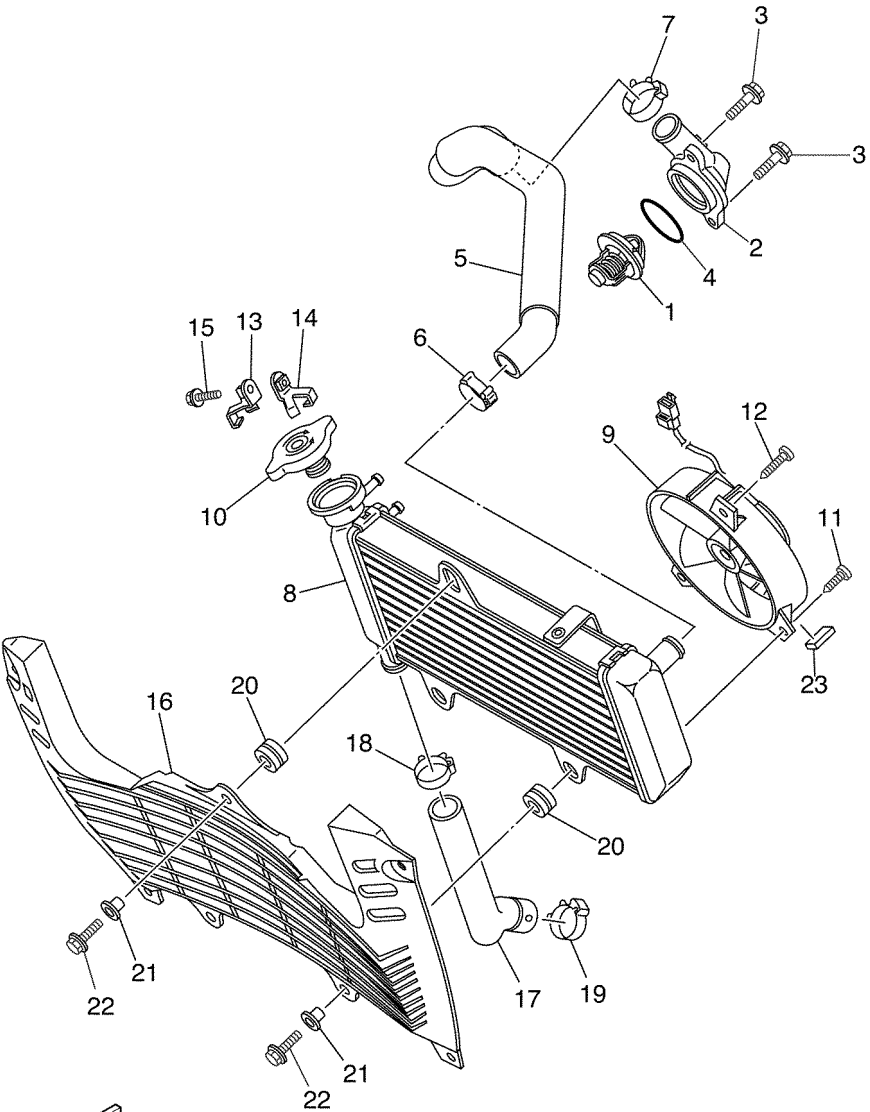


5VK1300-C070

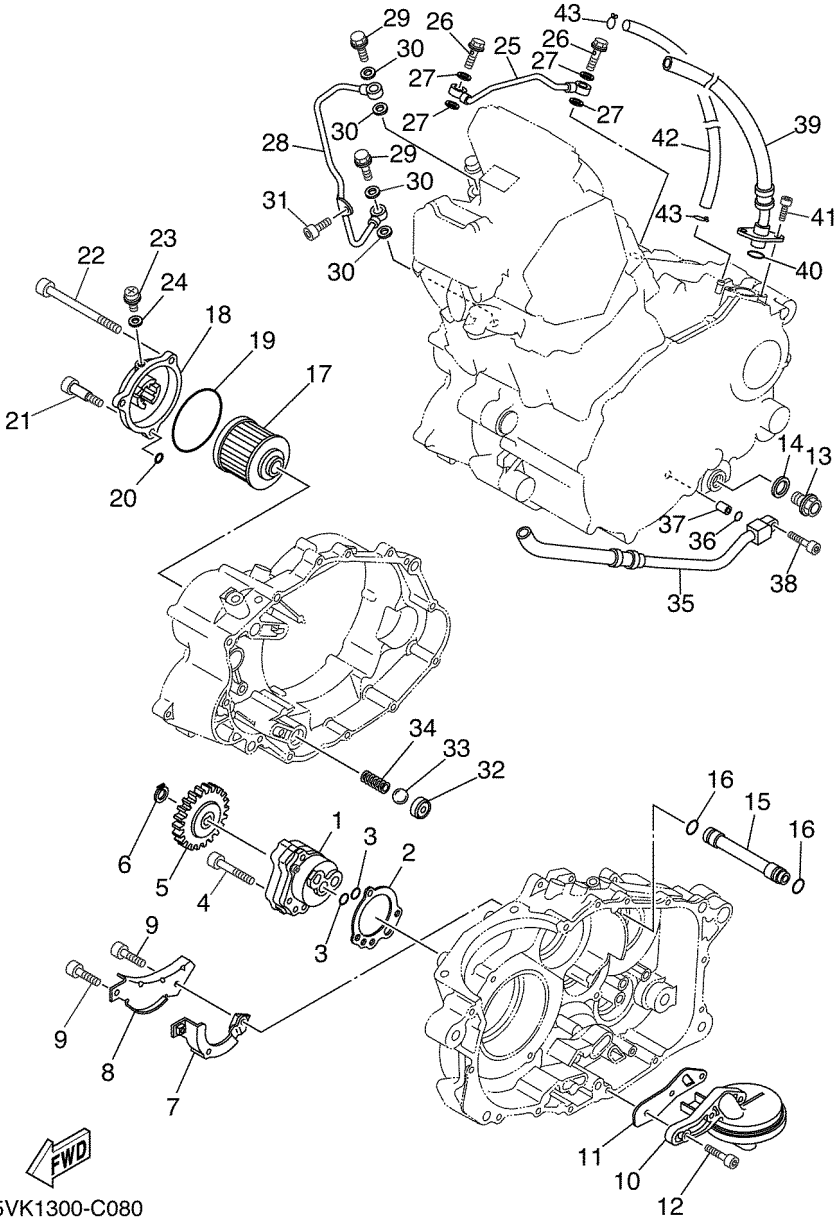

| Ref No | Part No         | Description               |
|--------|-----------------|---------------------------|
| 01     | 5LP-13300-00-00 | Oil Pump Assy             |
| 02     | 5LP-13329-00-00 | Gasket, Pump Cover        |
| 03     | 93210-13X00-00  | O-ring                    |
| 04     | 92017-06035-00  | Bolt, Button Head         |
| 05     | 3AJ-13325-00-00 | Gear, Pump Driven         |
| 06     | 99009-11400-00  | Circlip                   |
| 07     | 5VK-13356-00-00 | Cover, Pump 2             |
| 08     | 5VK-13327-00-00 | Cover, Pump Gear          |
| 09     | 91317-05008-00  | Bolt                      |
| 10     | 5VK-WE343-00-00 | Strainer Comp.            |
| 11     | 5VK-E3415-00-00 | Seal, Oil Strainer        |
| 12     | 91317-06020-00  | Bolt                      |
| 13     | 90340-14132-00  | Plug, Straight Screw      |
| 14     | 214-11198-01-00 | Gasket                    |
| 15     | 5VK-13181-00-00 | Pipe, Delivery 3          |
| 16     | 93210-11073-00  | O-ring                    |
| 17     | 4X7-13440-01-00 | Element Assy, Oil Cleaner |
| 18     | 2WK-13447-00-00 | Cover, Oil Element        |
| 19     | 93210-64297-00  | O-ring                    |
| 20     | 93210-07X01-00  | O-ring                    |
| 21     | 90109-06419-00  | Bolt                      |
| 22     | 91317-06095-00  | Bolt                      |
| 23     | 90149-05110-00  | Screw                     |
| 24     | 90430-05126-00  | Gasket                    |
| 25     | 5VK-13161-00-00 | Pipe, Delivery 1          |
| 26     | 90401-08133-00  | Bolt, Union               |
| 27     | 90430-08204-00  | Gasket                    |
| 28     | 5VK-13171-00-00 | Pipe, Delivery 2          |
| 29     | 90401-10096-00  | Bolt, Union               |
| 30     | 90430-10188-00  | Gasket                    |
| 31     | 91317-06012-00  | Bolt                      |
| 32     | 583-13113-00-00 | Seat, Check Ball          |
| 33     | 93503-08007-00  | Ball                      |
| 34     | 90501-043E0-00  | Spring, Compression       |
| 35     | 5VK-13464-00-00 | Hose, Oil 1               |
| 36     | 93210-10197-00  | O-ring                    |
| 37     | 91810-14X00-00  | Pin, Dowel                |
| 38     | 91317-06025-00  | Bolt                      |
| 39     | 5VK-13465-00-00 | Hose, Oil 2               |
| 40     | 93210-15171-00  | O-ring                    |
| 41     | 91317-06016-00  | Bolt                      |
| 42     | 90445-11033-00  | Hose                      |
| 43     | 90467-10008-00  | Clip                      |




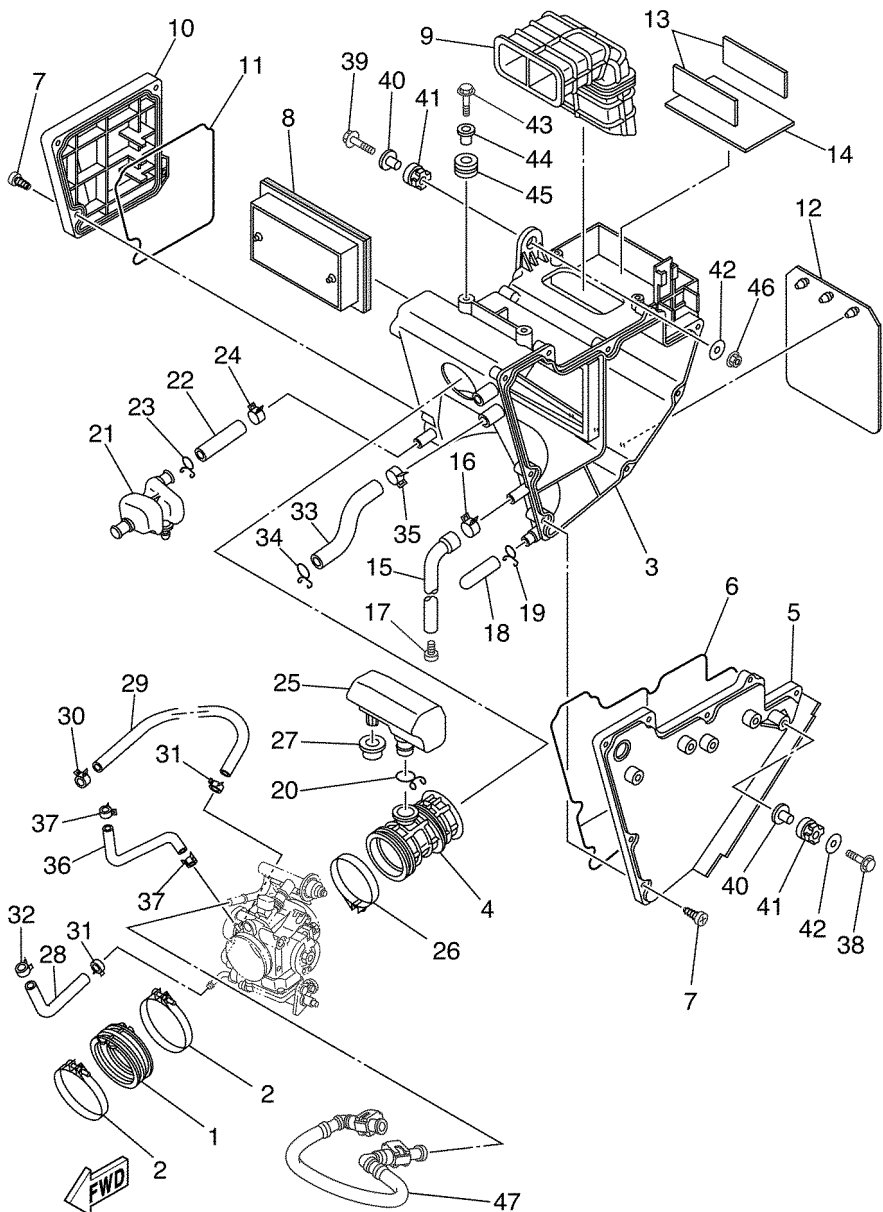


5VK1300-C090

| Ref No | Part No         | Description            |
|--------|-----------------|------------------------|
| 01     | 5VK-13586-00-00 | Joint, Carburetor 1    |
| 02     | 90450-72001-00  | Hose Clamp Assy        |
| 03     | 5VK-E4411-00-00 | Case, Air Cleaner 1    |
| 04     | 5VK-E4453-00-00 | Joint, Air Cleaner 1   |
| 05     | 5VK-E441A-00-00 | Cover, Cleaner Case 1  |
| 06     | 5VK-E4452-00-00 | Seal                   |
| 07     | 9770M-50025-00  | Screw, Tapping         |
| 08     | 5VK-E4451-00-00 | Element, Air Cleaner   |
| 09     | 5VK-E4437-00-00 | Duct                   |
| 10     | 5VK-E441E-00-00 | Cover, Cleaner Case 2  |
| 11     | 5VK-E4457-00-00 | Seal                   |
| 12     | 5VK-F1621-00-00 | Flap                   |
| 13     | 5VK-H2121-00-00 | Pad, Battery           |
| 14     | 5VK-H2122-00-00 | Seat, Battery          |
| 15     | 5VK-E443E-00-00 | Pipe, Drain            |
| 16     | 90467-13062-00  | Clip                   |
| 17     | 90338-08801-00  | Plug                   |
| 18     | 5LW-E443E-00-00 | Pipe, Drain            |
| 19     | 90467-12800-00  | Clip                   |
| 20     | 90467-23800-00  | Clip                   |
| 21     | 5VK-E5371-00-00 | Breather               |
| 22     | 5VK-E1167-00-00 | Pipe, Breather 2       |
| 23     | 90467-14800-00  | Clip                   |
| 24     | 90467-17801-00  | Clip                   |
| 25     | 5VK-E3591-00-00 | Chamber, Air 2         |
| 26     | 90450-59001-00  | Hose Clamp Assy        |
| 27     | 90480-20566-00  | Grommet                |
| 28     | 5VK-E243A-10-00 | Hose 1                 |
| 29     | 90445-12004-00  | Hose                   |
| 30     | 90467-11090-00  | Clip                   |
| 31     | 90467-11108-00  | Clip                   |
| 32     | 90467-11108-00  | Clip                   |
| 33     | 5VK-E3545-00-00 | Hose 1                 |
| 34     | 90467-170A2-00  | Clip                   |
| 35     | 90467-17128-00  | Clip                   |
| 36     | 5VK-13542-00-00 | Hose, Vacuum Sensing 1 |
| 37     | 90467-07138-00  | Clip                   |
| 38     | 95827-06025-00  | Bolt, Flange           |
| 39     | 95827-06030-00  | Bolt, Flange           |
| 40     | 90387-075H4-00  | Collar                 |
| 41     | 90480-15001-00  | Grommet                |
| 42     | 90201-064K6-00  | Washer, Plate          |
| 43     | 95827-06020-00  | Bolt, Flange           |
| 44     | 90387-07037-00  | Collar                 |
| 45     | 90480-18276-00  | Grommet                |
| 46     | 95704-06500-00  | Nut, Flange            |
| 47     | 5VK-13971-00-00 | Pipe, Fuel 1           |

| Ref No | Part No         | Description                       |
|--------|-----------------|-----------------------------------|
| 01     | 5VK-13750-00-00 | Throttle Body Assy                |
| 02     | 5VK-13160-00-00 | • . Delivery Pipe Assy 1          |
| 03     | 90430-09002-00  | • . Gasket                        |
| 04     | 98507-06012-00  | • . Screw, Pan Head               |
| 05     | 8CC-14216-10-00 | • . Screw                         |
| 06     | 5VK-14503-00-00 | • . Adjust Screw Set              |
| 07     | 5VK-14531-00-00 | •• .. Spring, Adjust Screw        |
| 08     | 5VK-13761-00-00 | • . Injector Assy                 |
| 09     | 5PS-14147-00-00 | •• .. O-ring                      |
| 10     | 5PS-85885-00-00 | • . Throttle Position Sensor Assy |


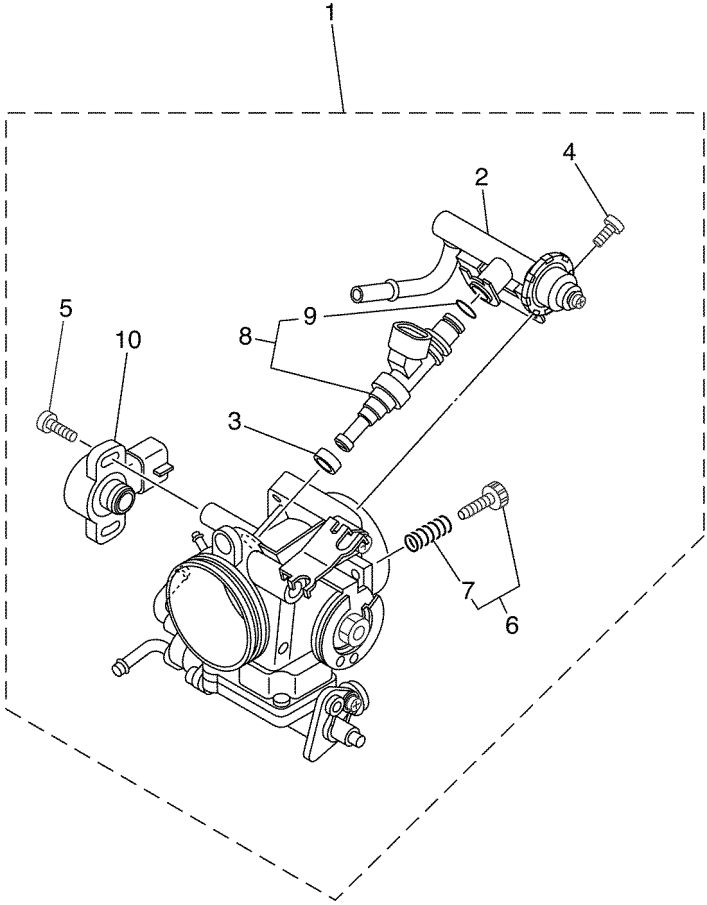


5VK1300-C100

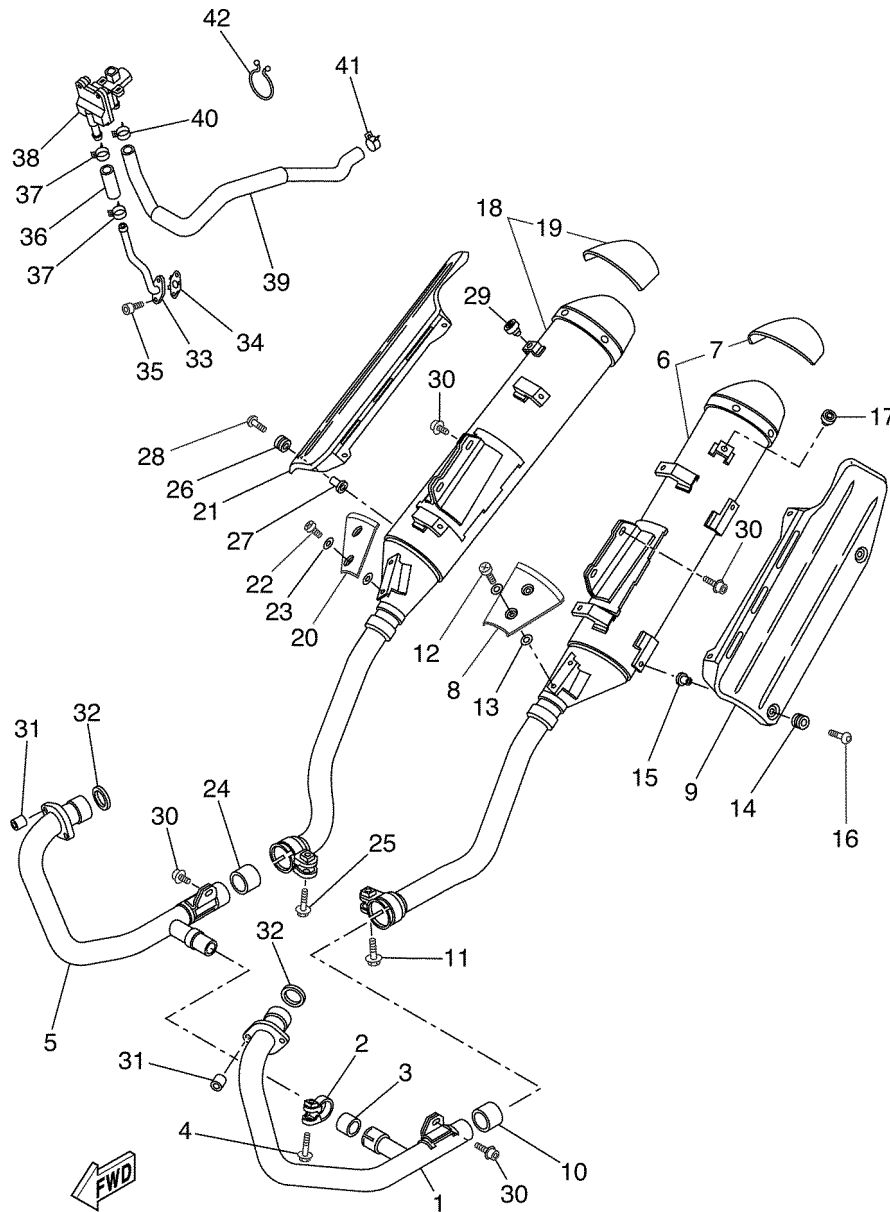


5VK1300-C111

| Ref No | Part No         | Description               |
|--------|-----------------|---------------------------|
| 01     | 5VK-E4611-00-00 | Pipe, Exhaust 1           |
| 02     | 5JX-14725-00-00 | Band, Muffler             |
| 03     | 4FU-14714-00-00 | Gasket, Muffler           |
| 04     | 95814-08035-00  | Bolt, Flange              |
| 05     | 5VK-E4621-00-00 | Pipe, Exhaust 2           |
| 06     | 5VK-E4711-00-00 | Muffler 1                 |
| 07     | 5VK-W1473-00-00 | • . Protector, Muffler 1  |
| 08     | 5VK-E4718-00-00 | Protector, Muffler 1      |
| 09     | 5VK-E4728-00-00 | Protector, Muffler 2      |
| 10     | 4EL-14714-00-00 | Gasket, Muffler           |
| 11     | 95024-08040-00  | Bolt, Flange              |
| 12     | 98980-06012-00  | Screw, Bind               |
| 13     | 90201-05015-00  | Washer, Plate             |
| 14     | 90480-12581-00  | Grommet                   |
| 15     | 90387-06023-00  | Collar                    |
| 16     | 90149-06280-00  | Screw                     |
| 17     | 22W-24181-00-00 | Damper, Locating 1        |
| 18     | 5VK-E4721-00-00 | Muffler 2                 |
| 19     | 5VK-W1473-00-00 | • . Protector, Muffler 1  |
| 20     | 5VK-E4738-00-00 | Protector, Muffler 3      |
| 21     | 5VK-E4748-00-00 | Protector, Muffler 4      |
| 22     | 98980-06012-00  | Screw, Bind               |
| 23     | 90201-05015-00  | Washer, Plate             |
| 24     | 4EL-14714-00-00 | Gasket, Muffler           |
| 25     | 95024-08040-00  | Bolt, Flange              |
| 26     | 90480-12581-00  | Grommet                   |
| 27     | 90387-06023-00  | Collar                    |
| 28     | 90149-06280-00  | Screw                     |
| 29     | 22W-24181-00-00 | Damper, Locating 1        |
| 30     | 90109-085E2-00  | Bolt                      |
| 31     | 90179-08442-00  | Nut                       |
| 32     | 3YF-14613-01-00 | Gasket, Exhaust Pipe      |
| 33     | 5VK-14871-01-00 | Pipe 1                    |
| 34     | 5VK-14815-00-00 | Gasket                    |
| 35     | 91380-06016-00  | Bolt                      |
| 36     | 5VK-14881-00-00 | Hose, Bend 1              |
| 37     | 90467-17089-00  | Clip                      |
| 38     | 5VK-14803-00-00 | Air Induction System Assy |
| 39     | 5VK-E4882-00-00 | Hose, Bend 2              |
| 40     | 90467-17089-00  | Clip                      |
| 41     | 90467-170A0-00  | Clip                      |
| 42     | 90464-37257-00  | Clamp                     |

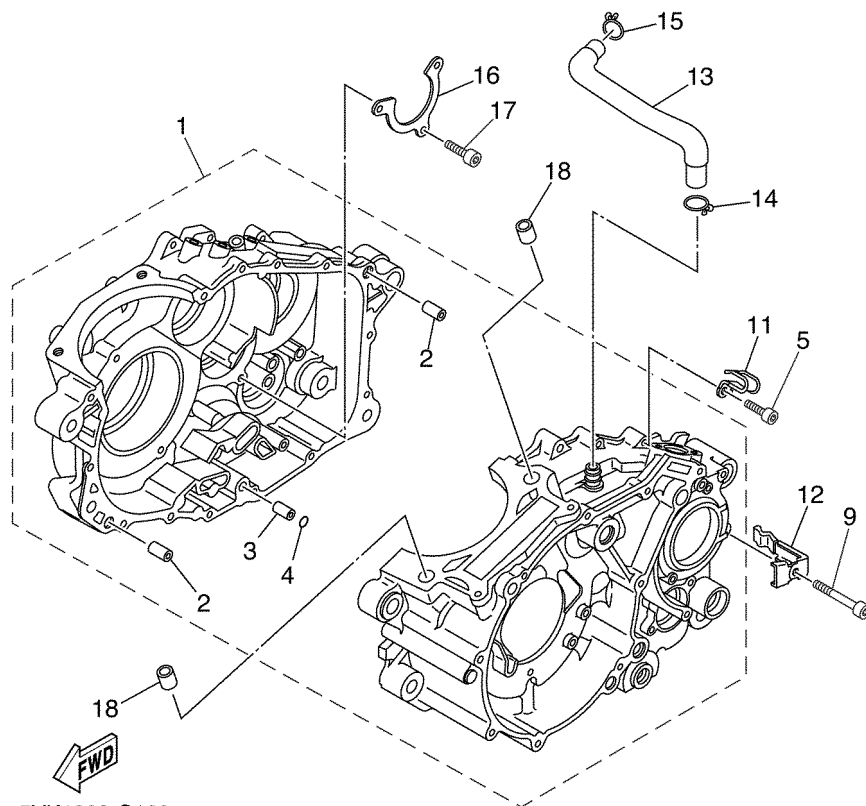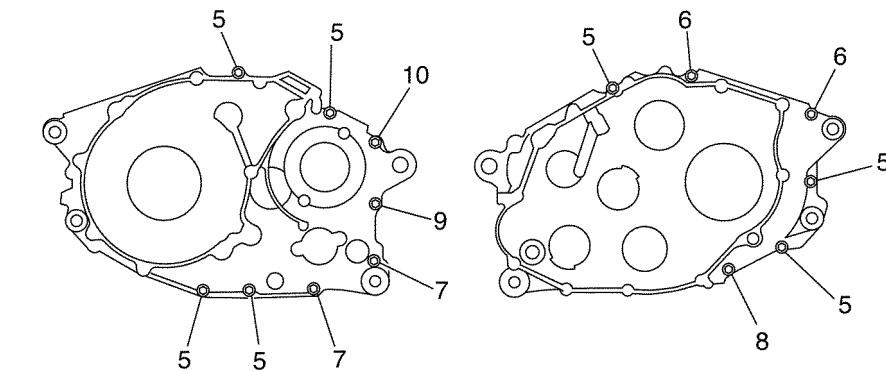


5VK1300-C120


| Ref No | Part No         | Description          |
|--------|-----------------|----------------------|
| 01     | 5VK-E5100-00-00 | Crankcase Assy       |
| 02     | 99530-12016-00  | • . Pin, Dowel       |
| 03     | 91808-16X00-00  | • . Pin, Dowel       |
| 04     | 93210-07X01-00  | • . O-ring           |
| 05     | 91317-06030-00  | Bolt                 |
| 06     | 91317-06045-00  | Bolt                 |
| 07     | 91317-06055-00  | Bolt                 |
| 08     | 91317-06060-00  | Bolt                 |
| 09     | 91317-06080-00  | Bolt                 |
| 10     | 91317-06090-00  | Bolt                 |
| 11     | 90462-06012-00  | Clamp                |
| 12     | 90465-12013-00  | Clamp                |
| 13     | 5VK-11166-00-00 | Pipe, Breather 1     |
| 14     | 90467-14015-00  | Clip                 |
| 15     | 90467-14015-00  | Clip                 |
| 16     | 5VK-E5383-00-00 | Plate, Bearing Cover |
| 17     | 91317-06016-00  | Bolt                 |
| 18     | 99530-14016-00  | Pin, Dowel           |

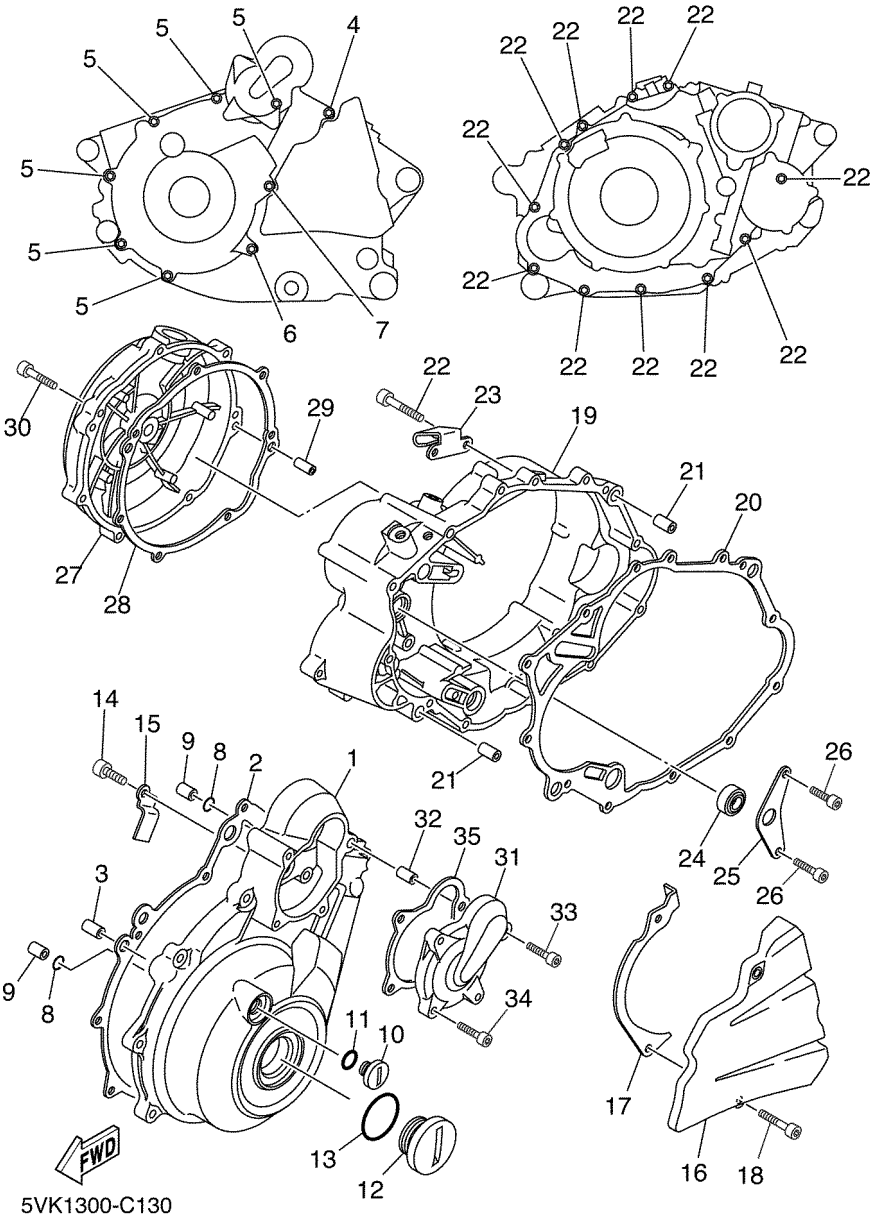


| Ref No | Part No         | Description               |
|--------|-----------------|---------------------------|
| 01     | 5VK-WE541-00-00 | Crankcase Cover Assy 1    |
| 02     | 5VK-E5451-00-00 | Gasket, Crankcase Cover 1 |
| 03     | 99530-12016-00  | Pin, Dowel                |
| 04     | 91317-06035-00  | Bolt                      |
| 05     | 91317-06025-00  | Bolt                      |
| 06     | 91317-06050-00  | Bolt                      |
| 07     | 91317-06050-00  | Bolt                      |
| 08     | 93210-13X00-00  | O-ring                    |
| 09     | 99530-12016-00  | Pin, Dowel                |
| 10     | 90340-14X00-00  | Plug, Straight Screw      |
| 11     | 93210-14X00-00  | O-ring                    |
| 12     | 90340-36X00-00  | Plug, Straight Screw      |
| 13     | 93210-35X00-00  | O-ring                    |
| 14     | 91317-06012-00  | Bolt                      |
| 15     | 90462-16X00-00  | Clamp                     |
| 16     | 5VK-E5421-00-00 | Cover, Crankcase 2        |
| 17     | 5VK-E7466-00-00 | Guide, Chain              |
| 18     | 91317-06025-00  | Bolt                      |
| 19     | 5VK-E5431-00-00 | Cover, Crankcase 3        |
| 20     | 5VK-E5462-00-00 | Gasket, Crankcase Cover 3 |
| 21     | 99530-12016-00  | Pin, Dowel                |
| 22     | 91317-06030-00  | Bolt                      |
| 23     | 5VK-E5441-00-00 | Holder, Clutch Cable      |
| 24     | 93101-14164-00  | Oil Seal                  |
| 25     | 5VK-E5118-00-00 | Holder                    |
| 26     | 91317-06012-00  | Bolt                      |
| 27     | 5VK-E5416-00-00 | Cover, Oil Pump           |
| 28     | 5VK-E5453-00-00 | Gasket                    |
| 29     | 91808-16X00-00  | Pin, Dowel                |
| 30     | 90105-06X20-00  | Bolt, Flange              |
| 31     | 5VK-WE544-00-00 | Generator Cover Assy      |
| 32     | 91808-16X00-00  | Pin, Dowel                |
| 33     | 91317-06035-00  | Bolt                      |
| 34     | 91317-06025-00  | Bolt                      |
| 35     | 5VK-15455-00-00 | Gasket 1                  |

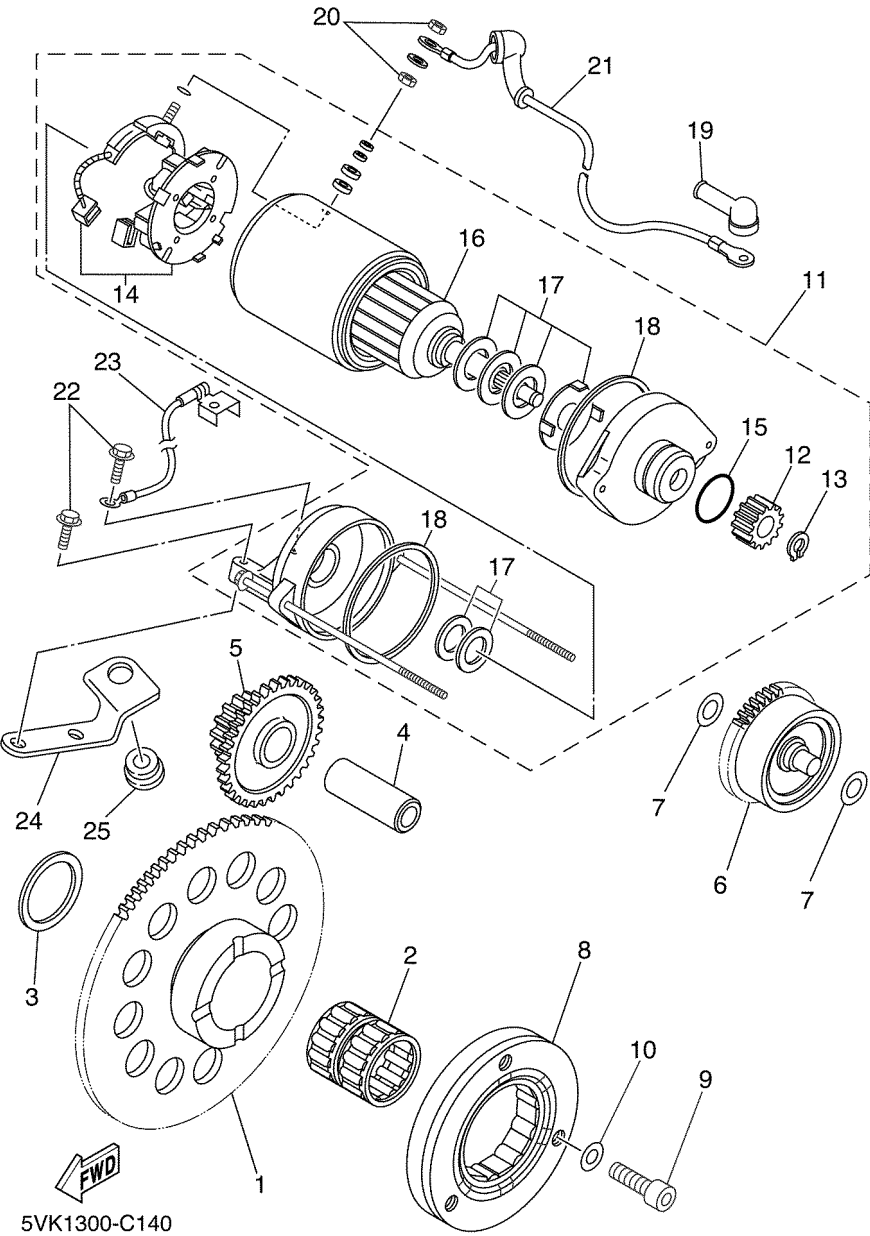

| Ref No | Part No         | Description              |
|--------|-----------------|--------------------------|
| 01     | 3YF-15515-00-00 | Gear 3                   |
| 02     | 93310-530C7-00  | Bearing                  |
| 03     | 90201-30X01-00  | Washer, Plate            |
| 04     | 5VK-E5522-00-00 | Shaft 2                  |
| 05     | 5VK-15517-00-00 | Gear, Idler 2            |
| 06     | 5VK-E5560-00-00 | Damper Assy              |
| 07     | 90201-08759-00  | Washer, Plate            |
| 08     | 5VK-15590-00-00 | Starter One-way Assy     |
| 09     | 91317-08025-00  | Bolt                     |
| 10     | 90201-08X18-00  | Washer, Plate            |
| 11     | 3SX-81890-00-00 | Motor Assy               |
| 12     | 1VJ-15511-00-00 | • . Gear, Starting Motor |
| 13     | 93440-11024-00  | • . Circlip              |
| 14     | 3AJ-81801-00-00 | • . Brush Set            |
| 15     | 1FK-81847-00-00 | • . O-ring               |
| 16     | 3AJ-81850-00-00 | • . Armature Assy        |
| 17     | 3AJ-81809-00-00 | • . Washer Kit           |
| 18     | 11H-81844-00-00 | • . Gasket               |
| 19     | 4G0-81871-00-00 | Cap                      |
| 20     | 4XV-8182A-00-00 | Nut                      |
| 21     | 5VK-81815-00-00 | Cord, Starter Motor      |
| 22     | 95817-06035-00  | Bolt, Flange             |
| 23     | 5VK-H2116-00-00 | Wire, Minus Lead         |
| 24     | 5VK-15199-01-00 | Bracket                  |
| 25     | 90480-13398-00  | Grommet                  |

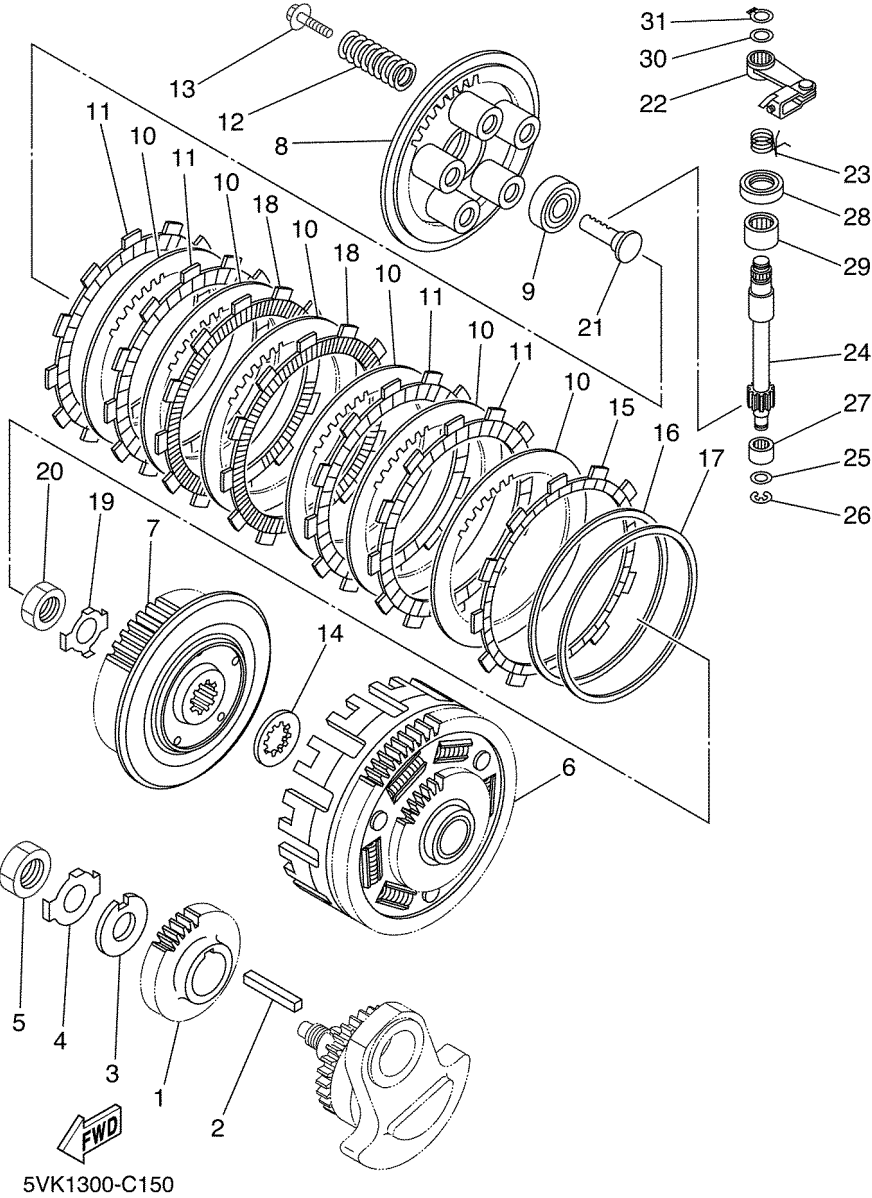


| Ref No | Part No         | Description               |
|--------|-----------------|---------------------------|
| 01     | 5VK-16111-00-00 | Gear, Primary Drive       |
| 02     | 90282-07001-00  | Key, Straight             |
| 03     | 90209-20012-00  | Washer                    |
| 04     | 90215-20X00-00  | Washer, Lock              |
| 05     | 90170-20274-00  | Nut                       |
| 06     | 5VK-16150-00-00 | Primary Driven Gear Comp. |
| 07     | 5VK-16371-00-00 | Boss, Clutch              |
| 08     | 5VK-16351-00-00 | Plate, Pressure 1         |
| 09     | 93306-00304-00  | Bearing                   |
| 10     | 4X7-16325-00-00 | Plate, Clutch 2           |
| 11     | 22U-16321-00-00 | Plate, Friction           |
| 12     | 90501-260A1-00  | Spring, Compression       |
| 13     | 90119-06105-00  | Bolt, With Washer         |
| 14     | 2JN-16154-00-00 | Plate, Thrust 1           |
| 15     | 5VK-16331-00-00 | Plate, Friction 2         |
| 16     | 5JG-16383-00-00 | Spring, Clutch Boss       |
| 17     | 5JG-16384-00-00 | Plate, Seat               |
| 18     | 5TA-16321-00-00 | Plate, Friction           |
| 19     | 90215-20X01-00  | Washer, Lock              |
| 20     | 90170-20327-00  | Nut                       |
| 21     | 4XV-16356-01-00 | Rod, Push 1               |
| 22     | 5VK-16340-00-00 | Push Lever Assy           |
| 23     | 90508-16016-00  | Spring, Torsion           |
| 24     | 5EB-16382-00-00 | Axle, Push Lever          |
| 25     | 92907-08600-00  | Washer, Plate             |
| 26     | 99001-07600-00  | Circlip                   |
| 27     | 93317-11020-00  | Bearing                   |
| 28     | 93102-15212-00  | Oil Seal                  |
| 29     | 93315-31502-00  | Bearing                   |
| 30     | 90201-10614-00  | Washer, Plate             |
| 31     | 99009-10400-00  | Circlip                   |

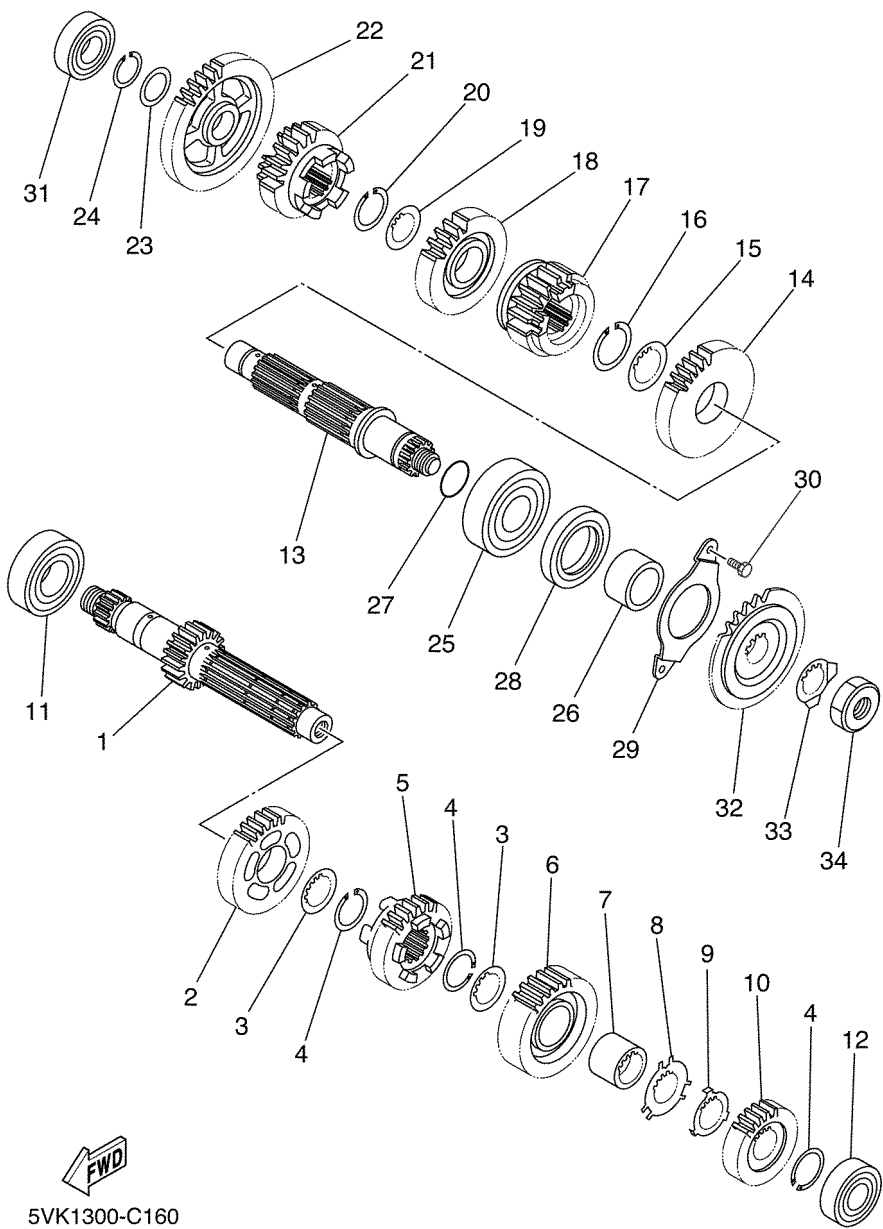

| Ref No | Part No         | Description      |
|--------|-----------------|------------------|
| 01     | 5VK-E7401-00-00 | Main Axle Assy   |
| 02     | 5VK-E7141-00-00 | Gear, 4th Pinion |
| 02     | 5VK-E7141-10-00 | Gear, 4th Pinion |
| 03     | 90209-21X00-00  | Washer           |
| 04     | 93440-25084-00  | Circlip          |
| 05     | 5VK-E7131-00-00 | Gear, 3rd Pinion |
| 06     | 5VK-E7151-00-00 | Gear, 5th Pinion |
| 06     | 5VK-E7151-10-00 | Gear, 5th Pinion |
| 07     | 90387-21002-00  | Collar           |
| 08     | 90209-22X00-00  | Washer           |
| 09     | 90209-21351-00  | Washer           |
| 10     | 5VK-E7121-00-00 | Gear, 2nd Pinion |
| 11     | 93306-205XA-00  | Bearing          |
| 12     | 93306-004XL-00  | Bearing          |
| 13     | 5VK-E7402-00-00 | Drive Axle Assy  |
| 14     | 5VK-E7221-00-00 | Gear, 2nd Wheel  |
| 15     | 90209-26348-00  | Washer           |
| 16     | 93440-28062-00  | Circlip          |
| 17     | 5VK-E7251-00-00 | Gear, 5th Wheel  |
| 18     | 5VK-E7231-00-00 | Gear, 3rd Wheel  |
| 19     | 90209-21X00-00  | Washer           |
| 20     | 93440-25084-00  | Circlip          |
| 21     | 5VK-E7241-00-00 | Gear, 4th Wheel  |
| 22     | 5VK-E7211-00-00 | Gear, 1st Wheel  |
| 22     | 5VK-E7211-10-00 | Gear, 1st Wheel  |
| 23     | 90201-208G4-00  | Washer, Plate    |
| 24     | 99009-20400-00  | Circlip          |
| 25     | 93306-305X4-00  | Bearing          |
| 26     | 90387-25802-00  | Collar           |
| 27     | 93210-22164-00  | O-ring           |
| 28     | 93102-35368-00  | Oil Seal         |
| 29     | 5VK-E7471-00-00 | Plate, Cover     |
| 30     | 90101-06X26-00  | Bolt             |
| 31     | 93306-004XM-00  | Bearing          |
| 32     | 5VK-E7460-00-00 | Sprocket, Drive  |
| 33     | 90215-21X00-00  | Washer, Lock     |
| 34     | 90179-18003-00  | Nut              |




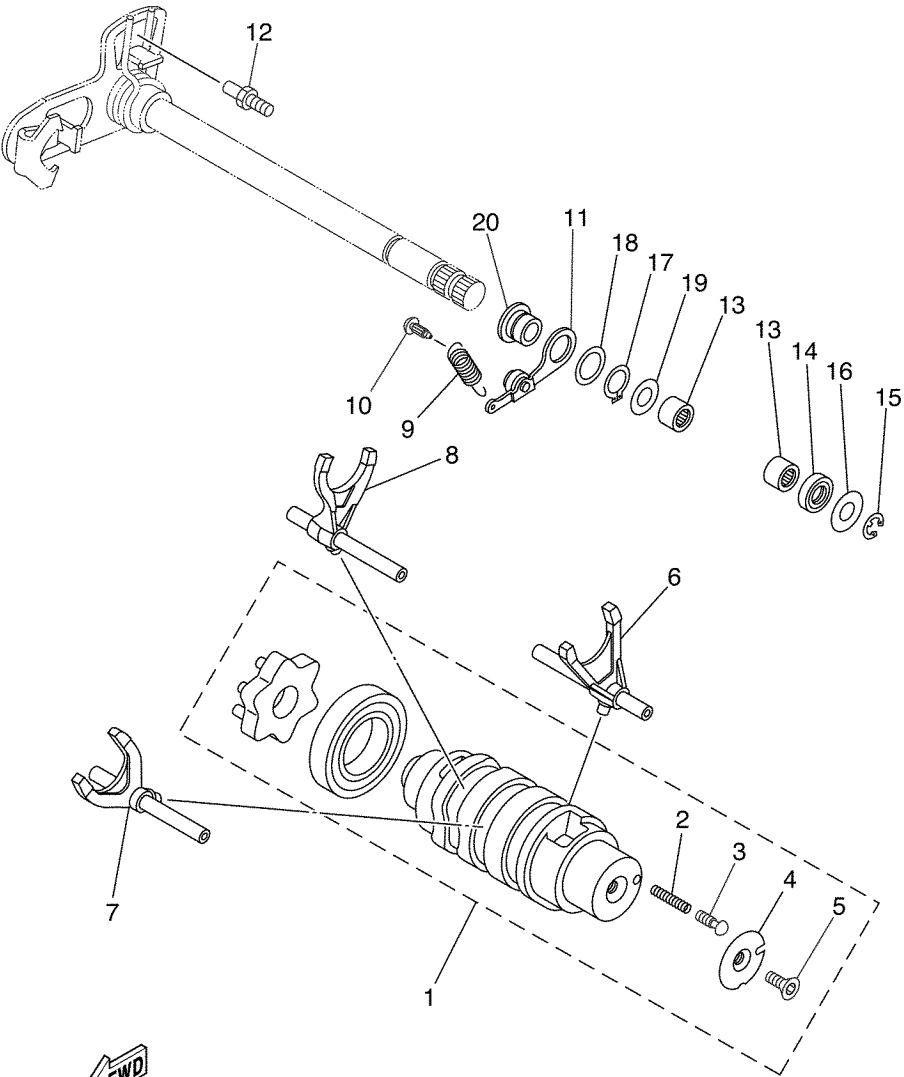


5VK1300-C170

| Ref No | Part No         | Description              |
|--------|-----------------|--------------------------|
| 01     | 5VK-18540-00-00 | Shift Cam Assy           |
| 02     | 90501-06022-00  | • . Spring, Compression  |
| 03     | 4UN-18542-00-00 | • . Point, Neutral       |
| 04     | 4UN-18566-00-00 | • . Plate, Side 2        |
| 05     | 90149-05321-00  | • . Screw                |
| 06     | 5VK-E8501-00-00 | Fork, Shift 1            |
| 07     | 5VK-E8502-00-00 | Fork, Shift 2            |
| 08     | 5VK-E8503-00-00 | Fork, Shift 3            |
| 09     | 5VK-E8144-00-00 | Hanger, Spring           |
| 10     | 132-16346-00-00 | Hook, Spring             |
| 11     | 5JW-18140-00-00 | Stopper Lever Assy       |
| 12     | 5VK-18127-00-00 | Stopper, Screw           |
| 13     | 93315-11206-00  | Bearing                  |
| 14     | 93102-12106-00  | Oil Seal (sd 12-22-5 Hs) |
| 15     | 99001-10600-00  | Circlip                  |
| 16     | 90201-12575-00  | Washer, Plate            |
| 17     | 93410-17X00-00  | Circlip                  |
| 18     | 90201-177G4-00  | Washer, Plate            |
| 19     | 90201-120K4-00  | Washer, Plate            |
| 20     | 5VK-18699-00-00 | Boss 1                   |

| Ref No | Part No         | Description            |
|--------|-----------------|------------------------|
| 01     | 5VK-18101-00-00 | Shift Shaft Assy       |
| 02     | 5VK-E8110-00-00 | Shift Pedal Assy       |
| 03     | 5VK-E8113-00-00 | • . Cover, Shift Pedal |
| 04     | 91317-06020-00  | Bolt                   |

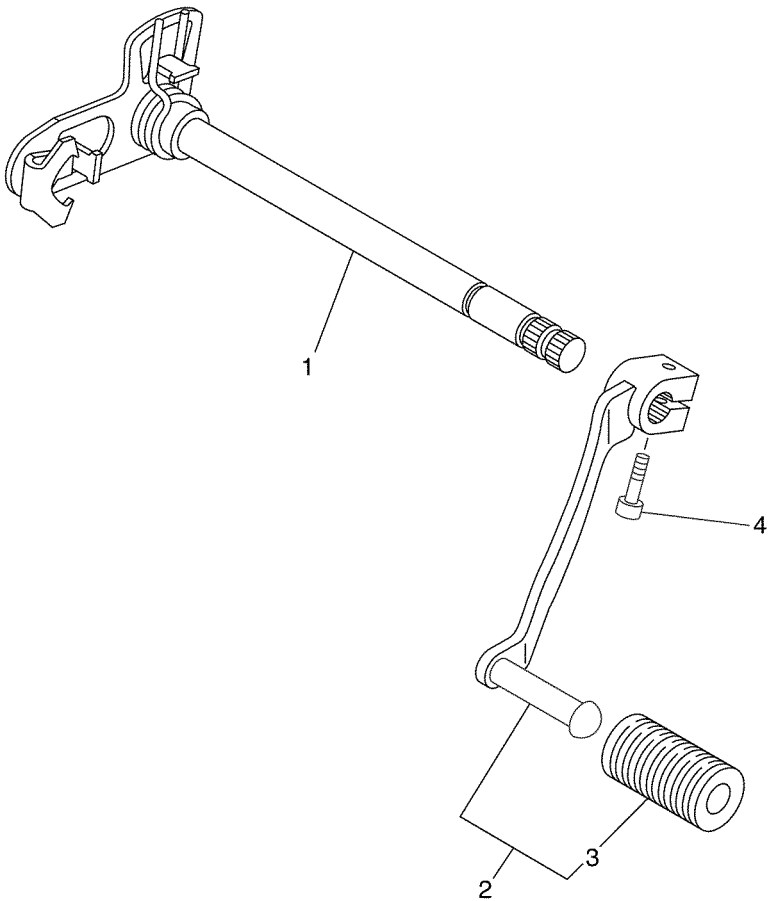

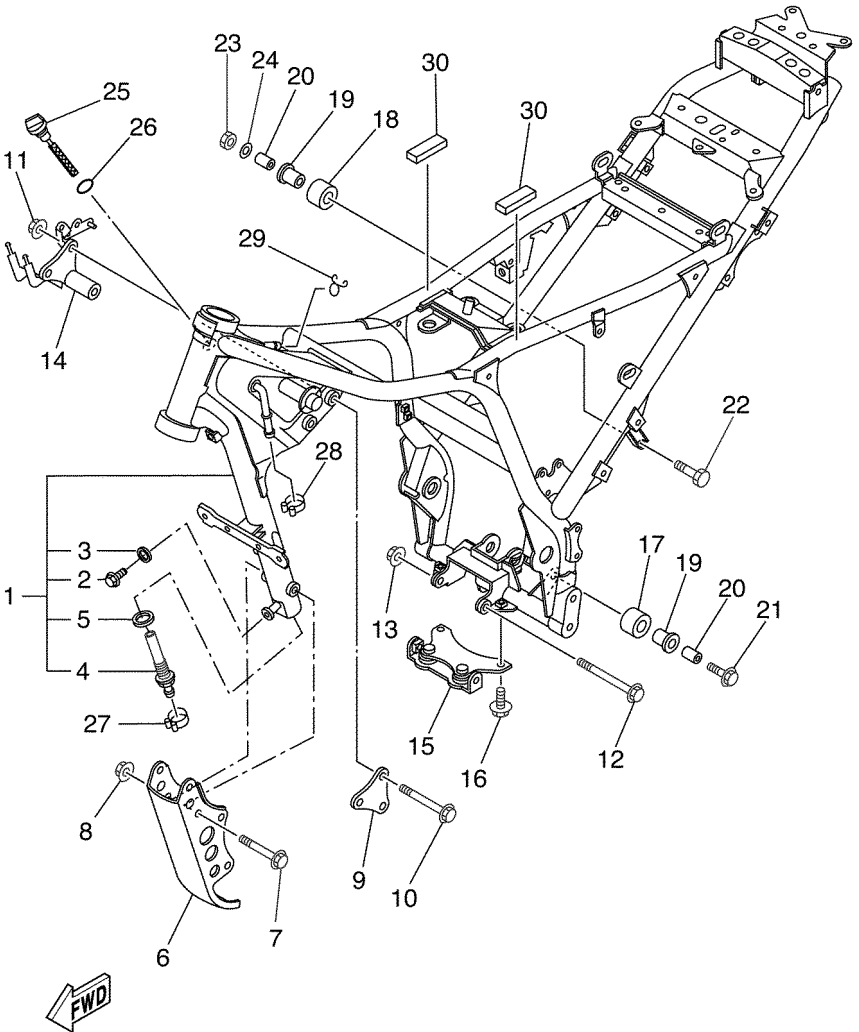



5VK1300-C191

| Ref No | Part No         | Description          |
|--------|-----------------|----------------------|
| 01     | 5VK-F1110-10-00 | Frame Comp.          |
| 02     | 95807-08012-00  | • Bolt, Flange       |
| 03     | 90430-08119-00  | • Gasket             |
| 04     | 5VK-F1756-00-00 | • Net, Filter        |
| 05     | 90430-22123-00  | • Gasket             |
| 06     | 5VK-F1316-00-00 | Stay, Engine 3       |
| 07     | 95814-10070-00  | Bolt, Flange         |
| 08     | 90179-10658-00  | Nut                  |
| 09     | 5VK-F1315-00-00 | Stay, Engine 2       |
| 10     | 95814-10100-00  | Bolt, Flange         |
| 11     | 90179-10658-00  | Nut                  |
| 12     | 90105-10040-00  | Bolt, Washer Based   |
| 13     | 90179-10658-00  | Nut                  |
| 14     | 5VK-F1410-00-00 | Engine Bracket Comp. |
| 15     | 5VK-21445-00-00 | Stay, Muffler 1      |
| 16     | 95024-08016-00  | Bolt, Flange         |
| 17     | 30X-22178-00-00 | Tensioner            |
| 18     | 10V-22178-00-00 | Tensioner            |
| 19     | 10V-22184-00-00 | Bush                 |
| 20     | 90387-08024-00  | Collar               |
| 21     | 95827-08040-00  | Bolt, Flange         |
| 22     | 90101-08428-00  | Bolt                 |
| 23     | 95607-08100-00  | Nut, U               |
| 24     | 92907-08200-00  | Washer               |
| 25     | 5VK-15362-00-00 | Plug, Oil Level      |
| 26     | 93210-19123-00  | O-ring               |
| 27     | 90467-19800-00  | Clip                 |
| 28     | 90467-17800-00  | Clip                 |
| 29     | 90467-10008-00  | Clip                 |
| 30     | 5VK-21746-00-00 | Damper               |


**FENDER**

| Ref No | Part No         | Description        |
|--------|-----------------|--------------------|
| 01     | 5VK-F1511-00-00 | Fender, Front      |
| 01     | 5VK-F1511-10-00 | Fender, Front      |
| 02     | 90387-065X7-00  | Collar             |
| 03     | 90387-087L0-00  | Collar             |
| 04     | 90119-06096-00  | Bolt, With Washer  |
| 05     | 5VK-F1556-00-00 | Fender, Front 2    |
| 06     | 5VK-F1587-00-00 | Stay 1             |
| 07     | 90119-06051-00  | Bolt, With Washer  |
| 08     | 5VK-F1611-00-00 | Fender, Rear       |
| 09     | 5DM-28371-00-00 | Damper             |
| 10     | 95807-06012-00  | Bolt, Flange       |
| 11     | 90183-06023-00  | Nut, Spring        |
| 12     | 97707-60020-00  | Screw, Tapping     |
| 13     | 90338-08226-00  | Plug               |
| 14     | 5VK-F1685-00-00 | Bracket, License   |
| 15     | 90119-06118-00  | Bolt, With Washer  |
| 16     | 90183-06023-00  | Nut, Spring        |
| 17     | 95807-06014-00  | Bolt, Flange       |
| 18     | 90387-06648-00  | Collar             |
| 19     | 5VK-F1651-00-00 | Cover, Rear Fender |
| 19     | 5VK-F1651-10-00 | Cover, Rear Fender |
| 20     | 90269-08066-00  | Rivet              |
| 21     | 5VK-F160E-00-00 | Box                |
| 22     | 5VK-21639-00-00 | Damper 2           |
| 23     | 97007-05012-00  | Bolt               |
| 24     | 90387-05803-00  | Collar             |
| 25     | 1T4-24741-00-00 | Pad, Seat          |
| 26     | 90464-07259-00  | Clamp              |
| 27     | 4XV-21376-00-00 | Band, Tool         |
| 28     | 3YX-21376-00-00 | Band, Tool         |
| 29     | 5VK-21649-00-00 | Damper             |
| 30     | 5VK-2153A-00-00 | Emblem, Yamaha     |
| 30     | 5VK-2153A-10-00 | Emblem, Yamaha     |

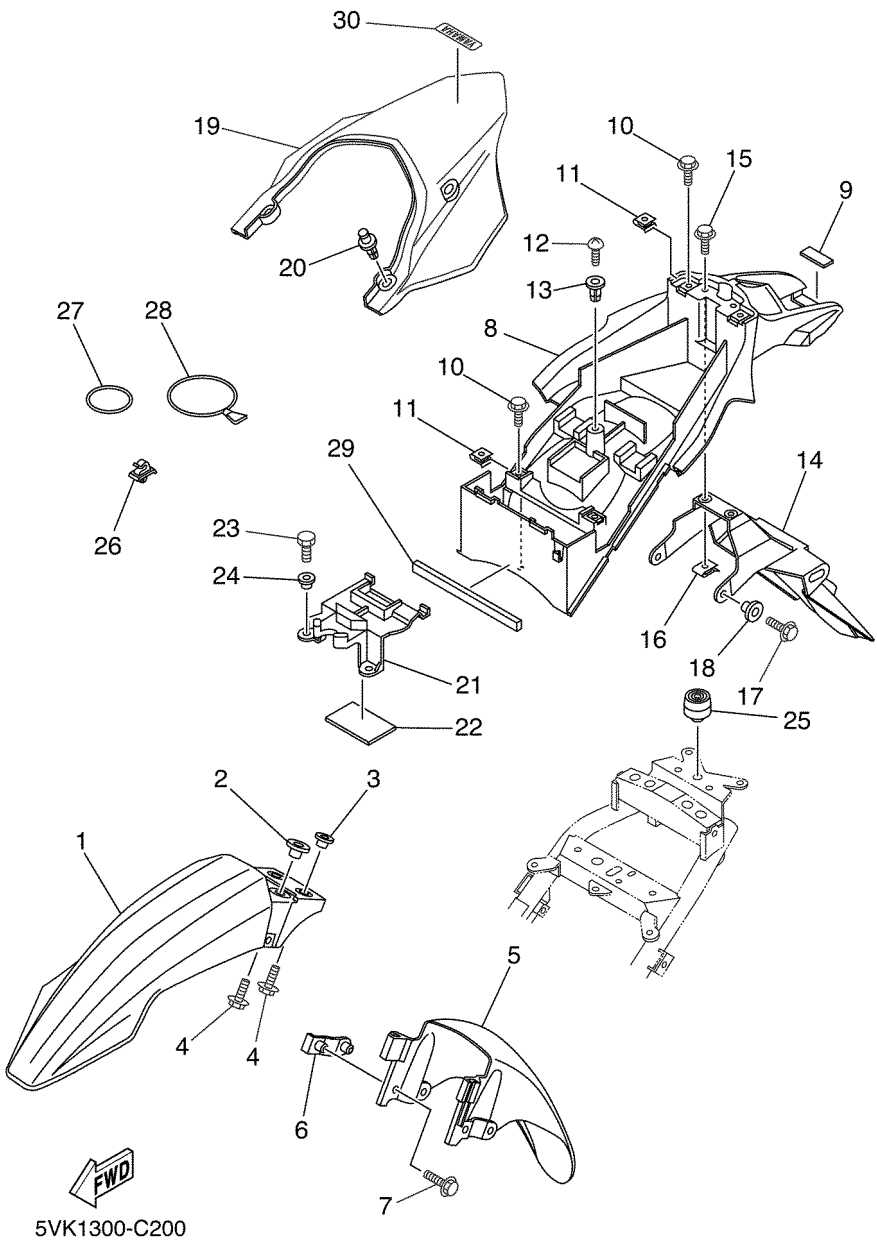

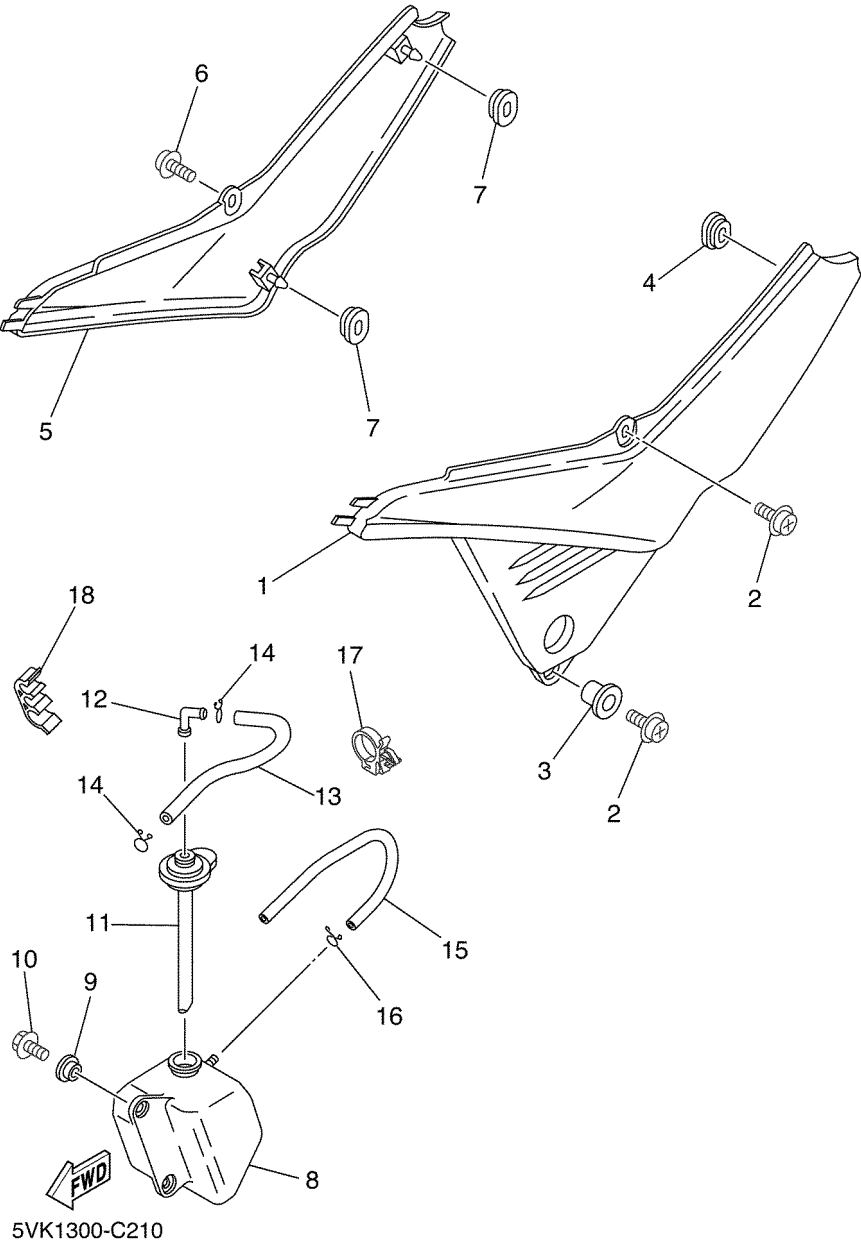


| Ref No | Part No         | Description        |
|--------|-----------------|--------------------|
| 01     | 5VK-F1711-00-00 | Cover, Side 1      |
| 02     | 90159-06078-00  | Screw, With Washer |
| 03     | 90387-07717-00  | Collar             |
| 04     | 90480-01558-00  | Grommet            |
| 05     | 5VK-F1721-00-00 | Cover, Side 2      |
| 06     | 90159-06078-00  | Screw, With Washer |
| 07     | 90480-01558-00  | Grommet            |
| 08     | 5VK-F1871-00-00 | Tank, Recovery     |
| 09     | 90387-062M9-00  | Collar             |
| 10     | 95807-06012-00  | Bolt, Flange       |
| 11     | 5VK-21875-00-00 | Cap                |
| 12     | 26H-21828-00-00 | Elbow              |
| 13     | 90445-08020-00  | Hose               |
| 14     | 90467-08003-00  | Clip               |
| 15     | 90445-08008-00  | Hose               |
| 16     | 90467-08003-00  | Clip               |
| 17     | 90464-16006-00  | Clamp              |
| 18     | 90464-11008-00  | Clamp              |

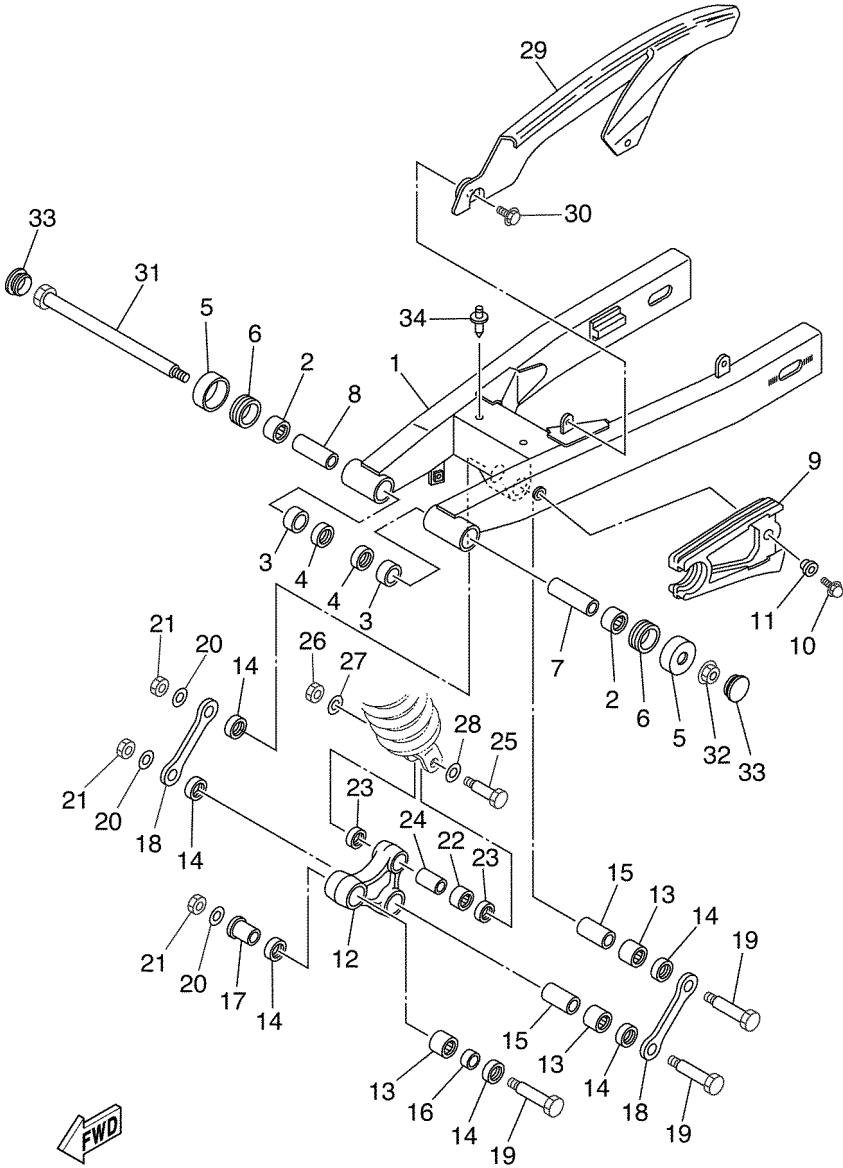


5VK1300-C220

| Ref No | Part No         | Description           |
|--------|-----------------|-----------------------|
| 01     | 5VK-F2110-00-00 | Rear Arm Comp.        |
| 02     | 93315-22251-00  | Bearing               |
| 03     | 90380-22111-00  | Bush, Solid           |
| 04     | 93106-22019-00  | Oil Seal (dc 22-28-8) |
| 05     | 30X-2219X-00-00 | Cover                 |
| 06     | 93108-35004-00  | Oil Seal (35-41-8)    |
| 07     | 5VK-22124-00-00 | Bush 2                |
| 08     | 5VK-22123-00-00 | Bush 1                |
| 09     | 5VK-F2151-00-00 | Seal, Guard           |
| 10     | 95807-06020-00  | Bolt, Flange          |
| 11     | 90387-06066-00  | Collar                |
| 12     | 5VK-F217A-00-00 | Arm, Relay            |
| 13     | 93315-32053-00  | Bearing               |
| 14     | 93109-20076-00  | Oil Seal              |
| 15     | 90387-167R5-00  | Collar                |
| 16     | 90387-16011-00  | Collar                |
| 17     | 90387-16012-00  | Collar                |
| 18     | 5VK-F217F-00-00 | Rod, Connecting 1     |
| 19     | 5VK-22125-00-00 | Bolt                  |
| 20     | 90201-160F6-00  | Washer, Plate         |
| 21     | 90185-14002-00  | Nut, Self-locking     |
| 22     | 93315-31759-00  | Bearing               |
| 23     | 93109-17071-00  | Oil Seal              |
| 24     | 90387-127W0-00  | Collar                |
| 25     | 90101-10659-00  | Bolt                  |
| 26     | 95614-10100-00  | Nut, U                |
| 27     | 90201-101J1-00  | Washer, Plate         |
| 28     | 90201-13013-00  | Washer, Plate         |
| 29     | 5VK-F2311-00-00 | Case, Chain           |
| 30     | 90119-06861-00  | Bolt, With Washer     |
| 31     | 1VJ-22141-00-00 | Shaft, Pivot          |
| 32     | 95607-14200-00  | Nut, Self-locking     |
| 33     | 90338-28242-00  | Plug                  |
| 34     | 90269-08066-00  | Rivet                 |

| Ref No | Part No         | Description               |
|--------|-----------------|---------------------------|
| 01     | 5VK-22210-01-00 | Shock Absorber Assy, Rear |
| 02     | 4AA-22259-40-00 | • . Label, Warning        |
| 03     | 90101-12742-00  | Bolt                      |
| 04     | 95617-12100-00  | Nut, U                    |
| 05     | 5VK-F2243-00-00 | Washer 1                  |

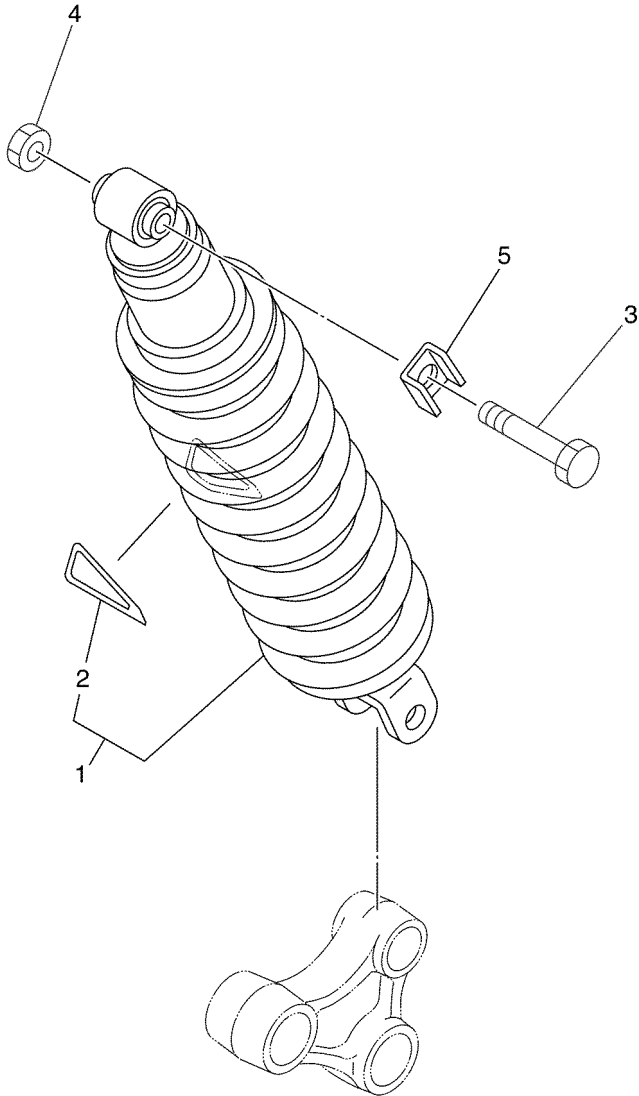


  
5VK1300-C230

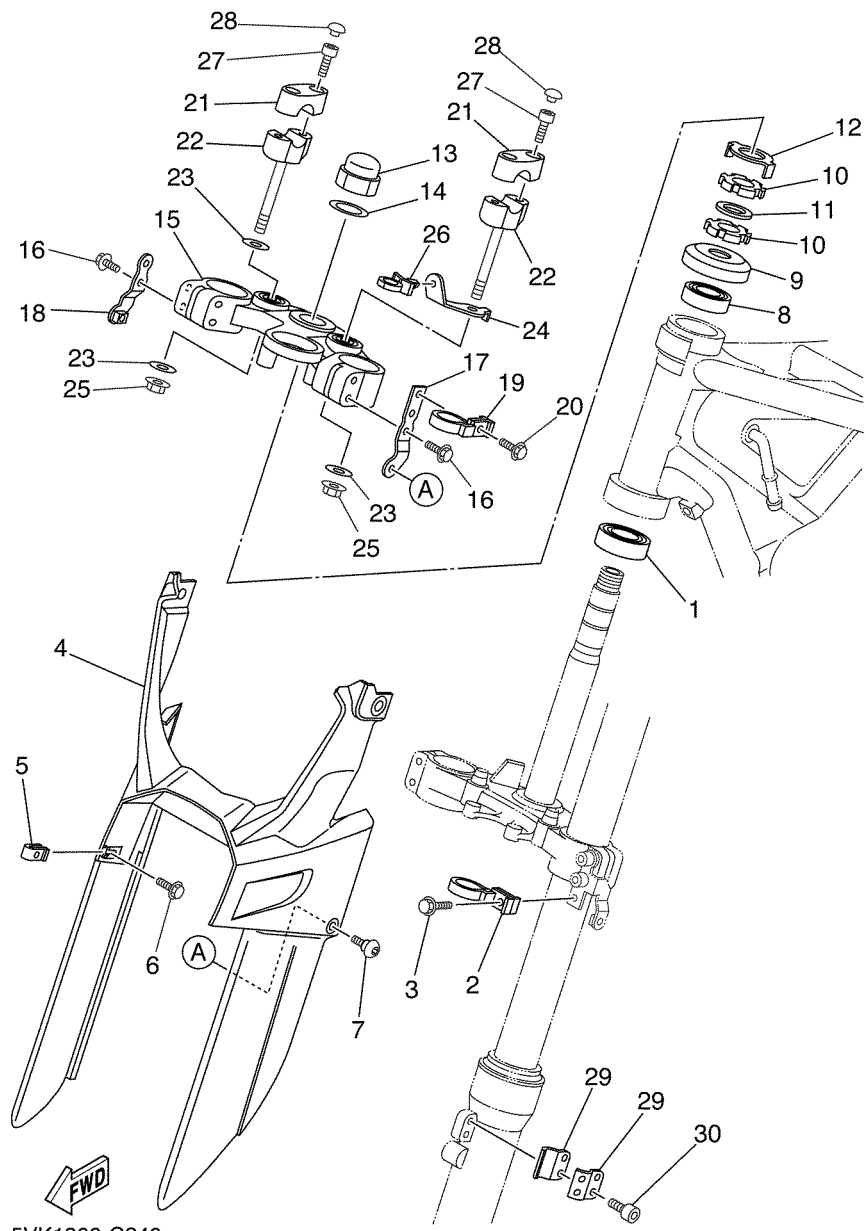


| Ref No | Part No         | Description          |
|--------|-----------------|----------------------|
| 01     | 93332-00008-00  | Bearing              |
| 02     | 5VK-23389-00-00 | Guide, Cable         |
| 03     | 90105-05361-00  | Bolt, Flange         |
| 04     | 5VK-F3472-00-00 | Protector            |
| 05     | 90183-05061-00  | Nut, Spring          |
| 06     | 90119-05193-00  | Bolt, With Washer    |
| 07     | 90111-05011-00  | Bolt                 |
| 08     | 93332-000Y6-00  | Bearing              |
| 09     | 1W1-23416-00-00 | Cover, Ball Race 2   |
| 10     | 90179-25615-00  | Nut                  |
| 11     | 90202-26142-00  | Washer, Plate        |
| 12     | 3YF-23418-00-00 | Washer, Special      |
| 13     | 90176-22081-00  | Nut, Crown           |
| 14     | 90201-220T0-00  | Washer, Plate        |
| 15     | 5VK-23430-00-00 | Handle Crown Comp.   |
| 16     | 95027-08040-00  | Bolt, Flange         |
| 17     | 5VK-F317E-00-00 | Stay                 |
| 18     | 5VK-F317F-00-00 | Stay 2               |
| 19     | 5VK-23389-00-00 | Guide, Cable         |
| 20     | 90105-05361-00  | Bolt, Flange         |
| 21     | 4H7-23441-01-P5 | Holder, Handle Upper |
| 22     | 3Y6-23442-00-P1 | Holder, Handle Lower |
| 23     | 90201-10141-00  | Washer, Plate        |
| 24     | 5VK-F317M-00-00 | Stay 3               |
| 25     | 95607-10200-00  | Nut, U Flange        |
| 26     | 90464-12001-00  | Clamp                |
| 27     | 91317-08030-00  | Bolt                 |
| 28     | 90338-06004-00  | Plug                 |
| 29     | 5VK-F3466-00-00 | Clamp                |
| 30     | 91317-06016-00  | Bolt                 |



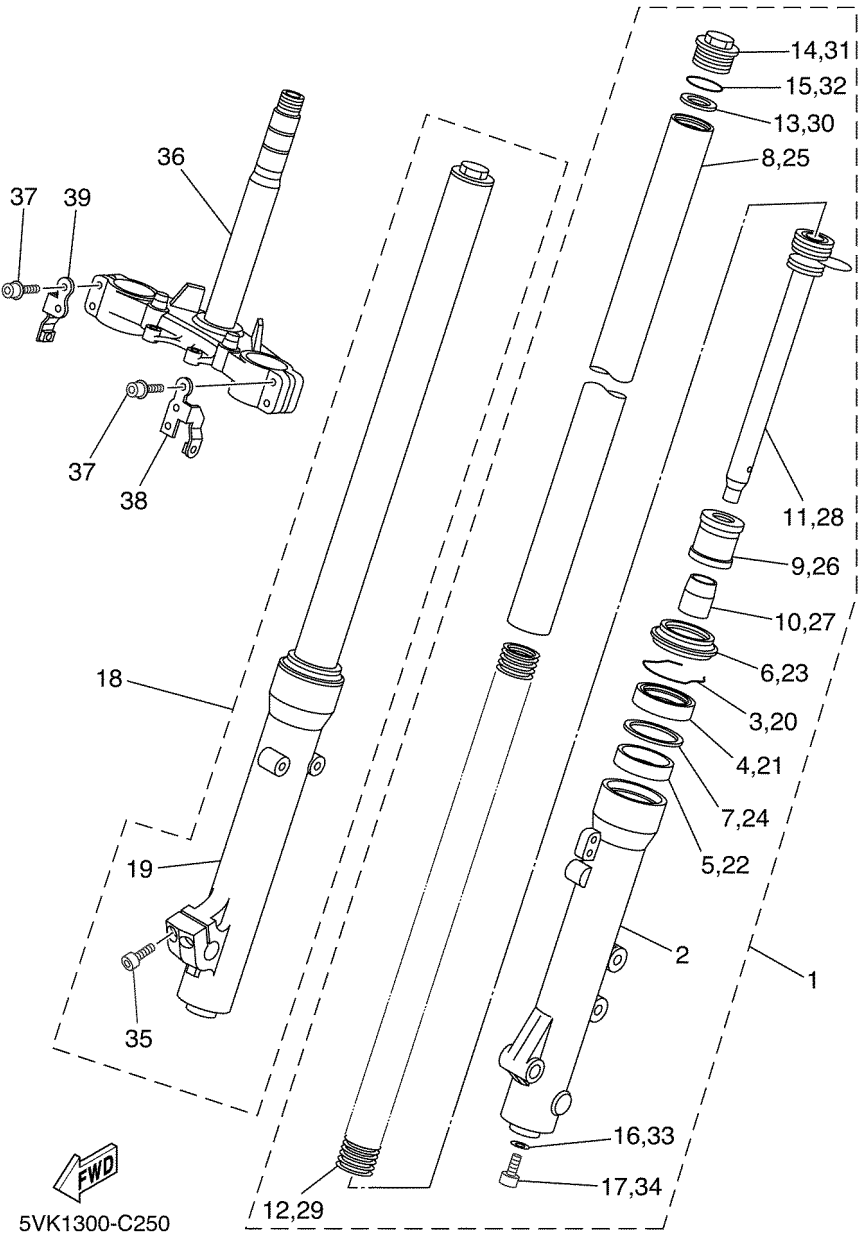


5VK1300-C250

| Ref No | Part No         | Description                    |
|--------|-----------------|--------------------------------|
| 01     | 5VK-F3102-00-00 | Front Fork Assy (l.h)          |
| 02     | 5VK-F3126-00-00 | • . Tube, Outer (left)         |
| 03     | 5VK-F3153-00-00 | • . Ring, Snap                 |
| 04     | 4DA-23145-L0-00 | • . Oil Seal                   |
| 05     | 5VK-F3125-00-00 | • . Metal, Slide 1             |
| 06     | 5VK-F3144-00-00 | • . Seal, Dust                 |
| 07     | 5VK-F3146-00-00 | • . Washer, Oil Seal           |
| 08     | 5VK-F3110-00-00 | • . Inner Tube Comp.1          |
| 09     | 3XJ-23171-L0-00 | • . Piston, Front Fork         |
| 10     | 5VK-F3173-00-00 | • . Spindle, Taper             |
| 11     | 5VK-F3170-00-00 | • . Cylinder Comp., Front Fork |
| 12     | 5VK-F3141-00-00 | • . Spring, Front Fork         |
| 13     | 5VK-F3149-00-00 | • . Washer, Spring Upper       |
| 14     | 5VK-F3111-00-00 | • . Bolt, Cap                  |
| 15     | 4V4-23188-L0-00 | • . O-ring                     |
| 16     | 5JH-F3158-00-00 | • . Gasket                     |
| 17     | 5VK-F3181-00-00 | • . Bolt, Hexagon Socket Head  |
| 18     | 5VK-F3103-00-00 | Front Fork Assy (r.h)          |
| 19     | 5VK-F3136-00-00 | • . Tube, Outer                |
| 20     | 5VK-F3153-00-00 | • . Ring, Snap                 |
| 21     | 4DA-23145-L0-00 | • . Oil Seal                   |
| 22     | 5VK-F3125-00-00 | • . Metal, Slide 1             |
| 23     | 5VK-F3144-00-00 | • . Seal, Dust                 |
| 24     | 5VK-F3146-00-00 | • . Washer, Oil Seal           |
| 25     | 5VK-F3110-00-00 | • . Inner Tube Comp.1          |
| 26     | 3XJ-23171-L0-00 | • . Piston, Front Fork         |
| 27     | 5VK-F3173-00-00 | • . Spindle, Taper             |
| 28     | 5VK-F3170-00-00 | • . Cylinder Comp., Front Fork |
| 29     | 5VK-F3141-00-00 | • . Spring, Front Fork         |
| 30     | 5VK-F3149-00-00 | • . Washer, Spring Upper       |
| 31     | 5VK-F3111-00-00 | • . Bolt, Cap                  |
| 32     | 4V4-23188-L0-00 | • . O-ring                     |
| 33     | 5JH-F3158-00-00 | • . Gasket                     |
| 34     | 5VK-F3181-00-00 | • . Bolt, Hexagon Socket Head  |
| 35     | 4CU-F3181-00-00 | • . Bolt (m8x25)               |
| 36     | 5VK-F3340-00-00 | Under Bracket Comp.            |
| 37     | 5SE-F3394-00-00 | Bolt, Special                  |
| 38     | 5VK-F334G-00-00 | Bracket 1                      |
| 39     | 5VK-F334H-00-00 | Bracket 2                      |

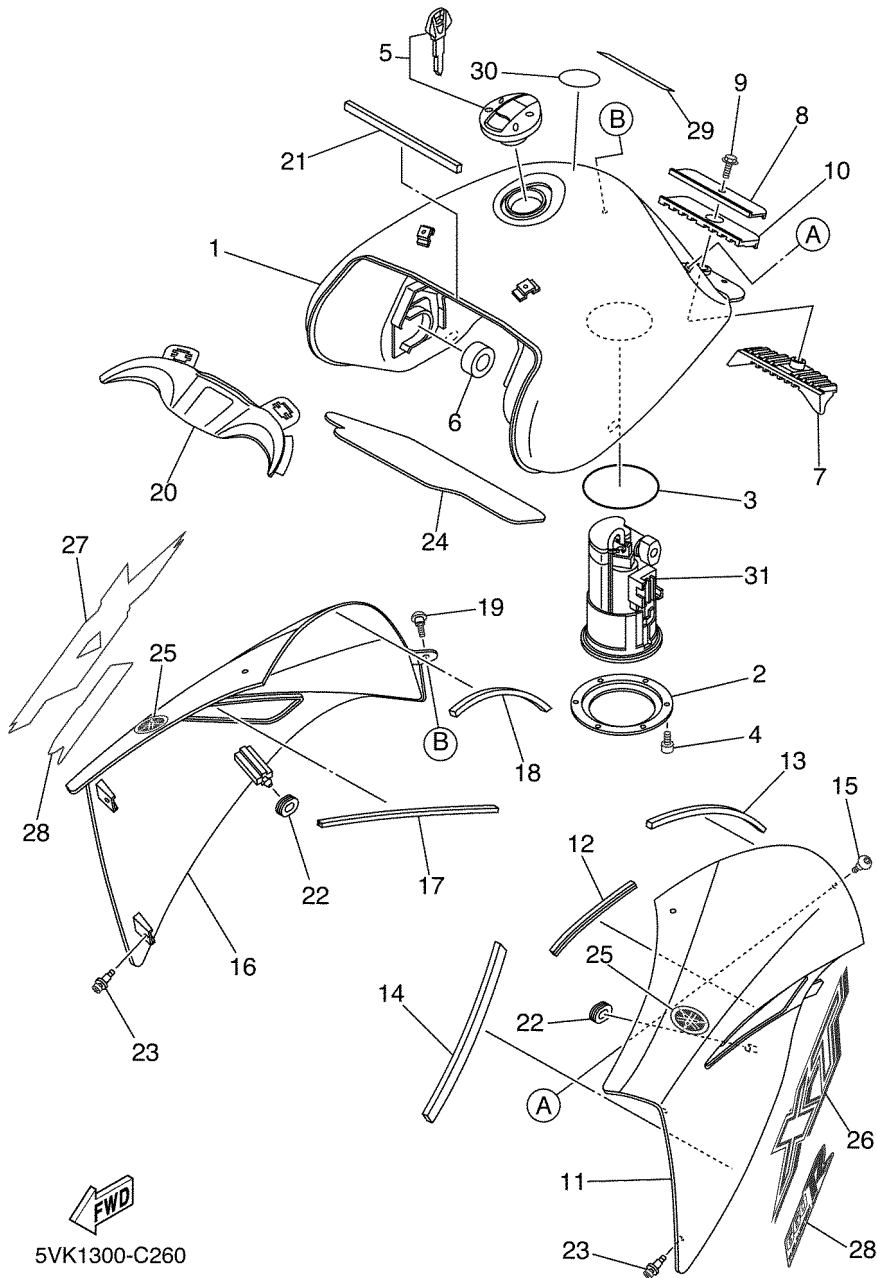


| Ref No | Part No         | Description            |
|--------|-----------------|------------------------|
| 01     | 5VK-F4110-10-P0 | Fuel Tank Comp.        |
| 02     | 5VK-F4491-00-00 | Bracket, Fuel Pump     |
| 03     | 5JW-24486-00-00 | O-ring                 |
| 04     | 91317-05010-00  | Bolt                   |
| 05     | 5VK-24602-00-00 | Cap Assy               |
| 06     | 3TB-24181-00-00 | Damper, Locating 1     |
| 07     | 5VK-24182-00-00 | Damper, Locating 2     |
| 08     | 5VK-F4186-00-00 | Washer, Special        |
| 09     | 95827-06012-00  | Bolt, Flange           |
| 10     | 5VK-24183-00-00 | Damper, Locating 3     |
| 11     | 5VK-F137W-01-00 | Scoop, Air 1           |
| 11     | 5VK-F137W-11-00 | Scoop, Air 1           |
| 12     | 5VK-28345-00-00 | Mole 1                 |
| 13     | 5VK-2414H-00-00 | Damper, Plate 1        |
| 14     | 5VK-2414K-00-00 | Damper, Plate 3        |
| 15     | 90111-05011-00  | Bolt                   |
| 16     | 5VK-F137X-01-00 | Scoop, Air 2           |
| 16     | 5VK-F137X-11-00 | Scoop, Air 2           |
| 17     | 5VK-28345-00-00 | Mole 1                 |
| 18     | 5VK-2414H-00-00 | Damper, Plate 1        |
| 19     | 90111-05011-00  | Bolt                   |
| 20     | 5VK-F137Y-00-00 | Guide, Air             |
| 21     | 5VK-28371-00-00 | Damper                 |
| 22     | 90480-01141-00  | Grommet                |
| 23     | 90269-06008-00  | Rivet                  |
| 24     | 5VK-2416F-00-00 | Insulator, Fuel Tank 1 |
| 25     | 5VK-F413B-01-00 | Emblem                 |
| 26     | 5VK-2173L-00-00 | Graphic Set 1          |
| 26     | 5VK-2173L-10-00 | Graphic Set 1          |
| 27     | 5VK-2174L-00-00 | Graphic Set 2          |
| 27     | 5VK-2174L-10-00 | Graphic Set 2          |
| 28     | 5VK-21788-00-00 | Graphic                |
| 28     | 5VK-21788-10-00 | Graphic                |
| 29     | 4CU-F1568-00-00 | Label, Warning         |
| 29     | 4CU-F1568-10-00 | Label, Warning         |
| 29     | 4CU-F1568-20-00 | Label, Warning         |
| 29     | 4CU-F1568-30-00 | Label, Warning         |
| 29     | 4CU-F1568-40-00 | Label, Warning         |
| 29     | 4CU-F1568-50-00 | Label, Warning         |
| 29     | 4CU-F1568-60-00 | Label, Warning         |
| 29     | 4CU-F1568-70-00 | Label, Warning         |
| 29     | 4CU-F1568-80-00 | Label, Warning         |
| 30     | 5DN-F415A-10-00 | Label, Caution         |
| 31     | 5VK-13907-01-00 | Fuel Pump Comp.        |

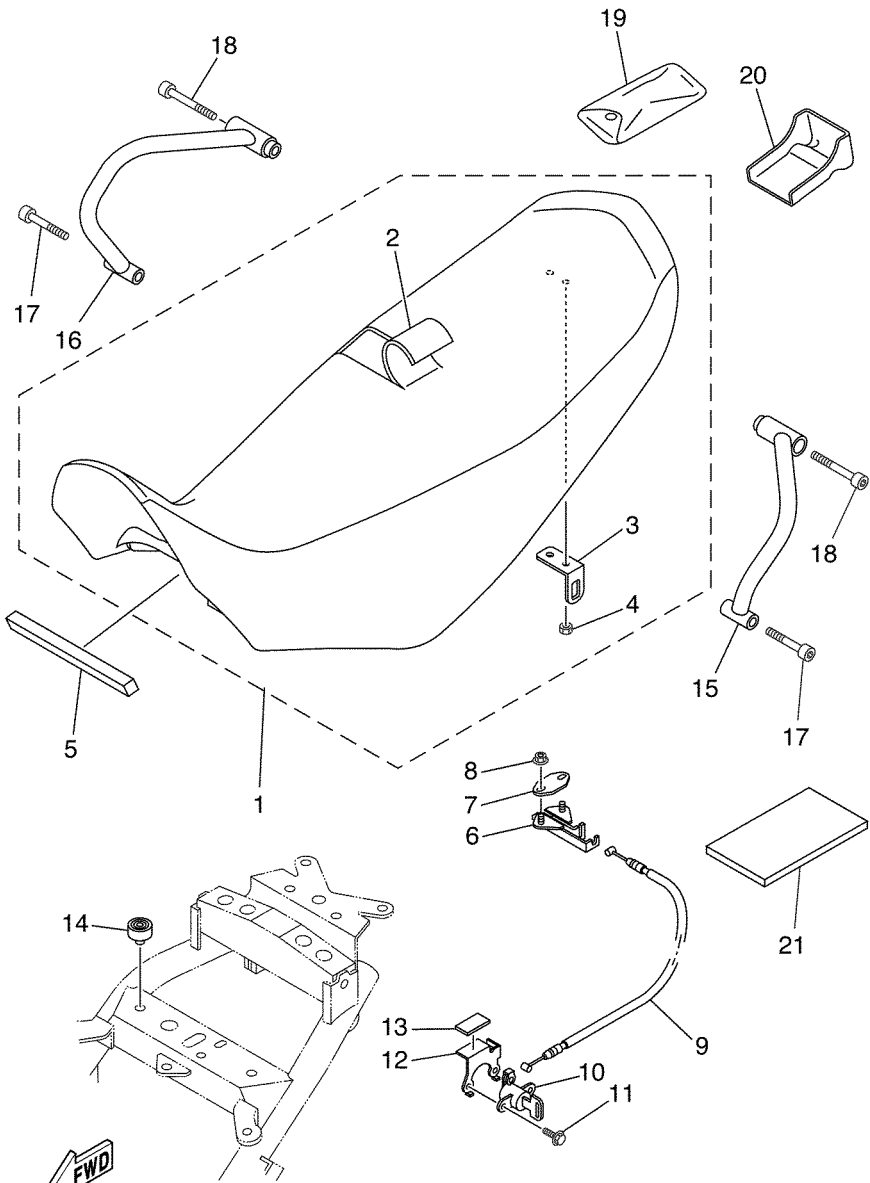

5VK1300-C270


| Ref No | Part No         | Description               |
|--------|-----------------|---------------------------|
| 01     | 5VK-F4770-01-00 | Semi-double Seat Assy     |
| 02     | 5VK-24731-01-00 | • . Cover, Seat           |
| 03     | 4HM-24728-00-00 | • . Bracket, Seat         |
| 04     | 90179-06635-00  | • . Nut                   |
| 05     | 5VK-24737-00-00 | Damper, Seat              |
| 06     | 4BP-24780-00-00 | Seat Lock Assy            |
| 07     | 5VK-F4792-00-00 | Plate                     |
| 08     | 95707-06500-00  | Nut, Flange               |
| 09     | 5VK-F478E-00-00 | Cable, Seat Lock          |
| 10     | 2TV-W2470-00-00 | Seat Lock Assy            |
| 11     | 95027-06014-00  | Bolt, Flange              |
| 12     | 5VK-F478X-00-00 | Bracket, Seat Lock        |
| 13     | 5VK-24747-00-00 | Damper, Seat              |
| 14     | 3VL-F4741-10-00 | Pad, Seat                 |
| 15     | 5VK-F474A-00-00 | Assist, Grip              |
| 16     | 5VK-F474W-00-00 | Assist,grip 2             |
| 17     | 90110-08232-00  | Bolt, Hexagon Socket Head |
| 18     | 91317-08050-00  | Bolt,hex.socket Head      |
| 19     | 5VK-F8100-00-00 | Tool Kit                  |
| 20     | 5VK-F8116-00-00 | Tool, Special             |
| 21     | 5VK-F8199-D0-00 | Manual,owner's            |
| 21     | 5VK-F8199-E0-00 | Manual,owner's            |
| 21     | 5VK-F8199-F0-00 | Manual,owner's            |
| 21     | 5VK-F8199-G0-00 | Manual,owner's            |
| 21     | 5VK-F8199-H0-00 | Manual,owner's            |
| 21     | 5VK-F8199-P0-00 | Manual,owner's            |
| 21     | 5VK-F8199-S0-00 | Manual,owner's            |

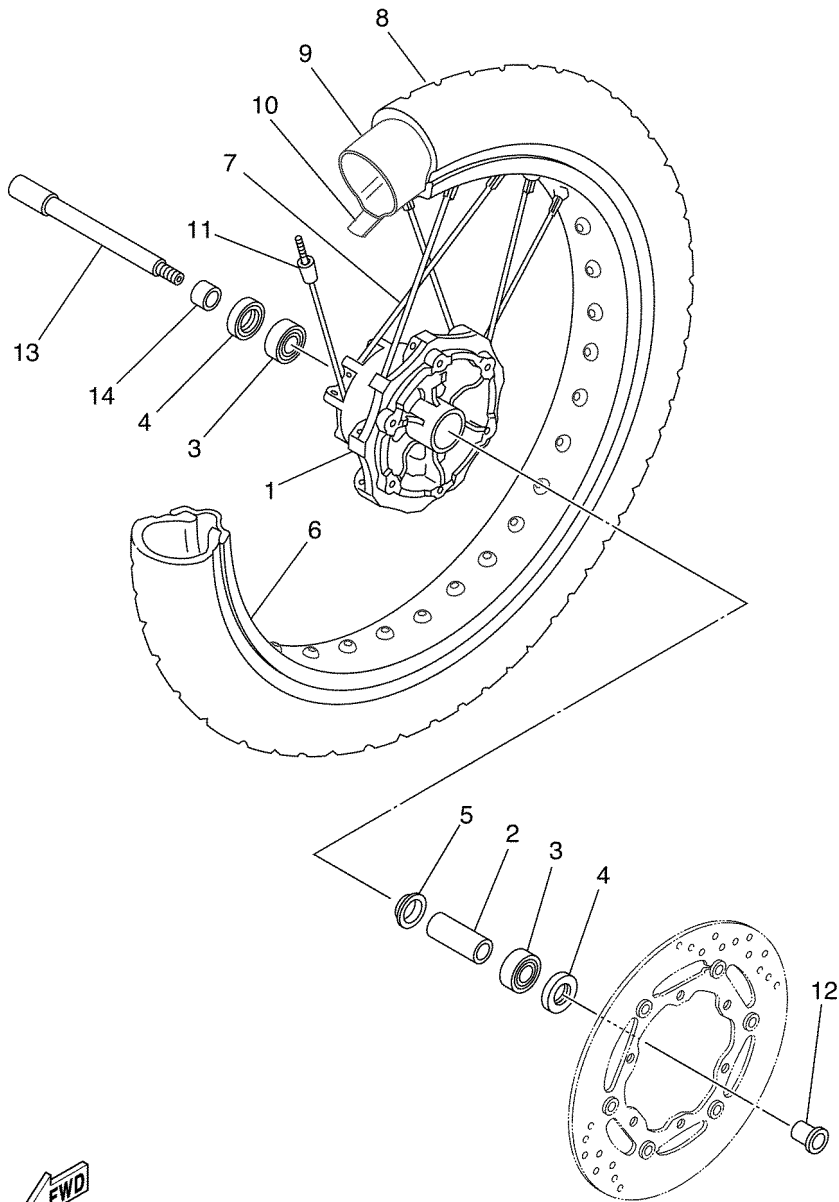

| Ref No | Part No         | Description            |
|--------|-----------------|------------------------|
| 01     | 5VK-25111-00-00 | Hub, Front             |
| 02     | 5VK-25117-00-00 | Spacer, Bearing        |
| 03     | 93306-20348-00  | Bearing                |
| 04     | 93106-23002-00  | Oil Seal               |
| 05     | 136-25115-00-00 | Flange, Spacer 1       |
| 06     | 94418-21800-00  | Rim (1.85-21)          |
| 07     | 5VK-F5104-00-00 | Spoke Set, Front       |
| 08     | *00-00000-00-00 | Tire (90/90-21m/c 54s) |
| 08     | *00-00000-00-00 | Tire (90/90-21m/c 54t) |
| 09     | *00-00000-00-00 | Tube                   |
| 09     | *00-00000-00-00 | Tube ( 21 )            |
| 10     | *00-00000-00-00 | Band, Rim              |
| 10     | *00-00000-00-00 | Band, Rim (21)         |
| 11     | 3HT-25398-00-00 | Balancer, Wheel (15g)  |
| 12     | 5VK-F5183-00-00 | Collar, Wheel          |
| 13     | 5VK-25181-00-00 | Axle, Wheel            |
| 14     | 5VK-F5186-00-00 | Collar, Wheel          |




| Ref No | Part No         | Description         |
|--------|-----------------|---------------------|
| 01     | 5VK-F581T-00-00 | Disk Brake Assy     |
| 02     | 90111-08823-00  | Bolt                |
| 03     | 5VK-F580T-00-00 | Caliper Assy (left) |
| 04     | 5VK-W0045-00-00 | • Brake Pad Kit     |
| 05     | 5VK-F5924-00-00 | • Pin, Pad          |
| 06     | 5VK-F5919-00-00 | • Support, Pad      |
| 07     | 5DS-F5825-00-00 | • Cap               |
| 08     | 5SE-F5824-00-00 | • Screw, Bleed      |
| 09     | 5DS-F5917-00-00 | • Boot, Caliper     |
| 10     | 90105-10069-00  | Bolt, Flange        |

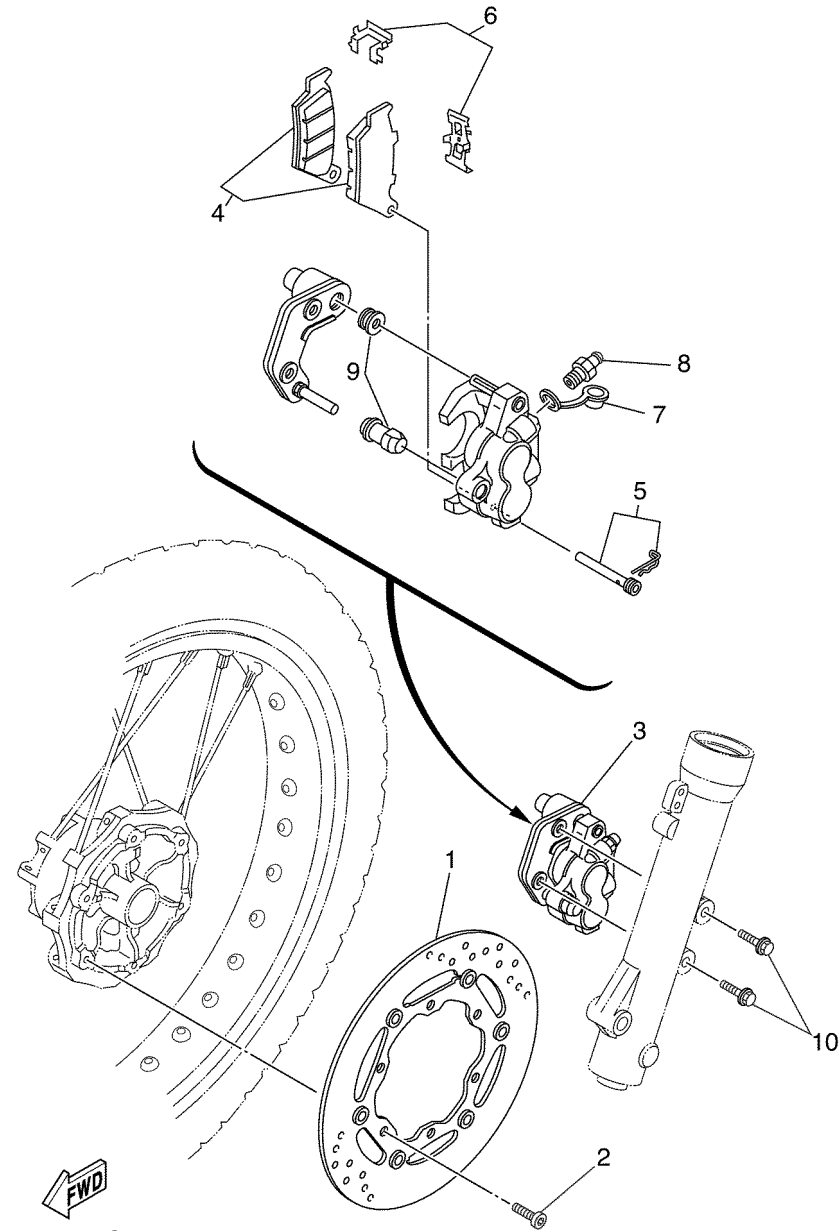


5VK1300-C290

**REAR WHEEL**


| Ref No | Part No         | Description              |
|--------|-----------------|--------------------------|
| 01     | 5VK-25311-00-00 | Hub, Rear                |
| 02     | 90560-17306-00  | Spacer                   |
| 03     | 93306-20348-00  | Bearing                  |
| 04     | 93106-23002-00  | Oil Seal                 |
| 05     | 5VK-25366-00-00 | Clutch, Hub              |
| 06     | 93306-30437-00  | Bearing                  |
| 07     | 1VJ-25377-00-00 | Collar, Wheel            |
| 08     | 93106-30029-00  | Oil Seal                 |
| 09     | 90116-10485-00  | Bolt, Stud               |
| 10     | 5VK-25445-01-00 | Sprocket, Driven (45t)   |
| 11     | 95607-10200-00  | Nut, U Flange            |
| 12     | 5Y1-25364-00-00 | Damper                   |
| 13     | 5VK-F5304-00-00 | Spoke Set, Rear          |
| 14     | 94427-17800-00  | Rim ( 4.25-17 )          |
| 15     | *00-00000-00-00 | Tire (130/80-17 M/c 65s) |
| 15     | *00-00000-00-00 | Tire (130/80-17 M/c 65t) |
| 16     | *00-00000-00-00 | Tube                     |
| 16     | *00-00000-00-00 | Tube ( 21 )              |
| 17     | *00-00000-00-00 | Band, Rim                |
| 17     | *00-00000-00-00 | Band, Rim (21)           |
| 18     | 3HT-25398-00-00 | Balancer, Wheel (15g)    |
| 19     | 94568-B2110-00  | Chain                    |
| 20     | 3AJ-25381-01-00 | Axle, Wheel              |
| 21     | 1UF-25388-00-00 | Puller, Chain 1          |
| 22     | 5VK-F2174-00-00 | End 1                    |
| 23     | 92907-08600-00  | Washer, Plate            |
| 24     | 95307-08600-00  | Nut                      |
| 25     | 90387-17801-00  | Collar                   |
| 26     | 90387-17802-00  | Collar                   |
| 27     | 90201-170T3-00  | Washer, Plate            |
| 28     | 90201-160T2-00  | Washer, Plate            |
| 29     | 95604-16200-00  | Nut, U Flange            |

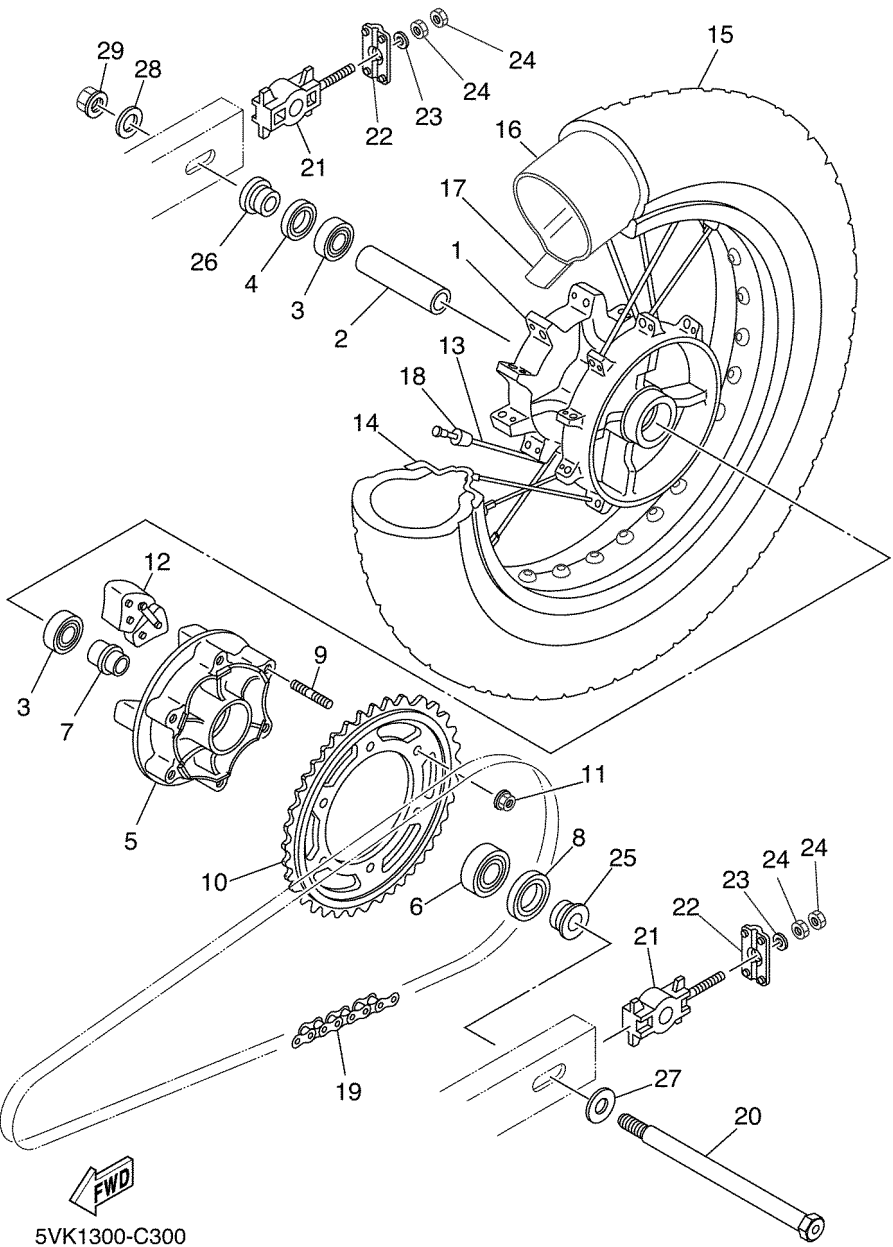

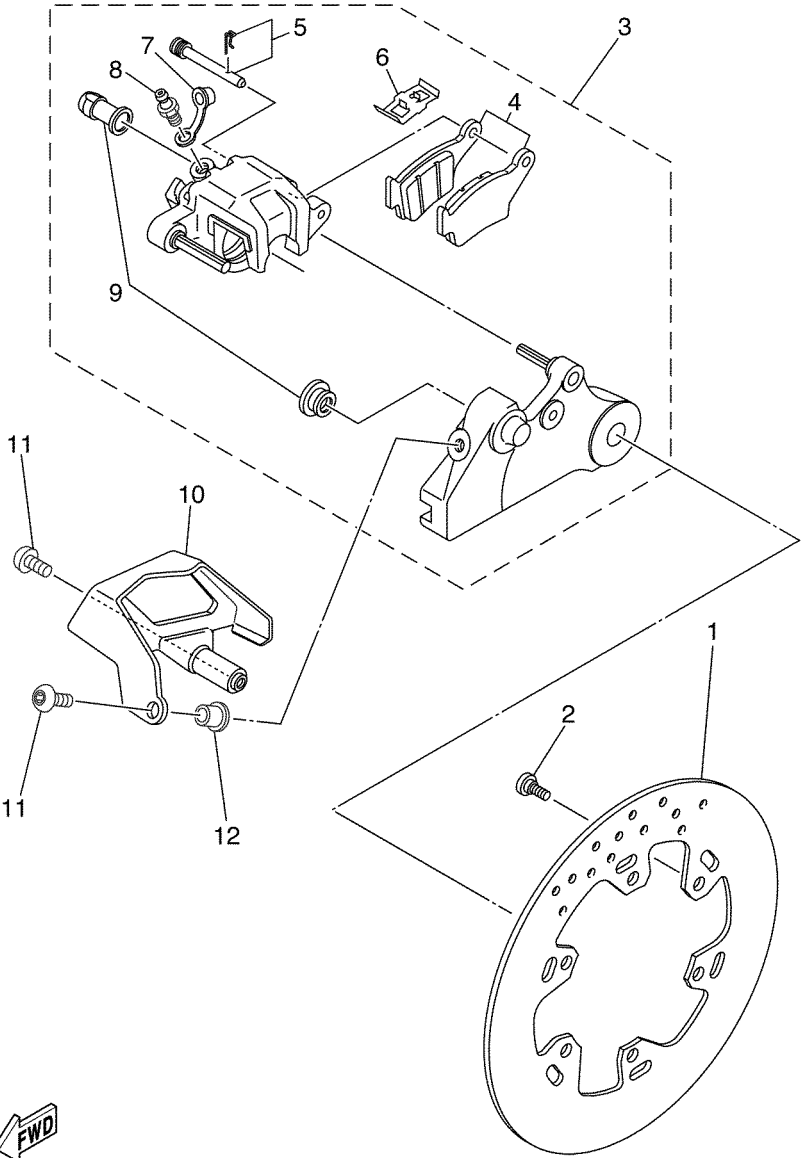

| Ref No | Part No         | Description          |
|--------|-----------------|----------------------|
| 01     | 5VK-F582W-00-00 | Disk, Rear Brake 2   |
| 02     | 90109-06816-00  | Bolt                 |
| 03     | 5VK-F580W-00-00 | Caliper Assy, Rear 2 |
| 04     | 5VK-W0046-00-00 | • . Brake Pad Kit 2  |
| 05     | 5VK-F5924-10-00 | • . Pin, Pad         |
| 06     | 5VK-F5919-10-00 | • . Support, Pad     |
| 07     | 5DS-F5825-00-00 | • . Cap              |
| 08     | 5SE-F5824-00-00 | • . Screw, Bleed     |
| 09     | 5DS-F5917-00-00 | • . Boot, Caliper    |
| 10     | 5CH-F7491-00-00 | Protector            |
| 11     | 90111-06029-00  | Bolt                 |
| 12     | 90387-06852-00  | Collar               |



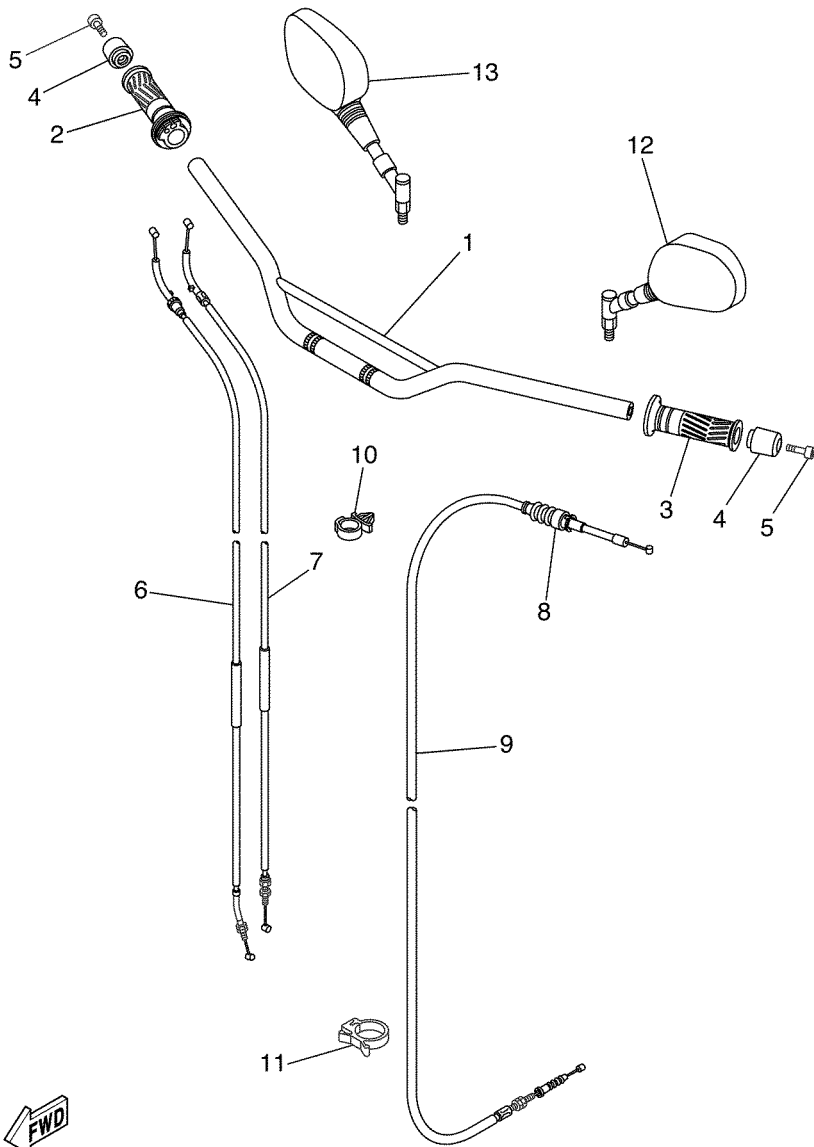

| Ref No | Part No         | Description                   |
|--------|-----------------|-------------------------------|
| 01     | 5VK-F6110-00-00 | Handle Comp.                  |
| 02     | 4YR-26240-02-00 | Grip Assy                     |
| 03     | 4YR-26241-02-00 | Grip (left)                   |
| 04     | 4JH-26246-00-00 | End, Grip                     |
| 05     | 91317-06035-00  | Bolt                          |
| 06     | 5VK-F6311-00-00 | Cable, Throttle 1             |
| 07     | 5VK-F6312-00-00 | Cable, Throttle 2             |
| 08     | 1E6-26342-00-00 | Boot, Cable                   |
| 09     | 5VK-F6335-00-00 | Cable, Clutch                 |
| 10     | 90464-12001-00  | Clamp                         |
| 11     | 90464-18004-00  | Clamp                         |
| 12     | 5VK-F6280-00-00 | Rear View Mirror Assy (left)  |
| 13     | 5VK-F6290-00-00 | Rear View Mirror Assy (right) |




5VK1300-C320




**FRONT MASTER CYLINDER**

| Ref No | Part No         | Description              |
|--------|-----------------|--------------------------|
| 01     | 5VK-W2587-00-00 | Master Cylinder Sub Assy |
| 02     | 3XP-W0041-00-00 | • . Cylinder Kit, Master |
| 03     | 98706-04012-00  | • . Screw, Flat Head     |
| 04     | 3GM-W2585-21-00 | • . Reservoir Cap Set    |
| 05     | 55U-25854-00-00 | • . Diaphragm, Reservoir |
| 06     | 5CG-25715-00-00 | • . Separator Assy       |
| 07     | 5VK-83922-00-00 | Lever 2                  |
| 08     | 90109-06577-00  | Bolt                     |
| 09     | 95606-06100-00  | Nut, U                   |
| 10     | 90501-10312-00  | Spring, Compression      |
| 11     | 5VK-83980-00-00 | Front Stop Switch Assy   |
| 12     | 56A-25867-00-00 | Bracket, Master Cylinder |
| 13     | 97007-06025-00  | Bolt                     |
| 14     | 92907-06600-00  | Washer, Plate            |
| 15     | 5VK-F5872-00-00 | Hose, Brake 1            |
| 16     | 90401-10X03-00  | Bolt, Union              |
| 17     | 90201-10X03-00  | Washer, Plate            |

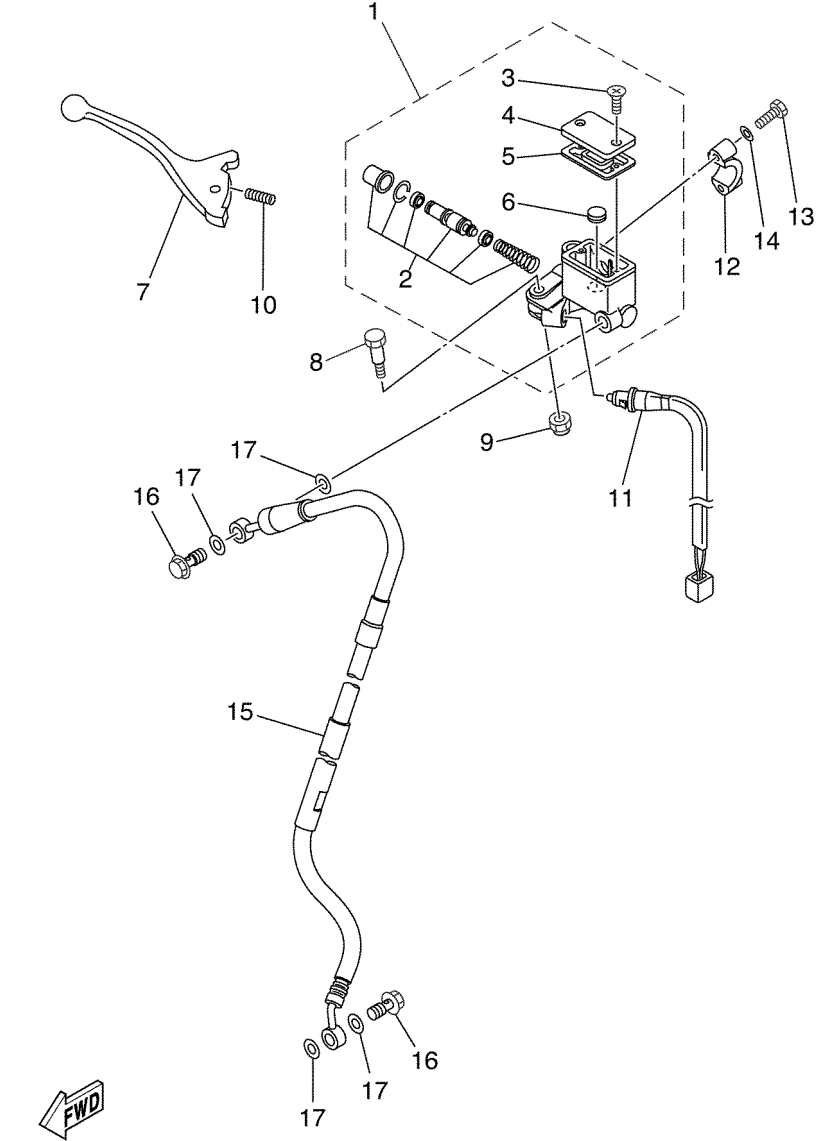


5VK1300-C330

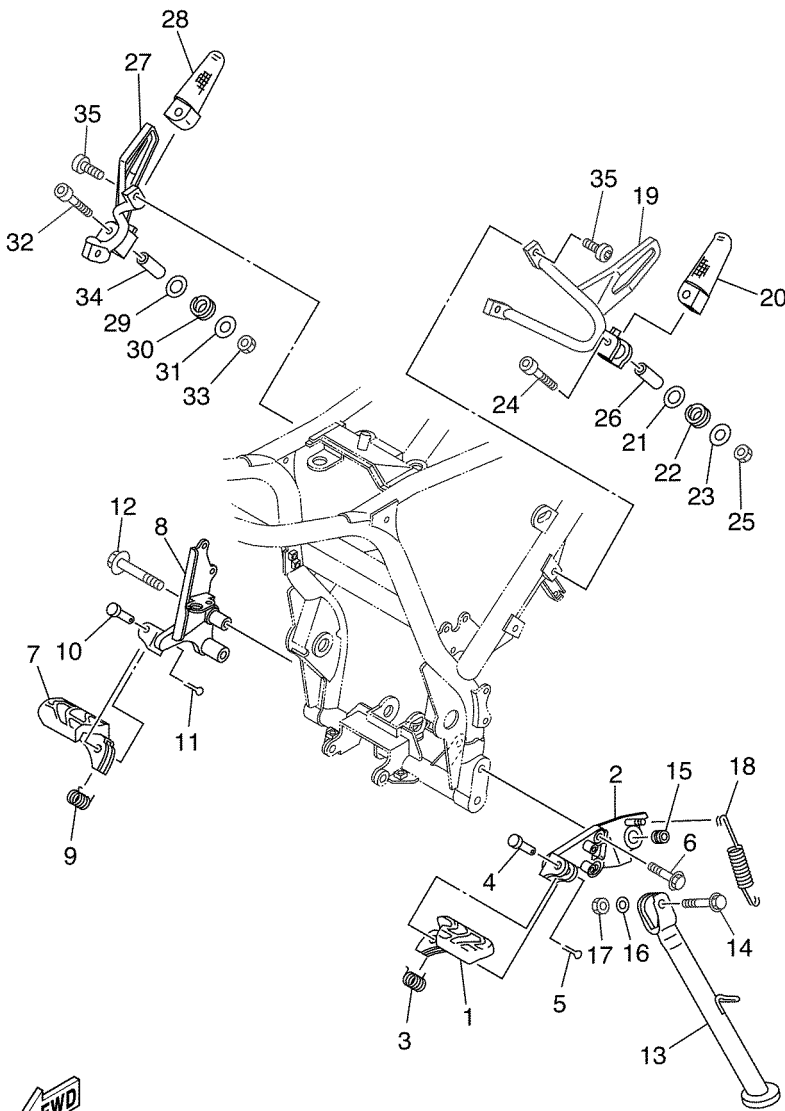


5VK1300-C340

| Ref No | Part No         | Description               |
|--------|-----------------|---------------------------|
| 01     | 5VK-27411-00-00 | Footrest 1                |
| 02     | 5VK-F7412-00-00 | Bracket, Footrest 1       |
| 03     | 90508-20801-00  | Spring, Torsion           |
| 04     | 90240-10800-00  | Pin, Clevis               |
| 05     | 91401-25020-00  | Pin, Cotter               |
| 06     | 90105-10813-00  | Bolt, Flange              |
| 07     | 5VK-27421-00-00 | Footrest 2                |
| 08     | 5VK-F7422-00-00 | Bracket, Footrest 2       |
| 09     | 90508-20802-00  | Spring, Torsion           |
| 10     | 90240-10800-00  | Pin, Clevis               |
| 11     | 91401-25020-00  | Pin, Cotter               |
| 12     | 90105-10811-00  | Bolt, Flange              |
| 13     | 5VK-F7311-00-00 | Stand, Side               |
| 14     | 90105-10814-00  | Bolt, Flange              |
| 15     | 90387-10020-00  | Collar                    |
| 16     | 90201-101J1-00  | Washer, Plate             |
| 17     | 95617-10100-00  | Nut, U                    |
| 18     | 90506-20002-00  | Spring, Tension           |
| 19     | 5VK-F741L-00-00 | Bracket 4                 |
| 20     | 5VK-F7431-00-00 | Footrest, Rear 1          |
| 21     | 90201-10430-00  | Washer, Plate             |
| 22     | 90504-18005-00  | Spring, Compression       |
| 23     | 90201-06060-00  | Washer, Plate             |
| 24     | 91317-06040-00  | Bolt                      |
| 25     | 95607-06100-00  | Nut, U                    |
| 26     | 90387-06086-00  | Collar                    |
| 27     | 5VK-F742L-00-00 | Bracket 5                 |
| 28     | 5VK-F7441-00-00 | Footrest, Rear 2          |
| 29     | 90201-10430-00  | Washer, Plate             |
| 30     | 90504-18005-00  | Spring, Compression       |
| 31     | 90201-06060-00  | Washer, Plate             |
| 32     | 91317-06040-00  | Bolt                      |
| 33     | 95607-06100-00  | Nut, U                    |
| 34     | 90387-06086-00  | Collar                    |
| 35     | 90110-08096-00  | Bolt, Hexagon Socket Head |

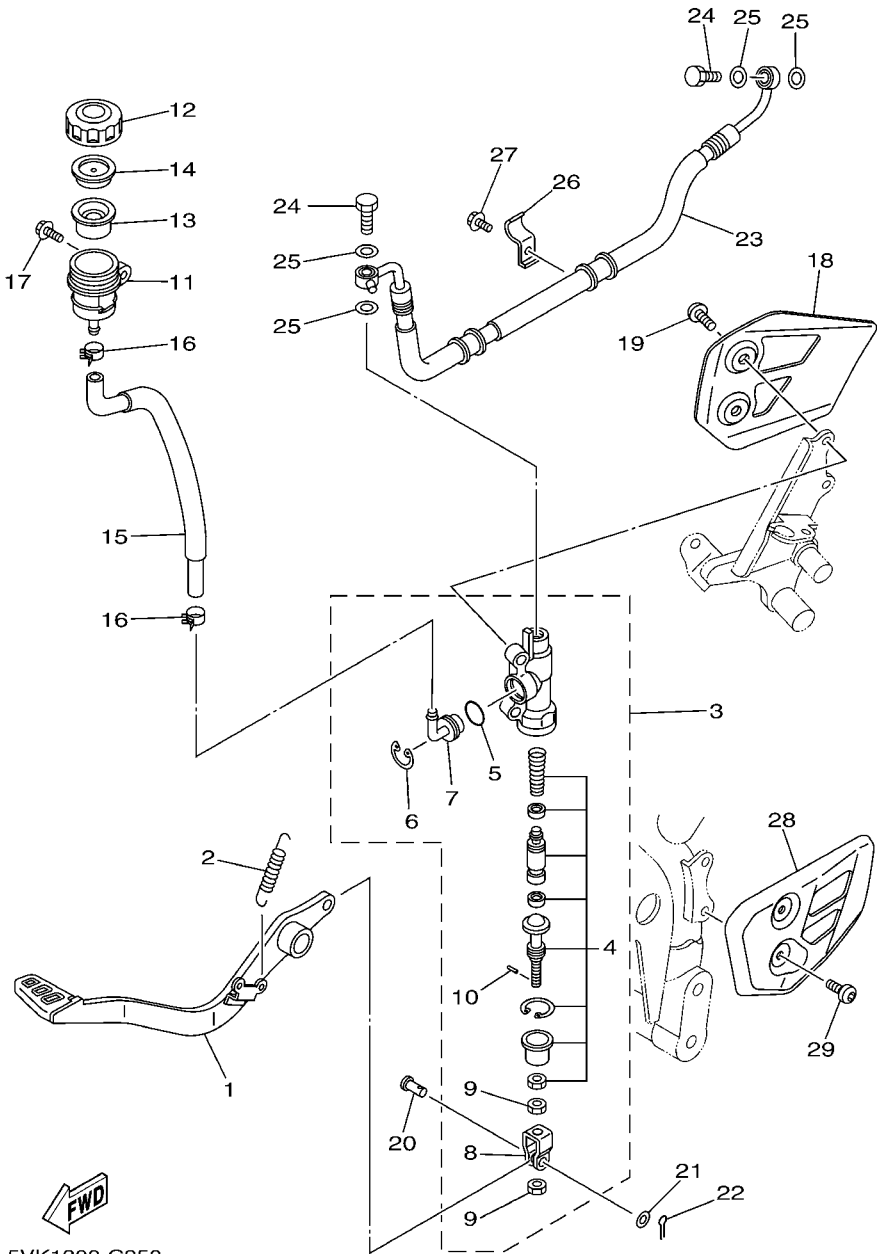


| Ref No | Part No         | Description               |
|--------|-----------------|---------------------------|
| 01     | 5VK-F7211-00-00 | Pedal, Brake              |
| 02     | 90506-20369-00  | Spring, Tension           |
| 03     | 5VK-2583V-00-00 | Rr. Master Cylinder Assy. |
| 04     | 3BN-W0042-50-00 | • . Cylinder Kit, Master  |
| 05     | 93210-15620-00  | • . O-ring                |
| 06     | 2VN-25866-00-00 | • . Circlip               |
| 07     | 4ML-2582A-50-00 | • . Joint                 |
| 08     | 2YK-27222-00-00 | • . Joint                 |
| 09     | 4SS-27218-00-00 | • . Nut                   |
| 10     | 3KW-27234-00-00 | • . Pin, Brake Rod        |
| 11     | 5JJ-25894-00-00 | Tank, Reservoir           |
| 12     | 3XP-25852-50-00 | Cap, Reservoir            |
| 13     | 2VN-25854-00-00 | Diaphragm, Reservoir      |
| 14     | 2VN-25855-00-00 | Bush,diaphragm            |
| 15     | 5VK-25895-00-00 | Hose, Reservoir           |
| 16     | 90467-12085-00  | Clip                      |
| 17     | 90119-06044-00  | Bolt, With Washer         |
| 18     | 5VK-F117M-00-00 | Cover 2                   |
| 19     | 90109-085G6-00  | Bolt                      |
| 20     | 90240-08124-00  | Pin, Clevis               |
| 21     | 90201-08083-00  | Washer, Plate             |
| 22     | 91401-16012-00  | Pin, Cotter               |
| 23     | 5VK-F5873-00-00 | Hose, Brake 2             |
| 24     | 90401-10X03-00  | Bolt, Union               |
| 25     | 90201-10X03-00  | Washer, Plate             |
| 26     | 5VK-F5875-00-00 | Holder, Brake Hose 1      |
| 27     | 95027-06012-00  | Bolt, Flange              |
| 28     | 5VK-F117F-00-00 | Cover                     |
| 29     | 90149-06298-00  | Screw                     |

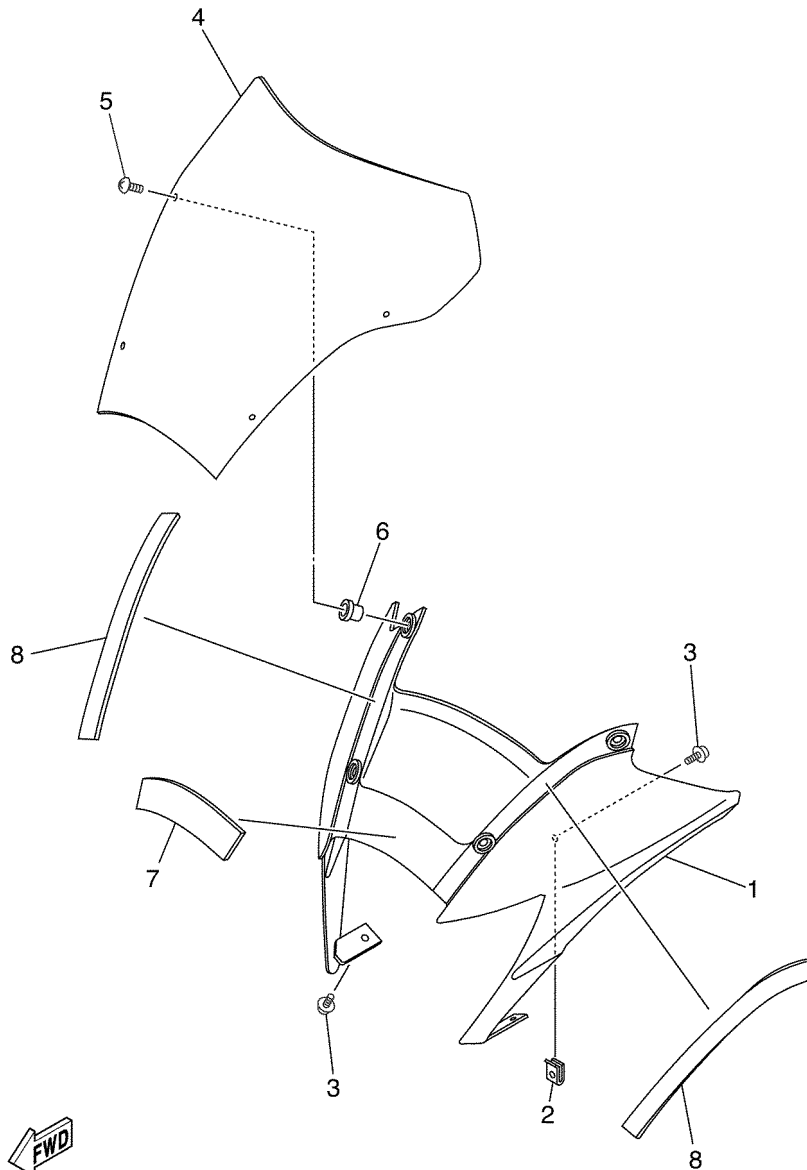


5VK1300-C360

| Ref No | Part No         | Description        |
|--------|-----------------|--------------------|
| 01     | 5VK-F8351-00-00 | Body, Cowling      |
| 01     | 5VK-F8351-10-00 | Body, Cowling      |
| 02     | 90183-05061-00  | Nut, Spring        |
| 03     | 90159-05083-00  | Screw, With Washer |
| 04     | 5VK-F8381-00-00 | Windshield         |
| 05     | 90150-05023-00  | Screw, Round Head  |
| 06     | 90179-05523-00  | Nut                |
| 07     | 5VK-2837J-00-00 | Damper 5           |
| 08     | 5VK-2837K-00-00 | Damper 6           |


| Ref No | Part No         | Description       |
|--------|-----------------|-------------------|
| 01     | 5VK-81410-00-00 | Stator Assy       |
| 02     | 5VK-81450-00-00 | Rotor Assy        |
| 03     | 92017-06030-00  | Bolt, Button Head |
| 04     | 91317-05014-00  | Bolt              |
| 05     | 90201-05X08-00  | Washer, Plate     |

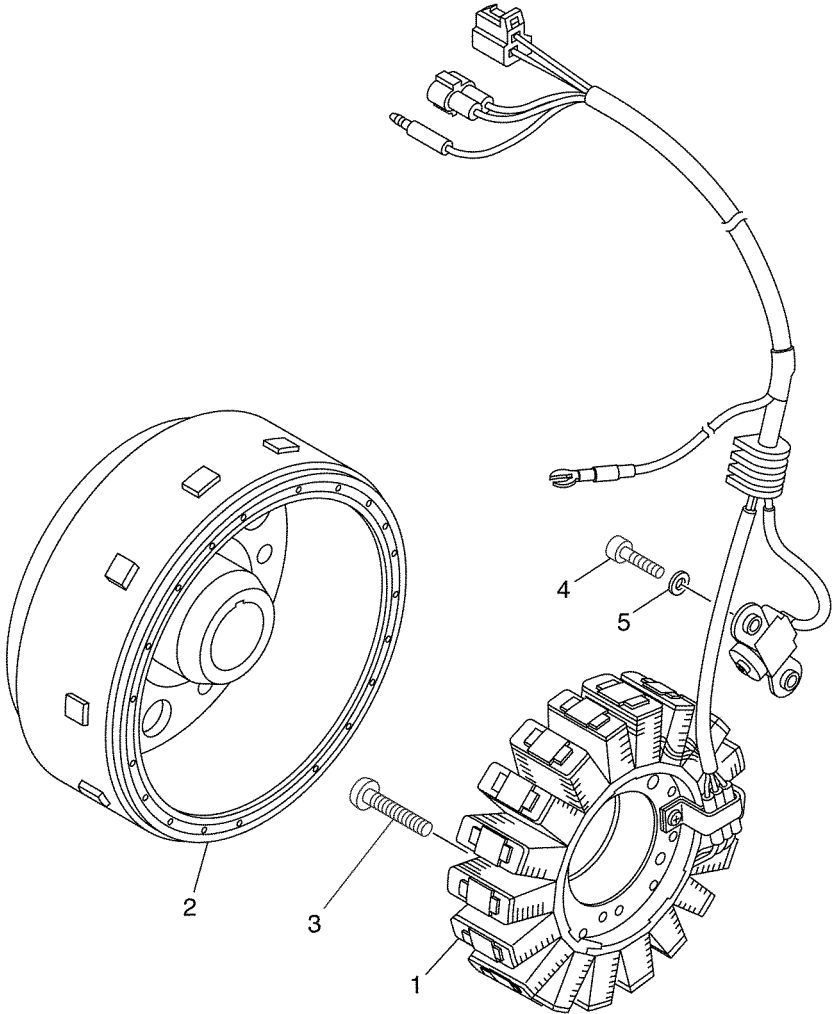

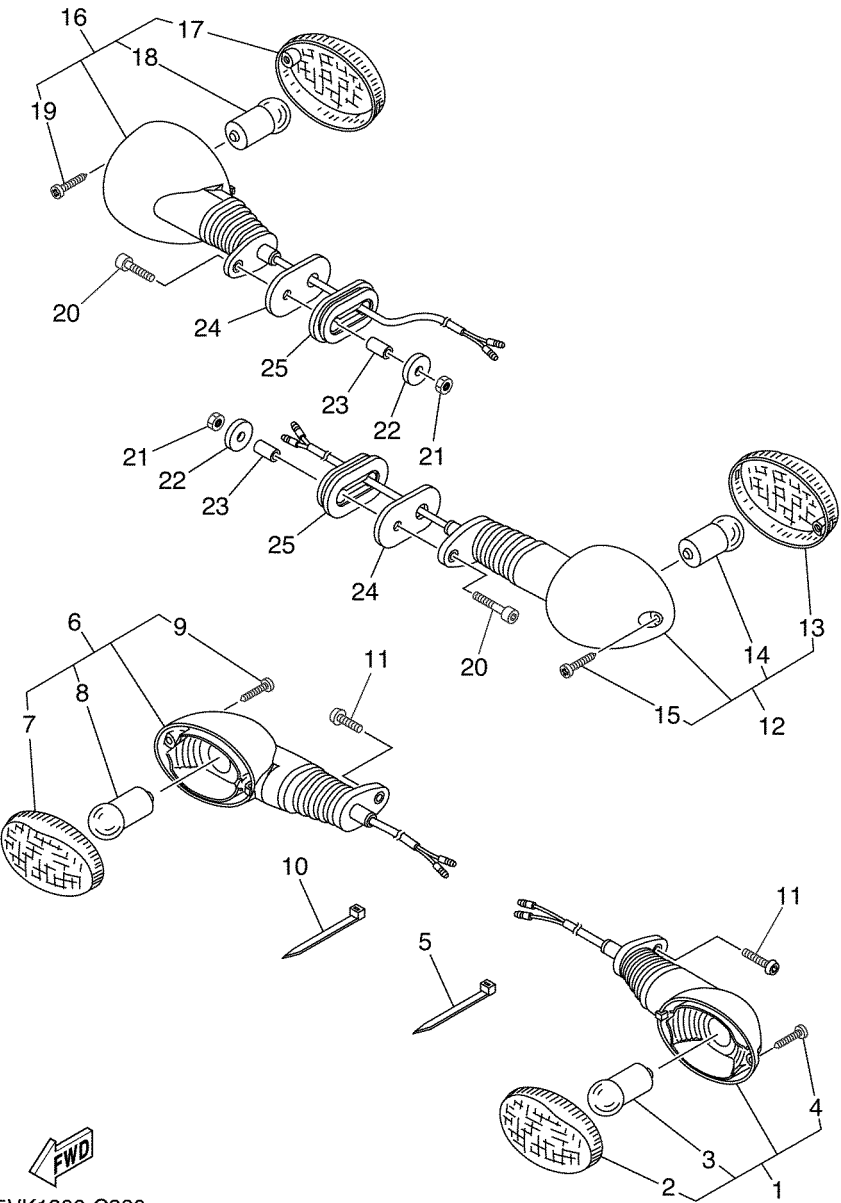


| Ref No | Part No         | Description                |
|--------|-----------------|----------------------------|
| 01     | 5VK-H3310-00-00 | Front Flasher Light Assy 1 |
| 02     | 5VK-H333A-00-00 | • . Lens Comp              |
| 03     | 5VK-H3311-00-00 | • . Bulb, Flasher          |
| 04     | 5VK-H3333-00-00 | • . Screw, Lens Fitting    |
| 05     | 90464-16061-00  | Clamp                      |
| 06     | 5VK-H3320-00-00 | Front Flasher Light Assy 2 |
| 07     | 5VK-H333A-00-00 | • . Lens Comp              |
| 08     | 5VK-H3311-00-00 | • . Bulb, Flasher          |
| 09     | 5VK-H3333-00-00 | • . Screw, Lens Fitting    |
| 10     | 90464-16061-00  | Clamp                      |
| 11     | 92017-06014-00  | Bolt, Button Head          |
| 12     | 5VK-H3330-00-00 | Rear Flasher Light Assy 1  |
| 13     | 5VK-H333A-00-00 | • . Lens Comp              |
| 14     | 5VK-H3311-00-00 | • . Bulb, Flasher          |
| 15     | 5VK-H3333-00-00 | • . Screw, Lens Fitting    |
| 16     | 5VK-H3340-00-00 | Rear Flasher Light Assy 2  |
| 17     | 5VK-H333A-00-00 | • . Lens Comp              |
| 18     | 5VK-H3311-00-00 | • . Bulb, Flasher          |
| 19     | 5VK-H3333-00-00 | • . Screw, Lens Fitting    |
| 20     | 91317-06035-00  | Bolt                       |
| 21     | 95607-06100-00  | Nut, U                     |
| 22     | 90201-06026-00  | Washer, Plate              |
| 23     | 90387-06088-00  | Collar                     |
| 24     | 5VK-83359-00-00 | Washer, Special            |
| 25     | 5VK-83345-00-00 | Plug, Blind                |

| Ref No | Part No         | Description       |
|--------|-----------------|-------------------|
| 01     | 5VK-83500-00-00 | Speedometer Assy  |
| 01     | 5VK-83500-10-00 | Speedometer Assy  |
| 02     | 90164-05014-00  | Screw, Tapping    |
| 03     | 90480-14555-00  | Grommet           |
| 04     | 5VK-H3519-00-00 | Bracket, Meter    |
| 05     | 92017-06014-00  | Bolt, Button Head |
| 06     | 90464-12089-00  | Clamp             |

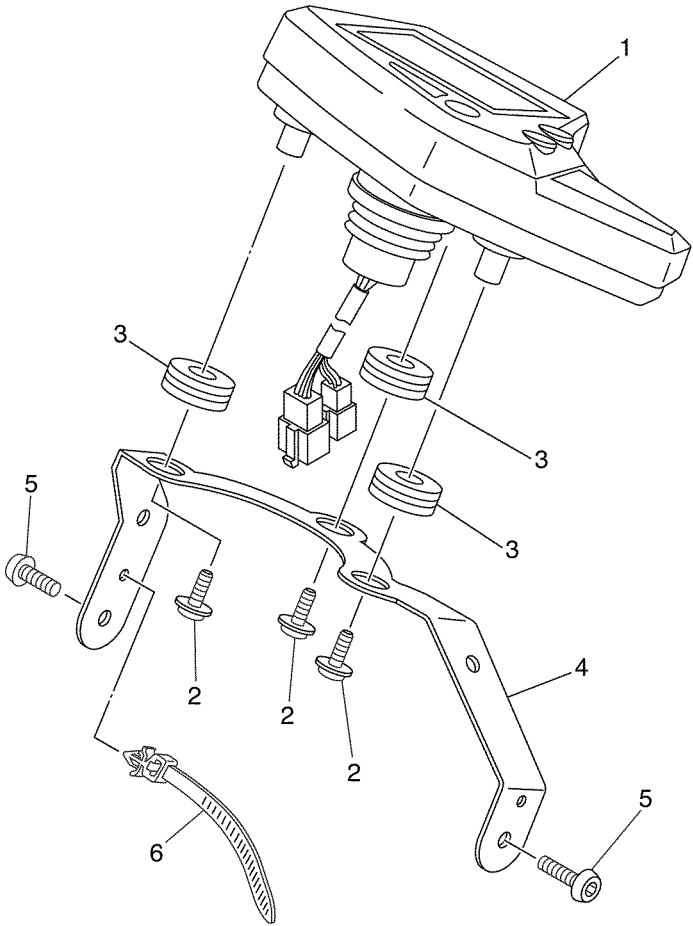

  
5VK1300-C390

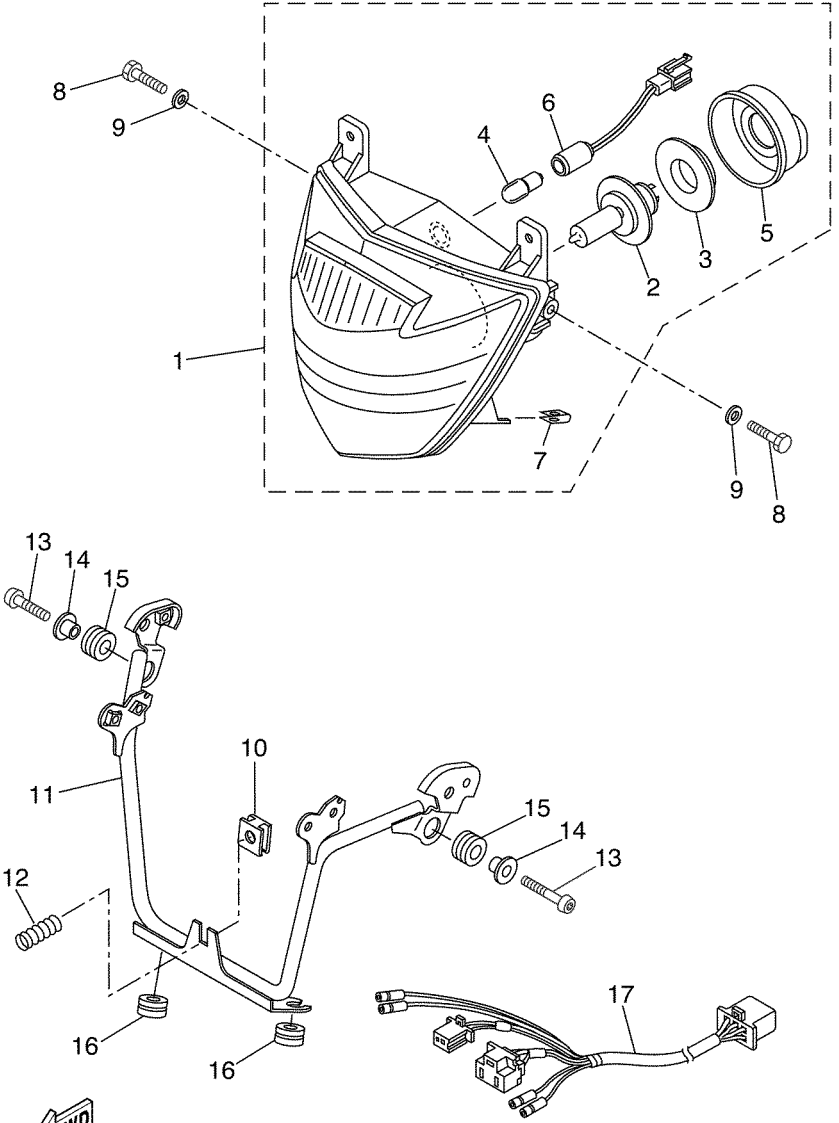


1D21300-C401



| Ref No | Part No         | Description          |
|--------|-----------------|----------------------|
| 01     | 5VK-H410A-00-00 | Headlight Unit Comp. |
| 01     | 5VK-H410A-10-00 | Headlight Unit Comp. |
| 02     | 5VK-H4314-00-00 | • . Bulb, Headlight  |
| 03     | 5VK-H4393-00-00 | • . Holder, Bulb     |
| 04     | 3WW-H4347-00-00 | • . Bulb (12v-5w)    |
| 05     | 5VK-H4397-00-00 | • . Cover, Socket    |
| 06     | 5VK-H4312-00-00 | • . Holder, Socket   |
| 07     | 90183-05808-00  | • . Nut, Spring      |
| 08     | 90101-06815-00  | Bolt                 |
| 09     | 90201-06839-00  | Washer, Plate        |
| 10     | 5VK-H4334-00-00 | Nut, Adjusting       |
| 11     | 5VK-H4118-00-00 | Stay, Headlight 1    |
| 12     | 5VK-H4332-00-00 | Spring, Screw        |
| 13     | 92017-06020-00  | Bolt, Button Head    |
| 14     | 90387-065G0-00  | Collar               |
| 15     | 90480-15058-00  | Grommet              |
| 16     | 90480-15316-00  | Grommet              |
| 17     | 5VK-H4359-00-00 | Cord, Headlight      |



**TAILLIGHT**


| Ref No | Part No         | Description             |
|--------|-----------------|-------------------------|
| 01     | 5VK-H4710-00-00 | Taillight Unit Assy     |
| 02     | 5VK-H4721-00-00 | • . Lens, Taillight     |
| 03     | 5VK-H4743-00-00 | • . Lens, Licence Light |
| 04     | 1A2-84714-41-00 | • . Bulb (12v-21/5w)    |
| 05     | 5VK-H4735-00-00 | • . Cord Assy           |
| 06     | 5SE-H4724-00-00 | • . Screw, Lens Fitting |
| 07     | 90480-14329-00  | Grommet                 |
| 08     | 90387-065G0-00  | Collar                  |
| 09     | 90201-06057-00  | Washer, Plate           |
| 10     | 95607-06200-00  | Nut, Self U-flange      |
| 11     | 3NC-H5130-00-00 | Rear Reflector Assy     |
| 12     | 95607-05200-00  | Nut, U Flange           |

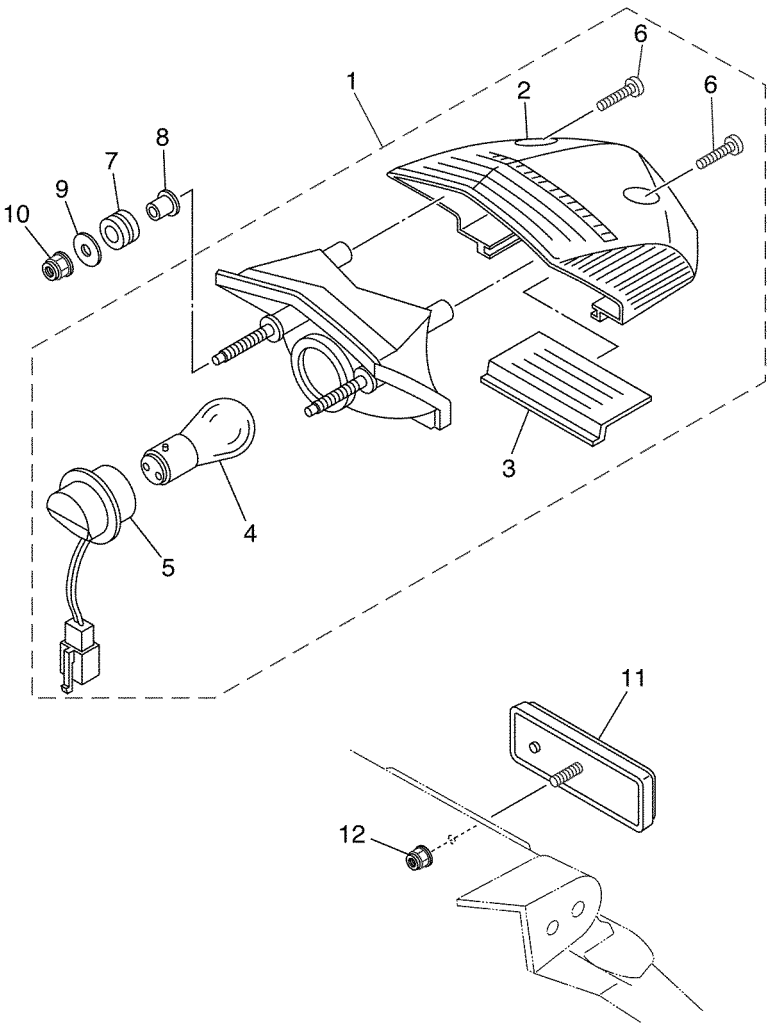

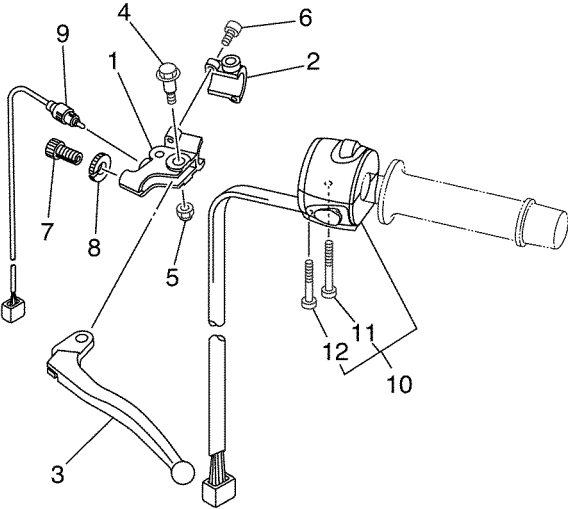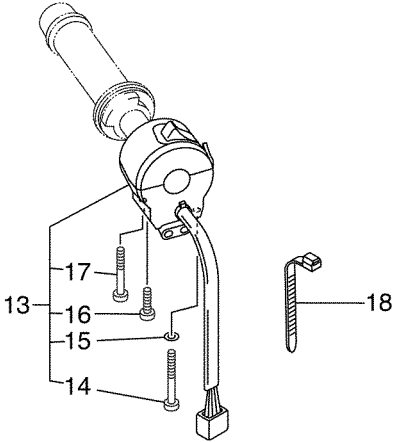

| Ref No | Part No         | Description           |
|--------|-----------------|-----------------------|
| 01     | 1LN-82911-00-00 | Holder, Lever 1       |
| 02     | 33G-82913-01-00 | Holder, Lever Lower 1 |
| 03     | 3FY-83912-01-00 | Lever 1               |
| 04     | 90109-06799-00  | Bolt                  |
| 05     | 95607-06100-00  | Nut, U                |
| 06     | 91317-05020-00  | Bolt                  |
| 07     | 90123-08046-00  | Bolt                  |
| 08     | 90179-08148-00  | Nut                   |
| 09     | 5VK-82917-00-00 | Switch                |
| 10     | 5VK-83969-00-00 | Switch, Handle 5      |
| 11     | 98507-05030-00  | • . Screw, Pan Head   |
| 12     | 98507-05045-00  | • . Screw, Pan Head   |
| 13     | 5VK-83975-00-00 | Switch, Handle 2      |
| 14     | 98507-05055-00  | • . Screw, Pan Head   |
| 15     | 92907-05600-00  | • . Washer, Plate     |
| 16     | 98507-05045-00  | • . Screw, Pan Head   |
| 17     | 98507-05020-00  | • . Screw, Pan Head   |
| 18     | 90464-25004-00  | Clamp                 |




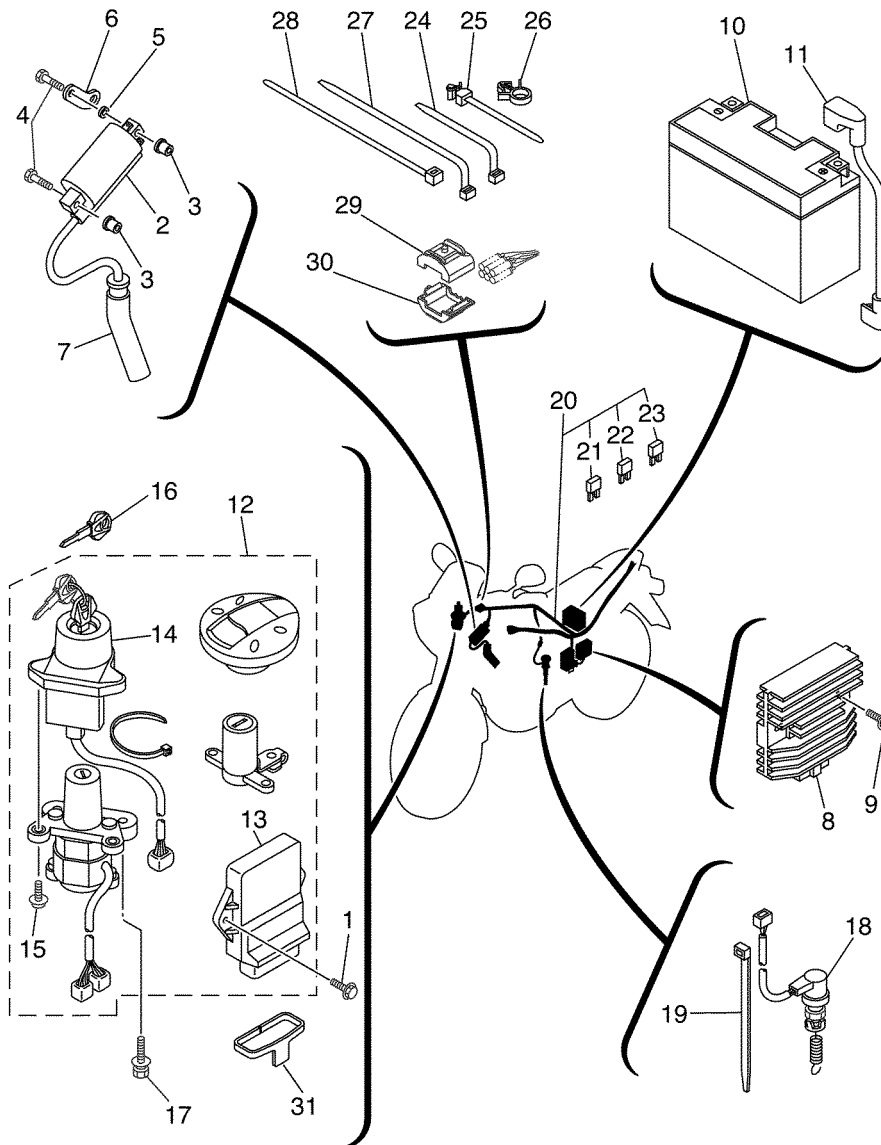

5VK1300-C430

## ELECTRICAL 1

| Ref No | Part No         | Description                  |
|--------|-----------------|------------------------------|
| 01     | 90119-06192-00  | Bolt, With Washer            |
| 02     | 4GV-82310-00-00 | Ignition Coil Assy           |
| 03     | 90179-05523-00  | Nut                          |
| 04     | 97007-05025-00  | Bolt                         |
| 05     | 90201-05556-00  | Washer, Plate                |
| 06     | 5VK-82312-00-00 | Holder, Coil Fitting         |
| 07     | 5VK-82370-00-00 | Plug Cap Assy                |
| 08     | 5SL-81960-00-00 | Rectifier & Regulator Assy   |
| 09     | 95027-06020-00  | Bolt, Flange                 |
| 10     | 5FL-82100-01-00 | Battery Assy (gt9b-4)        |
| 11     | 5VK-H2115-00-00 | Wire, Plus Lead              |
| 12     | 5VK-W8250-00-00 | Main Sw. Immobilizer Kit     |
| 12     | 5VK-W8250-01-00 | Main Sw. Immobilizer Kit     |
| 13     | 5VK-8591A-00-00 | • . Engine Control Unit Assy |
| 13     | 5VK-8591A-01-00 | • . Engine Control Unit Assy |
| 14     | 5VS-8255P-00-00 | • . Immobilizer. Unit Comp.  |
| 15     | 5SL-82113-00-00 | • . Screw                    |
| 16     | 5SL-82511-08-00 | Blank Key                    |
| 17     | 90109-080G5-00  | Bolt                         |
| 18     | 5VK-82530-00-00 | Stop Switch Assy             |
| 19     | 90464-16061-00  | Clamp                        |
| 20     | 5VK-H2590-00-00 | Wire Harness Assy            |
| 21     | 5JJ-82151-00-00 | • . Fuse (7.5a-bl)           |
| 22     | 5JJ-82151-30-00 | • . Fuse (10a-bl)            |
| 23     | 5JJ-82151-20-00 | • . Fuse (20a-bl)            |
| 24     | 90464-13077-00  | Clamp                        |
| 25     | 90464-12089-00  | Clamp                        |
| 26     | 90464-15157-00  | Clamp                        |
| 27     | 90464-15195-00  | Clamp                        |
| 28     | 1UA-82591-00-00 | Band                         |
| 29     | 5VS-8258J-00-00 | Housing, Connecteur 1        |
| 30     | 5VS-8259J-00-00 | Housing, Connecteur 2        |
| 31     | 5WM-81614-00-00 | Protector                    |

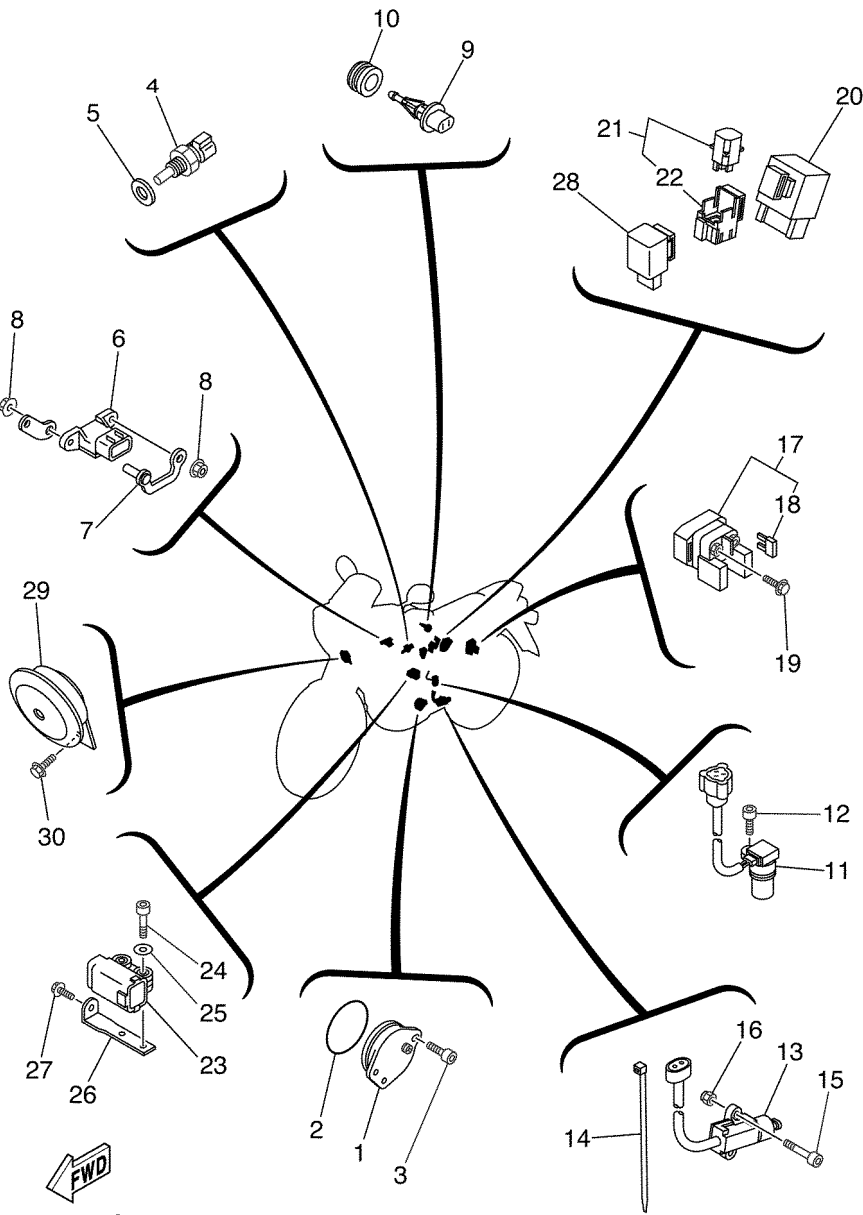

5VK1300-C441

| Ref No | Part No         | Description                |
|--------|-----------------|----------------------------|
| 01     | 1AE-82540-00-00 | Neutral Switch Assy        |
| 02     | 93210-29196-00  | O-ring                     |
| 03     | 90110-06122-00  | Bolt, Hexagon Socket Head  |
| 04     | 5PS-85790-00-00 | Thermosensor Assy          |
| 05     | 90430-12202-00  | Gasket                     |
| 06     | 5PS-82380-00-00 | Sensor, Pressure           |
| 07     | 5VK-82388-00-00 | Plate                      |
| 08     | 95707-06500-00  | Nut, Flange                |
| 09     | 5VU-85886-00-00 | Sensor, Air Temperature    |
| 10     | 5CA-14435-00-00 | Grommet                    |
| 11     | 5LP-83755-01-00 | Sensor, Speed              |
| 12     | 91317-06014-00  | Bolt                       |
| 13     | 5RT-82566-50-00 | Switch, Side Stand         |
| 14     | 90464-16061-00  | Clamp                      |
| 15     | 91317-05035-00  | Bolt                       |
| 16     | 95607-05100-00  | Nut, U                     |
| 17     | 4SV-81940-12-00 | Starter Relay Assy         |
| 18     | 1AE-82151-00-00 | • . Fuse (30a-bl)          |
| 19     | 95027-06008-00  | Bolt, Flange               |
| 20     | 5VK-81950-40-00 | Relay Assy                 |
| 21     | 5JJ-81950-20-00 | Relay Assy                 |
| 22     | 5JJ-81952-00-00 | • . Holder, Relay          |
| 23     | 5PS-82576-01-00 | Emergency Stop Switch Assy |
| 24     | 91317-04025-00  | Bolt                       |
| 25     | 90201-047A2-00  | Washer, Plate              |
| 26     | 5VK-F1453-00-00 | Bracket, Switch            |
| 27     | 95807-06016-00  | Bolt, Flange               |
| 28     | 4GY-83350-00-00 | Flasher Relay Assy         |
| 29     | 5VK-H3371-00-00 | Horn                       |
| 30     | 95027-06010-00  | Bolt, Flange               |